


Air conditioning (manual control),

from September 1998

- 1.9L - Engine - Turbo Diesel Fuel Injection (DFI)/66 kW,
code ALH
- 2.0L - Engine - Motronic Multiport Fuel Injection (MFI)/85 kW,
code AEG


Deviate relay location and fuse placements as well as the locations of multiple connectors see section "component locations".

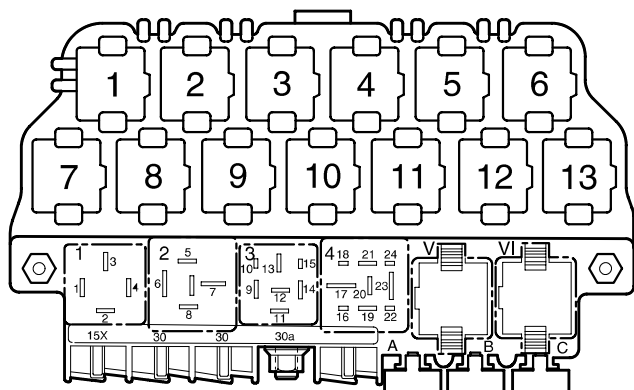


97-14163

Fuse colors

30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red
7,5 A - brown
5 A - beige
3 A - violet

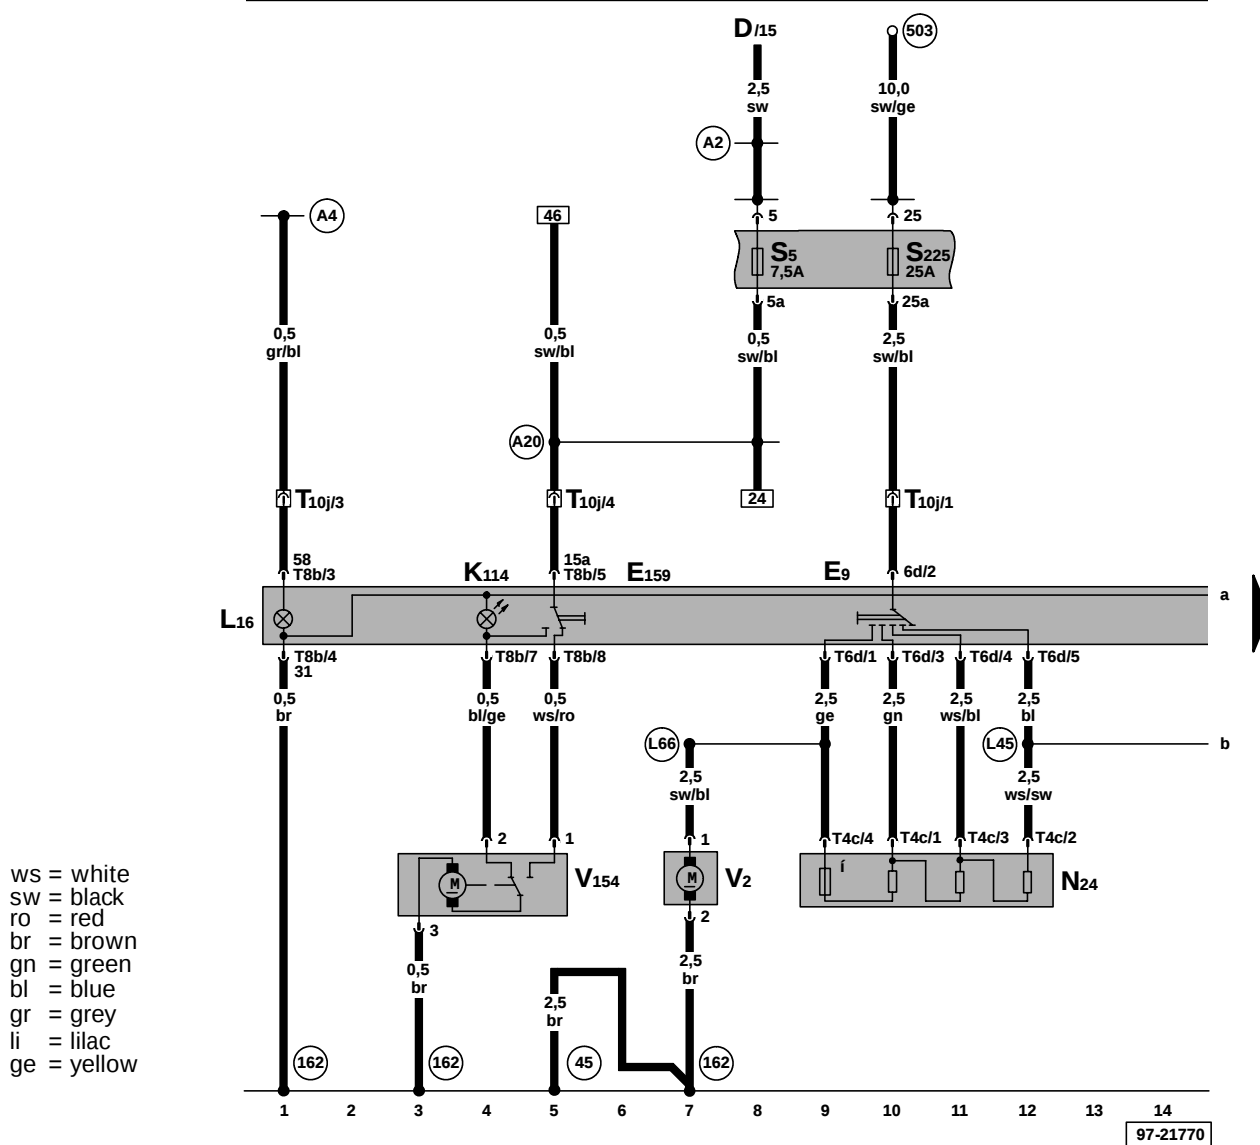


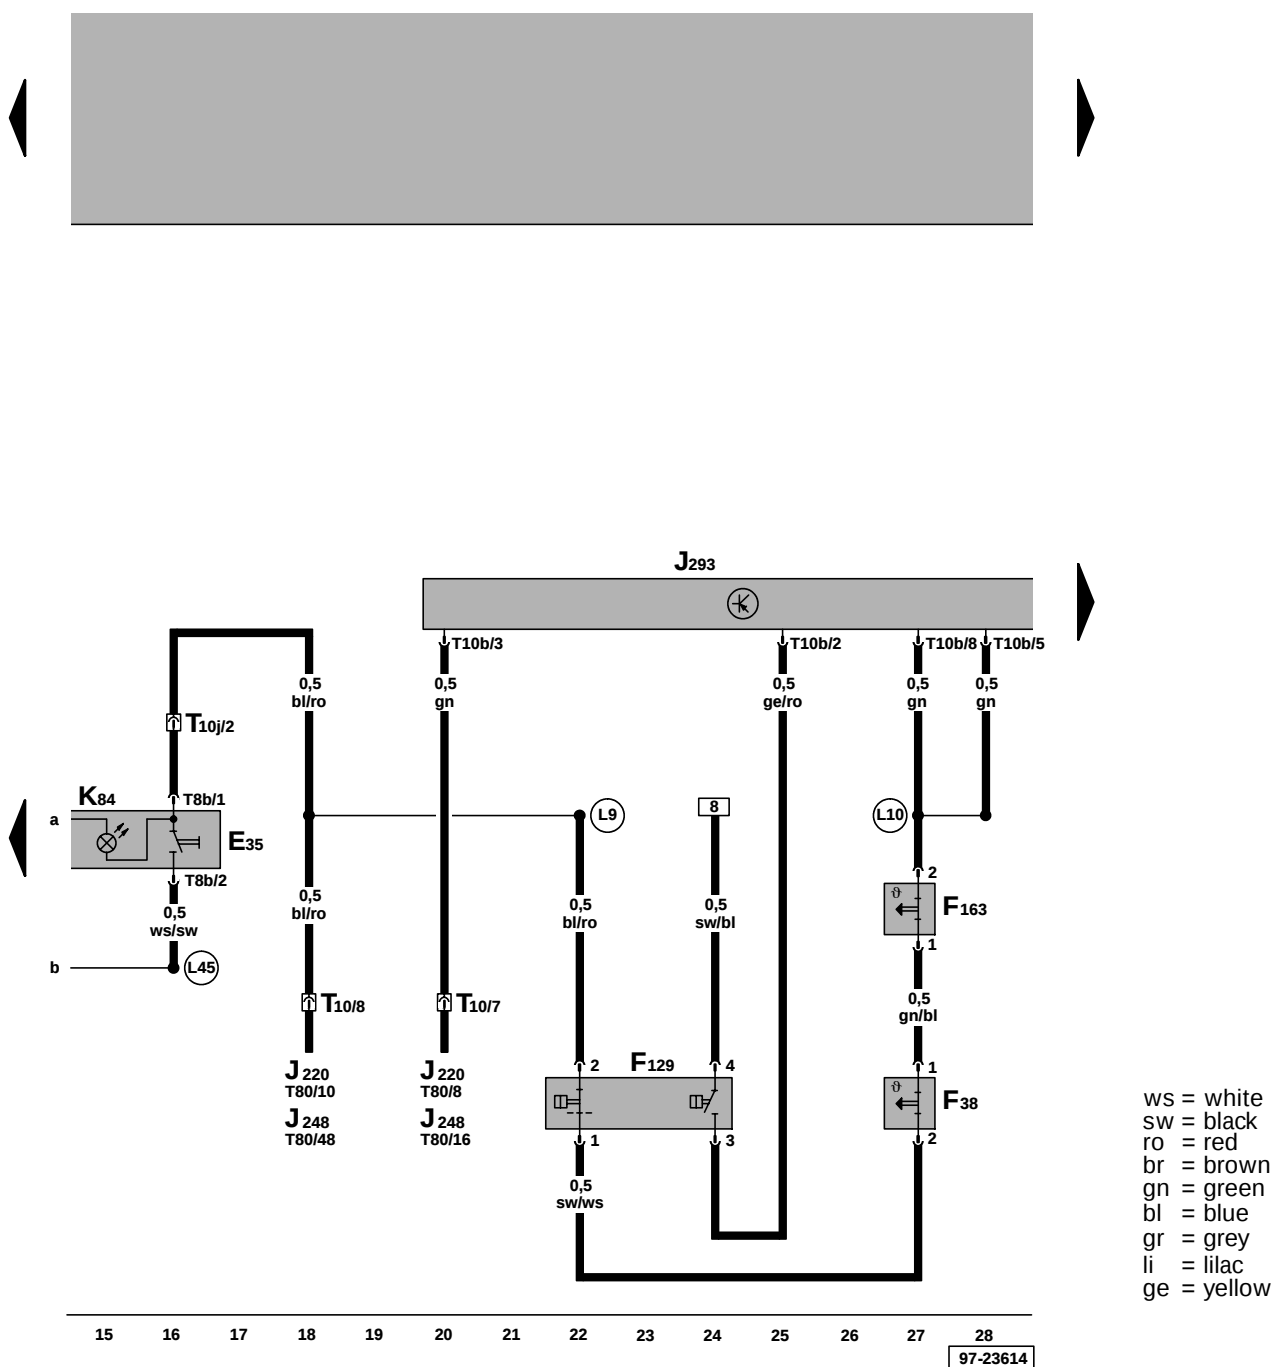

E35 - A/C Switch
F38 - Ambient Temperature Switch
F129 - A/C Pressure Switch
F163 - A/C Cut-Out Thermal Switch
J220 - Motronic Engine Control Module (ECM), in plenum chamber, center
J248 - Diesel Direct Fuel Injection (DFI) Engine Control Module (ECM), in plenum chamber, center
J293 - Coolant Fan Control (FC) Control Module, in engine compartment, left
K84 - A/C Indicator Light
T8b - 8-Pin Connector
T10 - 10-Pin Connector, orange, in protective housing for connectors, in plenum chamber, left
T10b - 10-Pin Connector

T10j - 10-Pin Connector, behind instrument panel, center
T80 - Connector, 80 point
(L9) - Wire connection -1-, in A/C wiring harness
(L10) - Wire connection -2-, in A/C wiring harness
(L45) - Wire connection, in A/C system wiring harness


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow

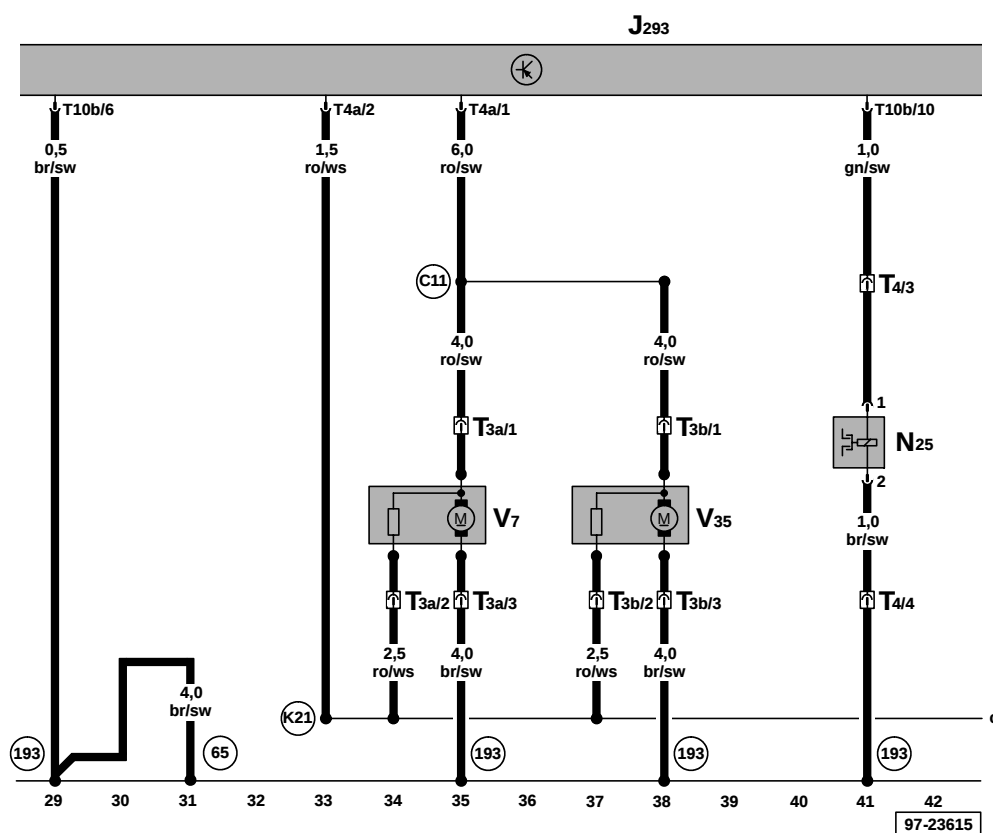

J293 - Coolant Fan Control (FC) Control Module, in engine compartment, left
 N25 - A/C Clutch
 T3a - 3-Pin Connector, in engine compartment, left
 T3b - 3-Pin Connector, in engine compartment, left
 T4 - 4-Pin Connector, near starter
 T4a - 4-Pin Connector
 T10b - 10-Pin Connector
 V7 - Left Coolant Fan
 V35 - Right Coolant Fan

(C11) - Wire connection, in coolant fan wiring harness
 (K21) - Wire connection -1-, in coolant fan wiring harness

(65) - Ground connection, on chassis side member, front left
 (193) - Ground connection -1-, in coolant fan wiring harness

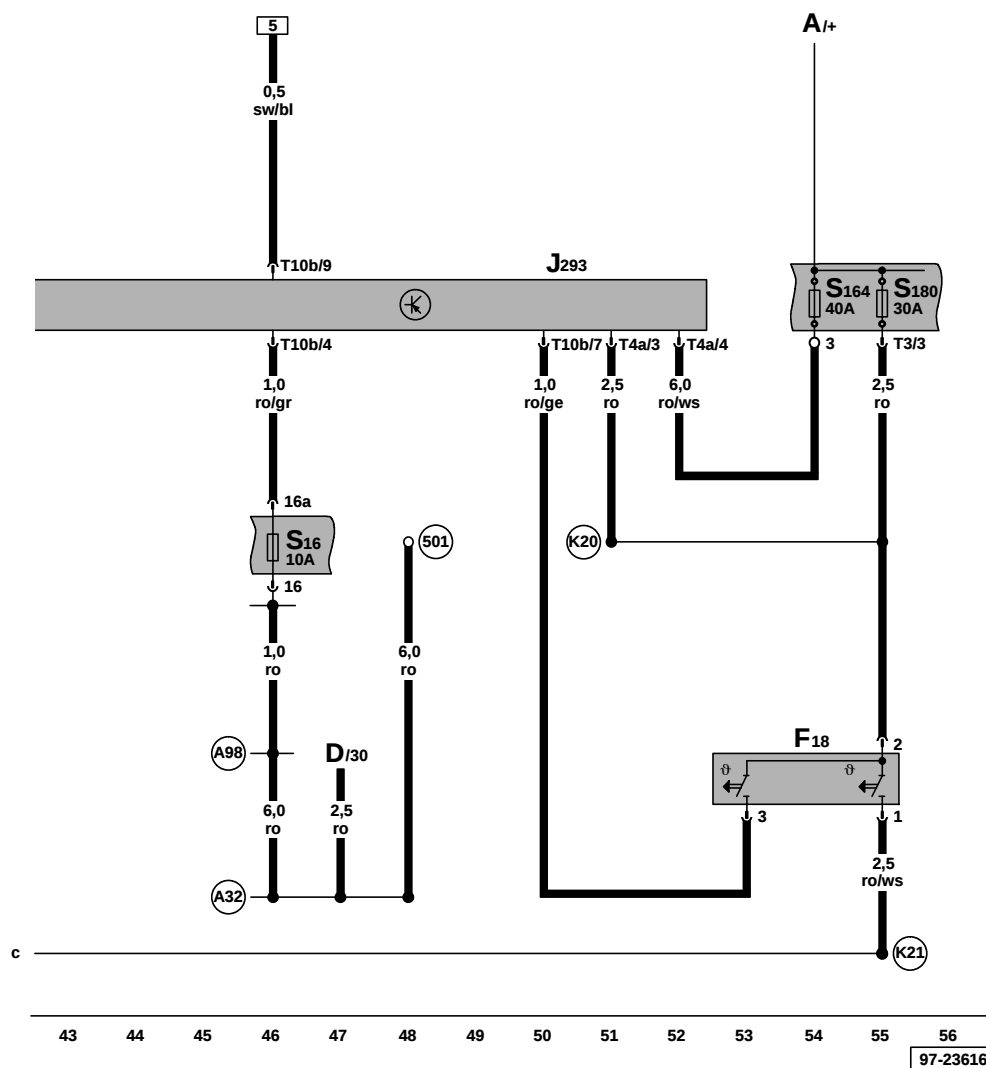

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow

- A - Battery
- D - Ignition/Starter Switch
- F18 - Coolant Fan Control (FC) Thermal Switch
- J293 - Coolant Fan Control (FC) Control Module, in engine compartment, left
- S16 - Fuse 16 in fuse holder
- S164 - Fuse -3- (30) in fuse bracket/battery
- S180 - Fuse -8- (30) in fuse bracket/battery
- T3 - 3-Pin Connector
- T4a - 4-Pin Connector
- T10b - 10-Pin Connector

- (501) - Threaded connection -2- (30) on the relay plate
- (A32) - Plus connection (30), in instrument panel wiring harness

- (A98) - Plus connector -4- (30), in instrument panel wiring harness
- (K20) - Plus connection -1- (30), in coolant fan wiring harness
- (K21) - Wire connection -1-, in coolant fan wiring harness