


Cruise control,

from September 1998

- 2.0L - Engine - Motronic Multiport Fuel Injection (MFI)/85 kW, code AEG

Deviate relay location and fuse placements as well as the locations of multiple connectors see section "component locations".

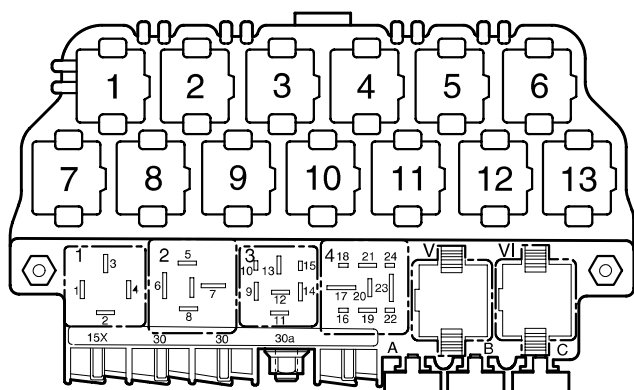

97-14163

Relay location on the thirteenfold auxiliary relay panel, above relay panel:


Relay panel:

2 Load Reduction Relay (100)

Note: Number in parentheses indicates production control number stamped on relay housing.


Fuse colors

30 A - green
 25 A - white
 20 A - yellow
 15 A - blue
 10 A - red
 7,5 A - brown
 5 A - beige
 3 A - violet

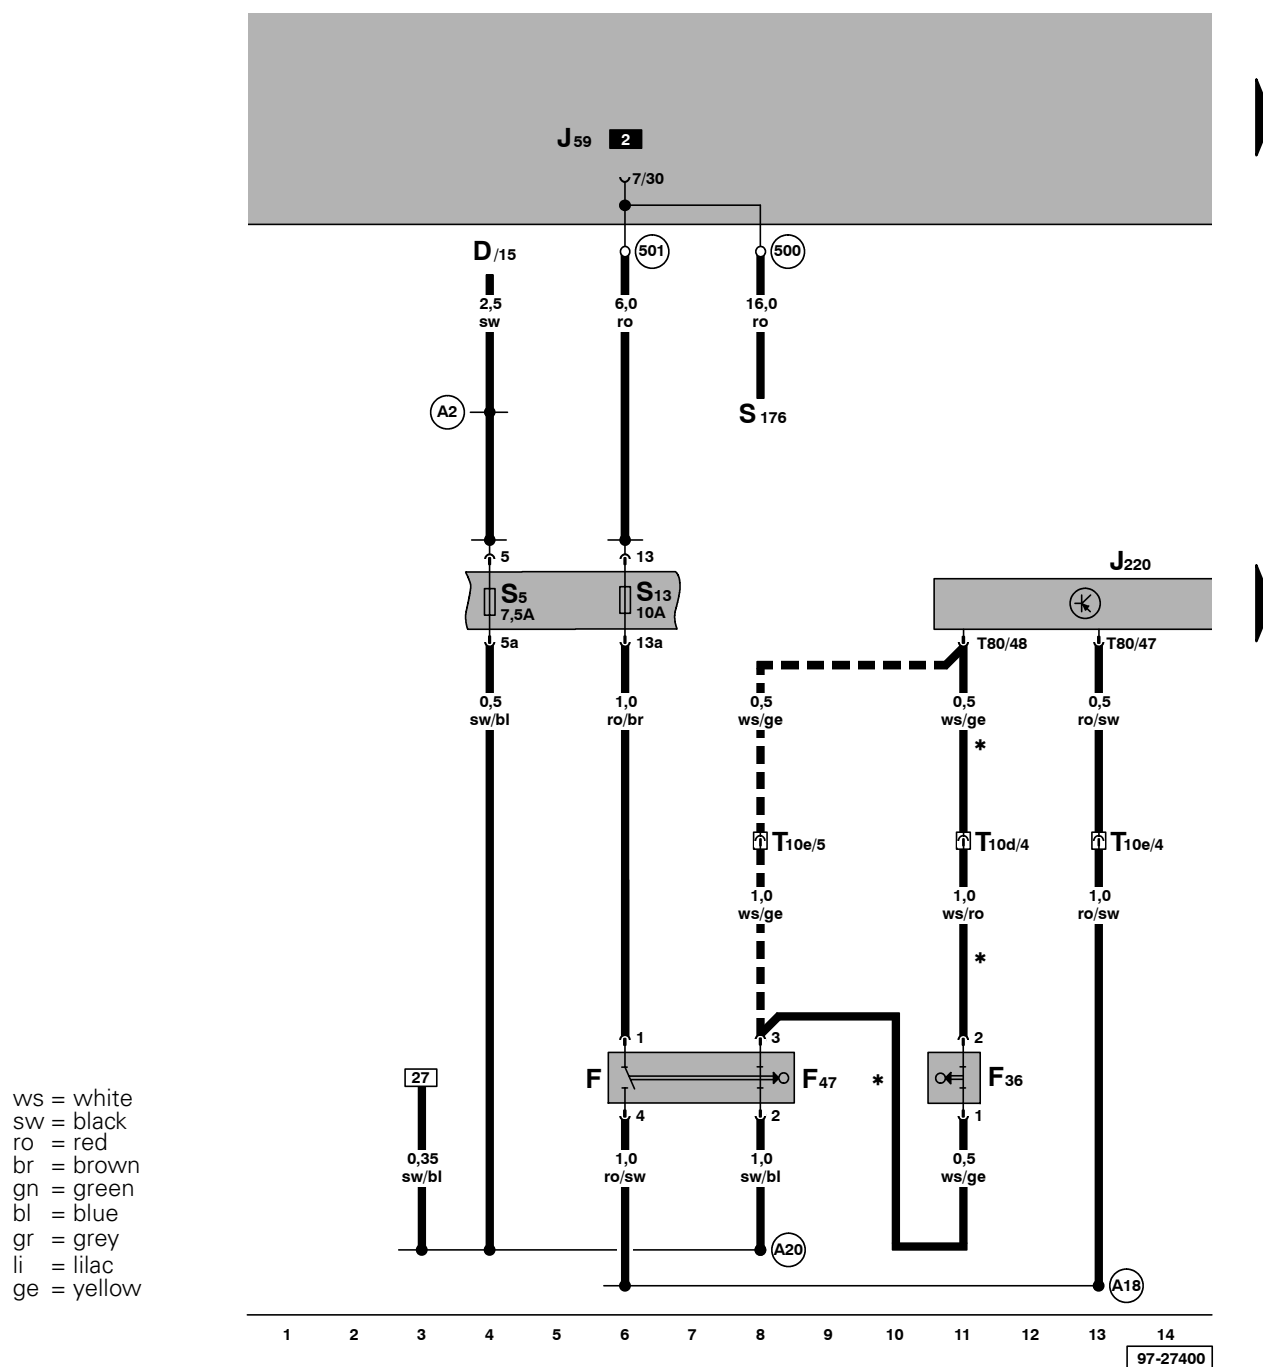

- D - Ignition/Starter Switch
F - Brake Light Switch
F36 - Clutch Vacuum Vent Valve Switch
F47 - Brake Vacuum Vent Valve Switch for cruise control
J59 - Load Reduction Relay
J220 - Motronic Engine Control Module (ECM), in plenum chamber, center
S5 - Fuse 5 in fuse holder
S13 - Fuse 13 in fuse holder
S176 - Fuse -4- (30) in fuse bracket/battery
T10d - 10-Pin Connector, green, in protective housing for connectors, in plenum chamber, left
T10e - 10-Pin Connector, black, in protective housing for connectors, in plenum chamber, left
T80 - 80-Pin Connector

- (500) - Threaded connection -1- (30) on the relay plate
(501) - Threaded connection -2- (30) on the relay plate
(A2) - Plus connection (15), in instrument panel wiring harness
(A18) - Wire connection (54), in instrument panel wiring harness
(A20) - Wire connection (15a), in instrument panel wiring harness
* - Manual transmission only
--- Automatic transmission only

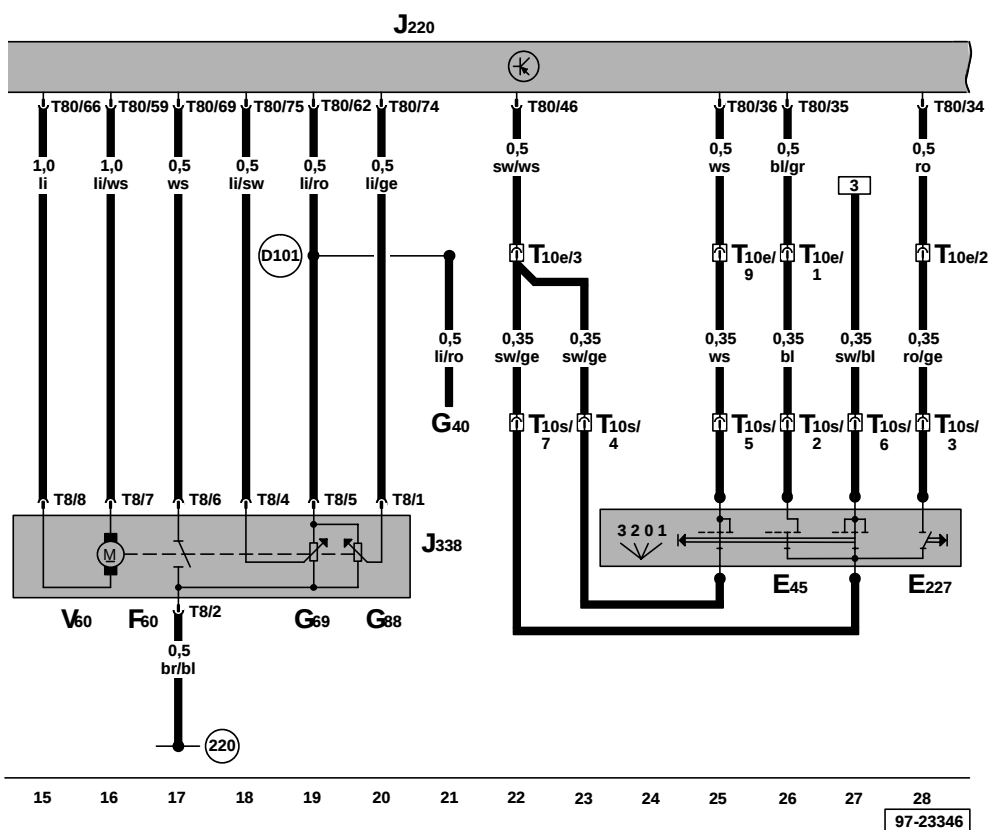

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow

- E45 - Cruise Control Switch
 E227 - Cruise Control Push Button (SET)
 F60 - Closed Throttle Position (CTP) Switch
 G40 - Camshaft Position (CMP) Sensor
 G69 - Throttle Position (TP) Sensor
 G88 - Throttle Position (TP) Sensor
 J220 - Motronic Engine Control Module (ECM), in plenum chamber, center
 J338 - Throttle Valve Control Module
 T8 - 8-Pin Connector
 T10e - 10-Pin Connector, black, in protective housing for connectors, in plenum chamber, left
 T10s - 10-Pin Connector, near steering column
 T80 - 80-Pin Connector
 V60 - Throttle Position (TP) Actuator

- (220) - Ground connection (sensor ground), in engine compartment wiring harness
 (D101) - Wire connection -1-, in engine compartment wiring harness