





- A - Battery
- F18 - Coolant Fan Control (FC) Thermal Switch
- S180 - Fuse -8- (30) in fuse bracket/battery
- T3 - 3-Pin Connector
- T3a - 3-Pin Connector, in engine compartment, left front
- V7 - Coolant Fan
- 12 - Ground connection, in engine compartment, left