


Daytime running lights,

from September 1998

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

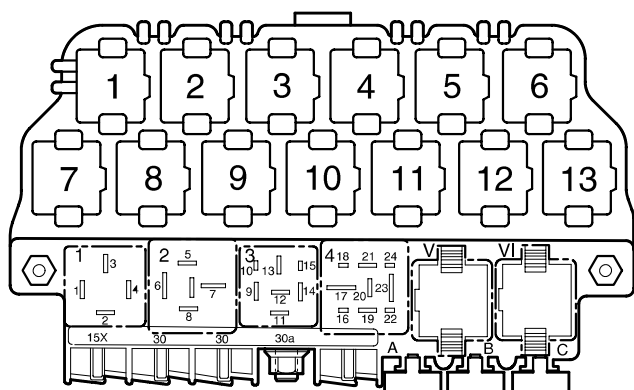

97-14163

Relay location on the thirteenfold auxiliary relay panel, above relay panel:


- 7** Daytime Running Lights Change-over Relay (173), from April 1999
- 8** Daytime Running Lights Change-over Relay (173), through March 1999

Relay panel:

Note: Number in parentheses indicates production control number stamped on relay housing.

Fuse colors


- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige
- 3 A - violet

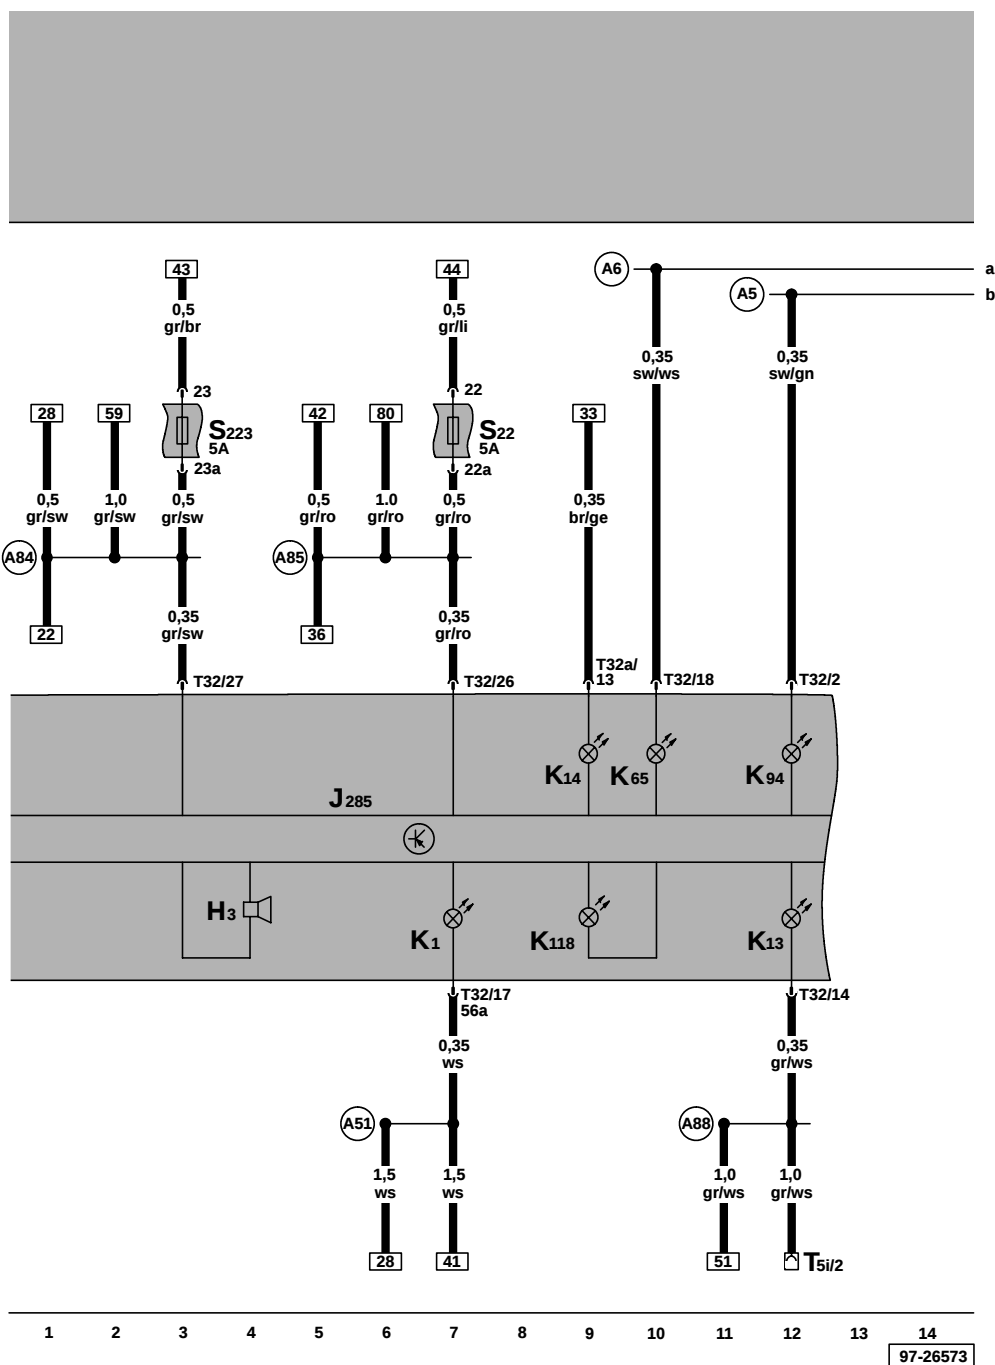

- H3 - Warning buzzer
J285 - Control module with indicator unit in instrument panel insert
K1 - Headlight High Beam Indicator Light
K13 - Rear Fog Light Indicator Light
K14 - Parking Brake Indicator Light
K65 - Left Turn Signal Indicator Light
K94 - Right Turn Signal Indicator Light
K118 - Warning light for brake system
S22 - Fuse 22 in fuse holder
S223 - Fuse 23 in fuse holder
T5i - 5-Pin Connector, near left A-pillar, lower part, in harness
T32 - 32-Pin Connector, blue
T32a - 32-Pin Connector, green

- A5 - Plus connection (right turn signal), in instrument panel wiring harness
A6 - Plus connection (left turn signal), in instrument panel wiring harness
A51 - Wire connection (56), in instrument panel wiring harness
A84 - Connector (58L) in instrument panel wiring harness
A85 - Connector (58R) in instrument panel wiring harness
A88 - Connector fog light, in instrument panel wiring harness




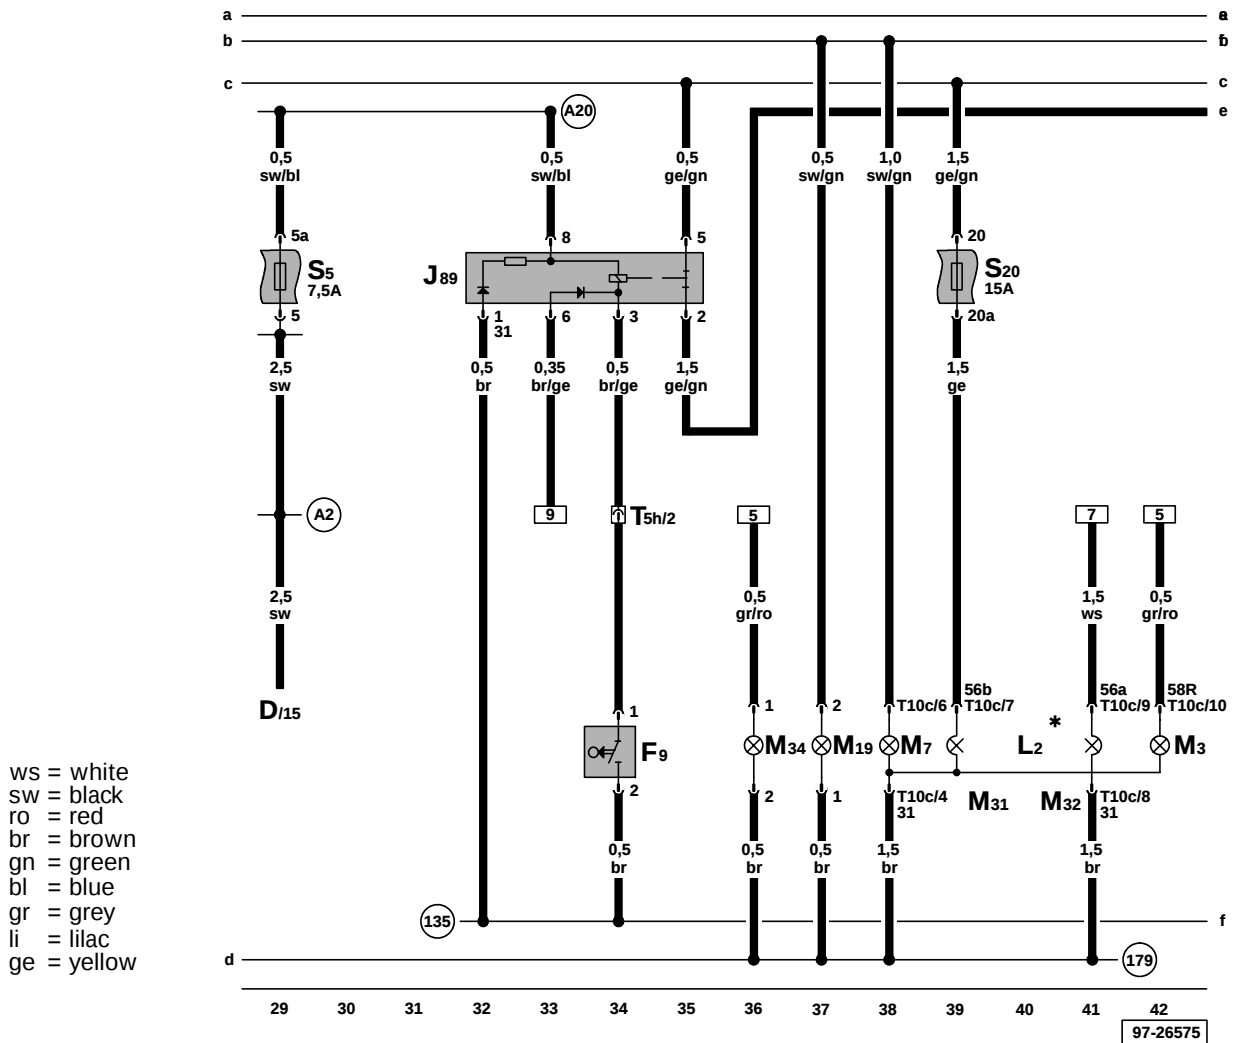

- D - Ignition/Starter Switch
- F9 - Parking Brake Warning Light Switch
- J89 - Daytime Running Lights Change-over Relay, on the thirteenfold auxiliary relay panel, above relay panel
- L2 - Right Headlight*
- M3 - Right Parking Light
- M7 - Right Front Turn Signal Light
- M19 - Right, Side Turn Signal Light
- M31 - Right Low Beam Headlight (Golf only)
- M32 - Right High Beam Headlight (Golf only)
- M34 - Light for side marker front right
- S5 - Fuse 5 in fuse holder
- S20 - Fuse 20 in fuse holder
- T5h - 5-Pin Connector, near left A-pillar, lower part, in harness

- T10c - 10-Pin Connector

- (135) - Ground connection -2-, in instrument panel wiring harness
- (179) - Ground connection, in left headlight wiring harness
- (A2) - Plus connection (15), in instrument panel wiring harness
- (A20) - Wire connection (15a), in instrument panel wiring harness
- * - Jetta only

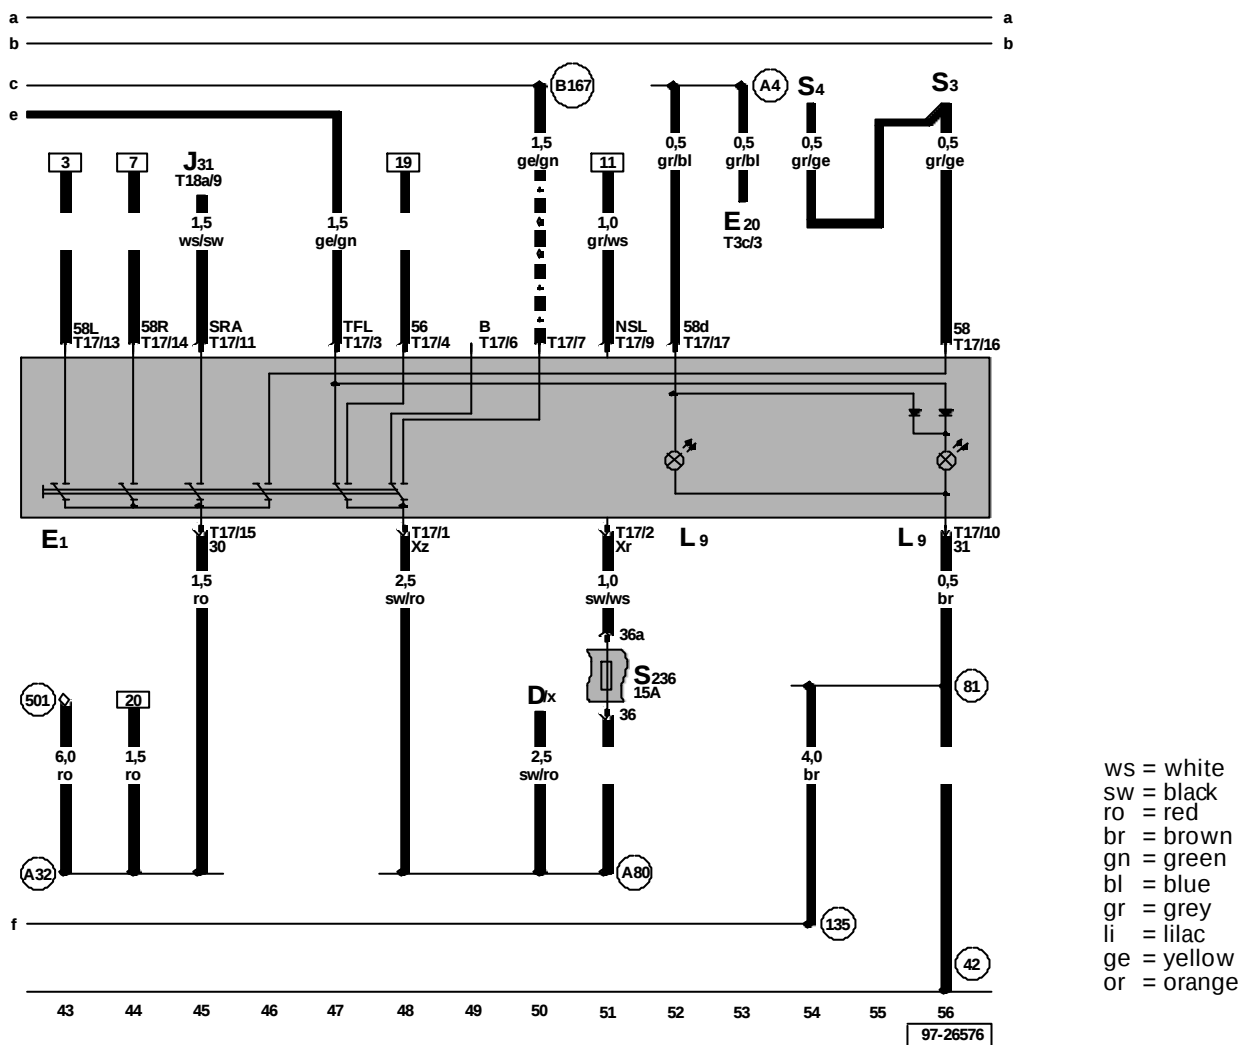


- D - Ignition/Starter Switch
- E1 - Light switch
- E20 - Instrument Panel Light Dimmer Switch
- J31 - Wiper/Washer Intermittent Relay
- L9 - Headlight Switch Light
- S3 - Fuse 3 in fuse holder
- S4 - Fuse 4 in fuse holder
- S236 - Fuse 36 in fuse holder
- T3c - 3-Pin Connector
- T17 - 17-Pin Connector
- T18a - 18-Pin Connector

- (42) - Ground connection, beside steering column
- (81) - Ground connection -1-, in instrument panel wiring harness


- (135) - Ground connection -2-, in instrument panel wiring harness
- (501) - Threaded connection -2- (30) on the relay plate
- (A4) - Plus connection (58b), in instrument panel wiring harness
- (A32) - Plus connection (30), in instrument panel wiring harness
- (A80) - Connector -1- (X) in instrument panel wiring harness
- (B167) - Connection (56b) in passenger compartment wiring harness

--- Golf only

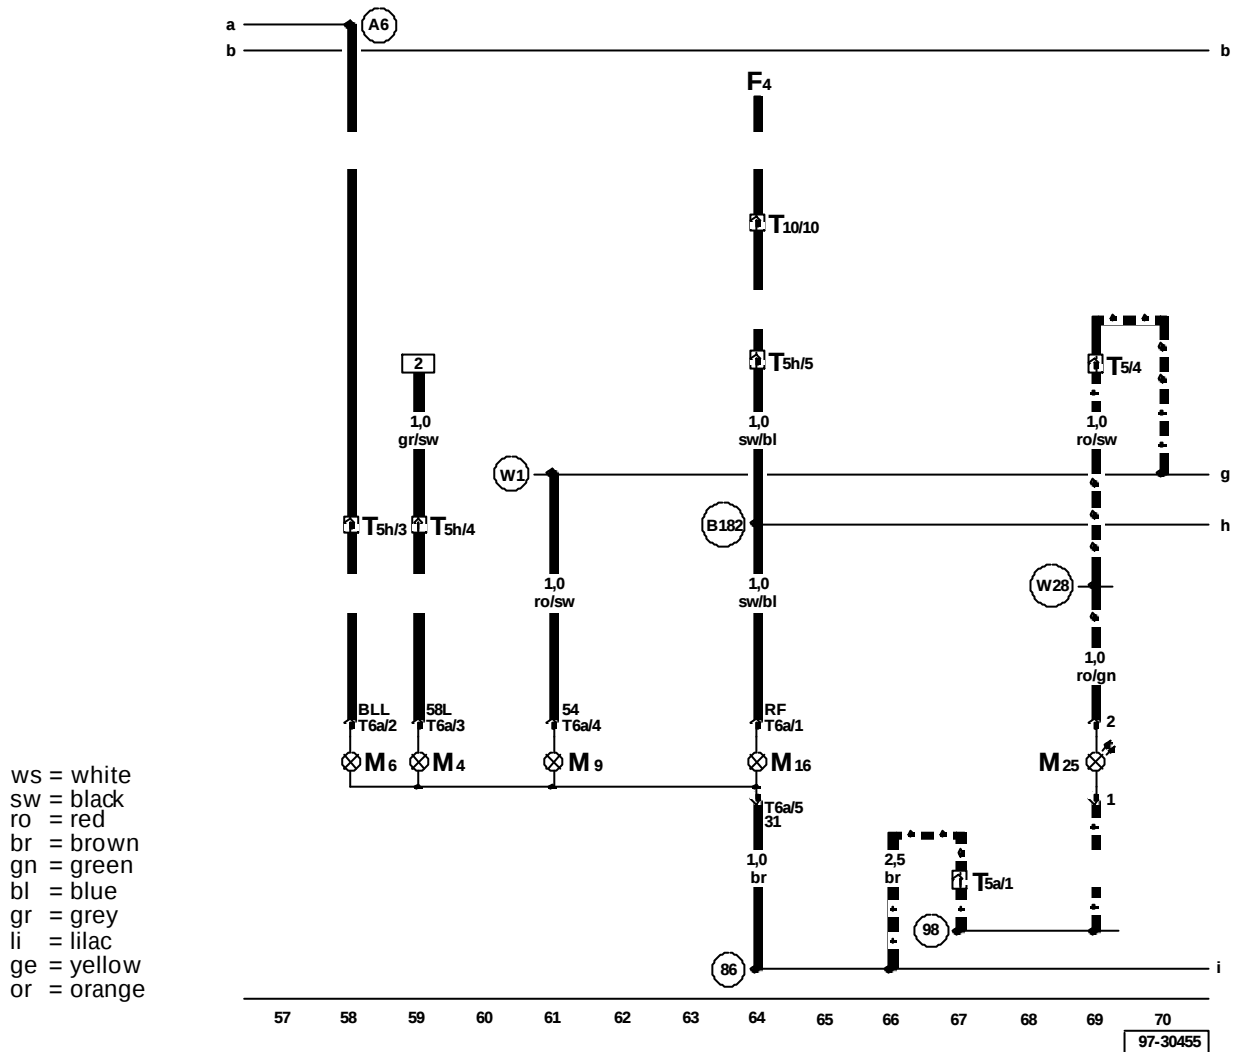

- F4 - Back-Up Light Switch
- M4 - Left Tail Light
- M6 - Left Rear Turn Signal Light
- M9 - Left Brake Light
- M16 - Left Back-Up Light
- M25 - High-mount Brake Light (32 light emitting diodes)
- T5 - 5-Pin Connector, black, connector station C-pillar, left
- T5a - 5-Pin Connector, lilac, connector station C-pillar, left (Golf only)
- T5h - 5-Pin Connector, near left A-pillar, lower part, in harness
- T6a - 6-Pin Connector
- T10 - 10-Pin Connector, orange, in protective housing for connectors, in plenum chamber, left

-  - Ground connection -1-, in rear wiring harness
 -  - Ground connection, in rear lid wiring harness
 -  - Plus connection (left turn signal), in instrument panel wiring harness
 -  - Connection (RF), in passenger compartment wiring harness
 -  - Plus connection (54), in rear wiring harness
 -  - Plus connector -2- (54), in wiring harness taillight assembly
-  Golf only

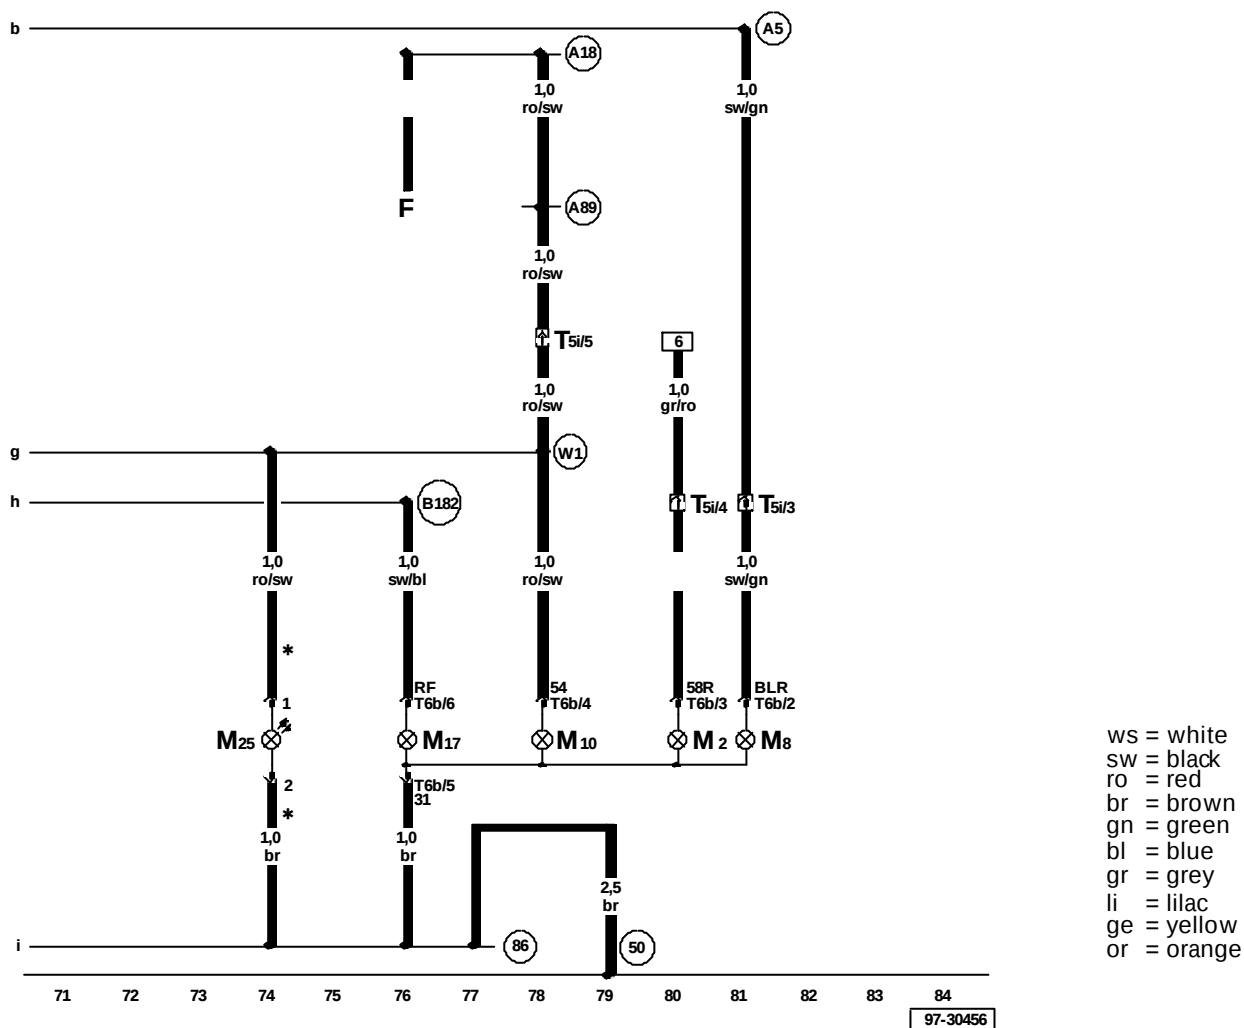

- F - Brake Light Switch
- M2 - Right Tail Light
- M8 - Right Rear Turn Signal Light
- M10 - Right Brake Light
- M17 - Right Back-Up Light
- M25 - High-mount Brake Light (18 light emitting diodes)*
- T5i - 5-Pin Connector, near left A-pillar, lower part, in harness
- T6b - 6-Pin Connector
- (50) - Ground connection, in luggage compartment, left
- (86) - Ground connection -1-, in rear wiring harness

- (A5) - Plus connection (right turn signal), in instrument panel wiring harness
- (A18) - Wire connection (54), in instrument panel wiring harness
- (A89) - Connector (54), in instrument panel wiring harness
- (B182) - Connection (RF), in passenger compartment wiring harness
- (W1) - Plus connection (54), in rear wiring harness
- * - Jetta only