


Fog lights,

from September 1998

Deviate relay location and fuse placements as well as the locations of multiple connectors see section "component locations".

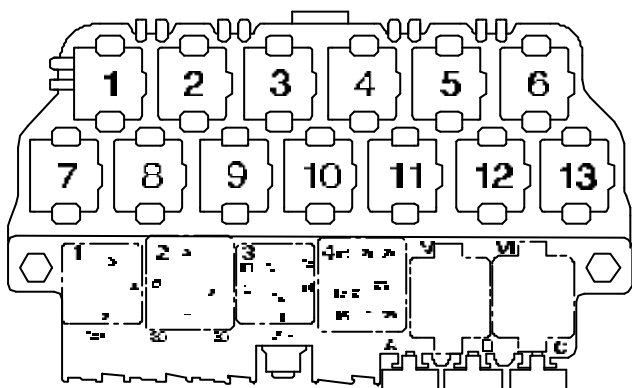

97-14163

Relay location on the thirteenfold auxiliary relay panel, above relay panel:


4 Fog Light Relay (53)

Relay panel:

Note: Number in parentheses indicates production control number stamped on relay housing.

Fuse colors

30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red
7,5 A - brown
5 A - beige
3 A - violet

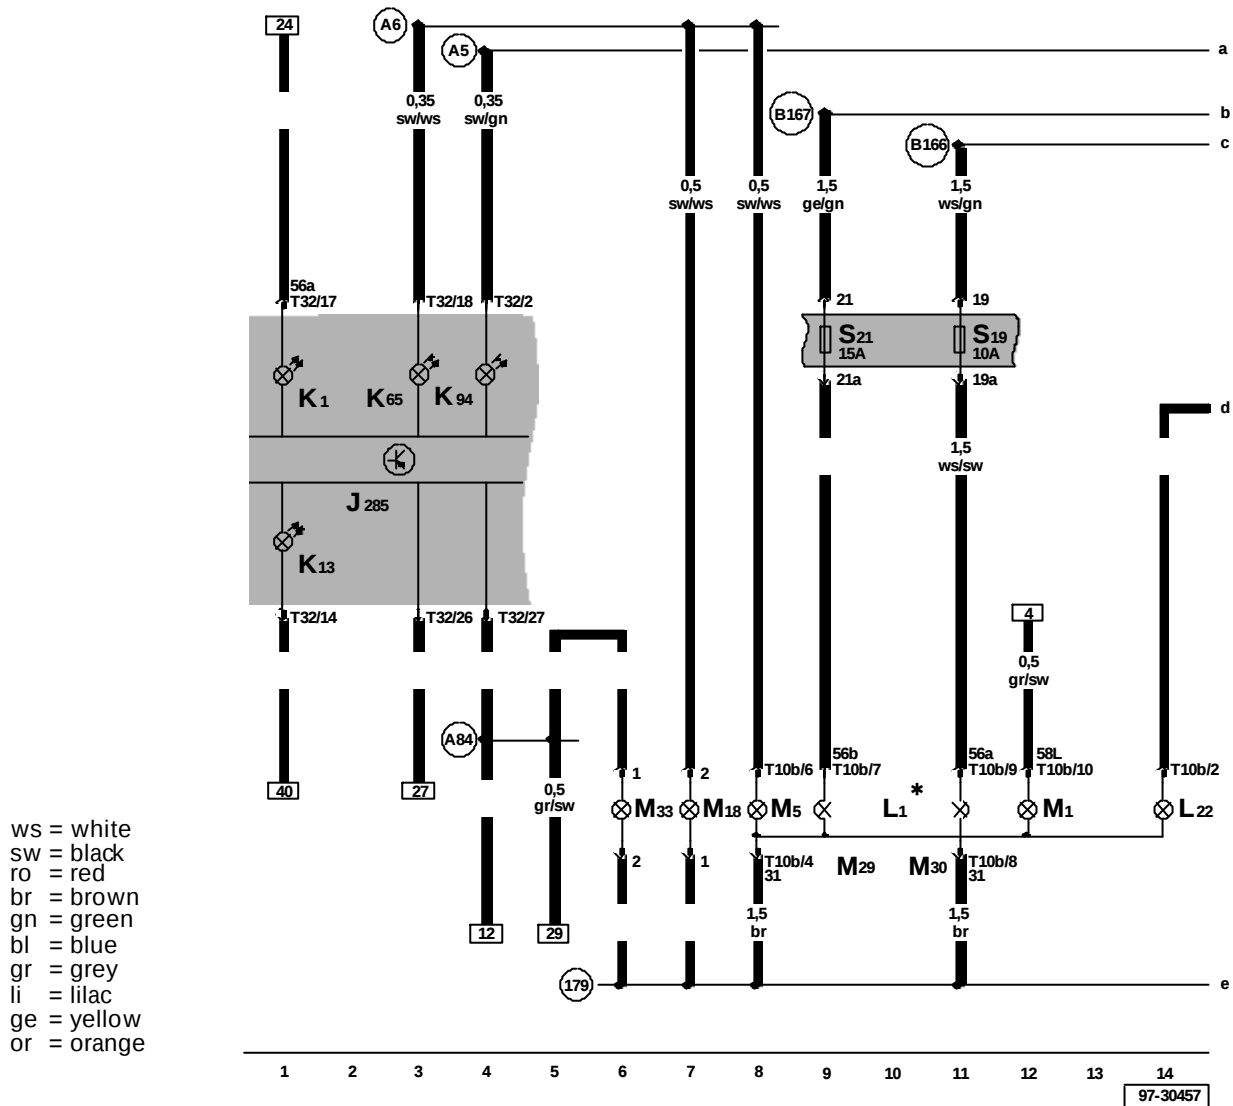

J285 - Control module with indicator unit in instrument panel insert

K1 - Headlight High Beam Indicator Light

K13 - Rear Fog Light Indicator Light

K65 - Left Turn Signal Indicator Light

K94 - Right Turn Signal Indicator Light

L1 - Left Headlight*

L22 - Left Front Fog Light

M1 - Left Parking Light

M5 - Left Front Turn Signal Light

M18 - Left, Side Turn Signal Light

M29 - Left Low Beam Headlight (Golf only)

M30 - Left High Beam Headlight (Golf only)

M33 - Light for side marker front left

S19 - Fuse 19 in fuse holder

S21 - Fuse 21 in fuse holder

T10b - 10-Pin Connector

T32 - 32-Pin Connector, blue

(179) - Ground connection, in left headlight wiring harness

(A5) - Plus connection (right turn signal), in instrument panel wiring harness


(A6) - Plus connection (left turn signal), in instrument panel wiring harness

(A84) - Connector (58L), in instrument panel wiring harness

(B166) - Connection (56a), in passenger compartment wiring harness

(B167) - Connection (56b), in passenger compartment wiring harness


* - Jetta only

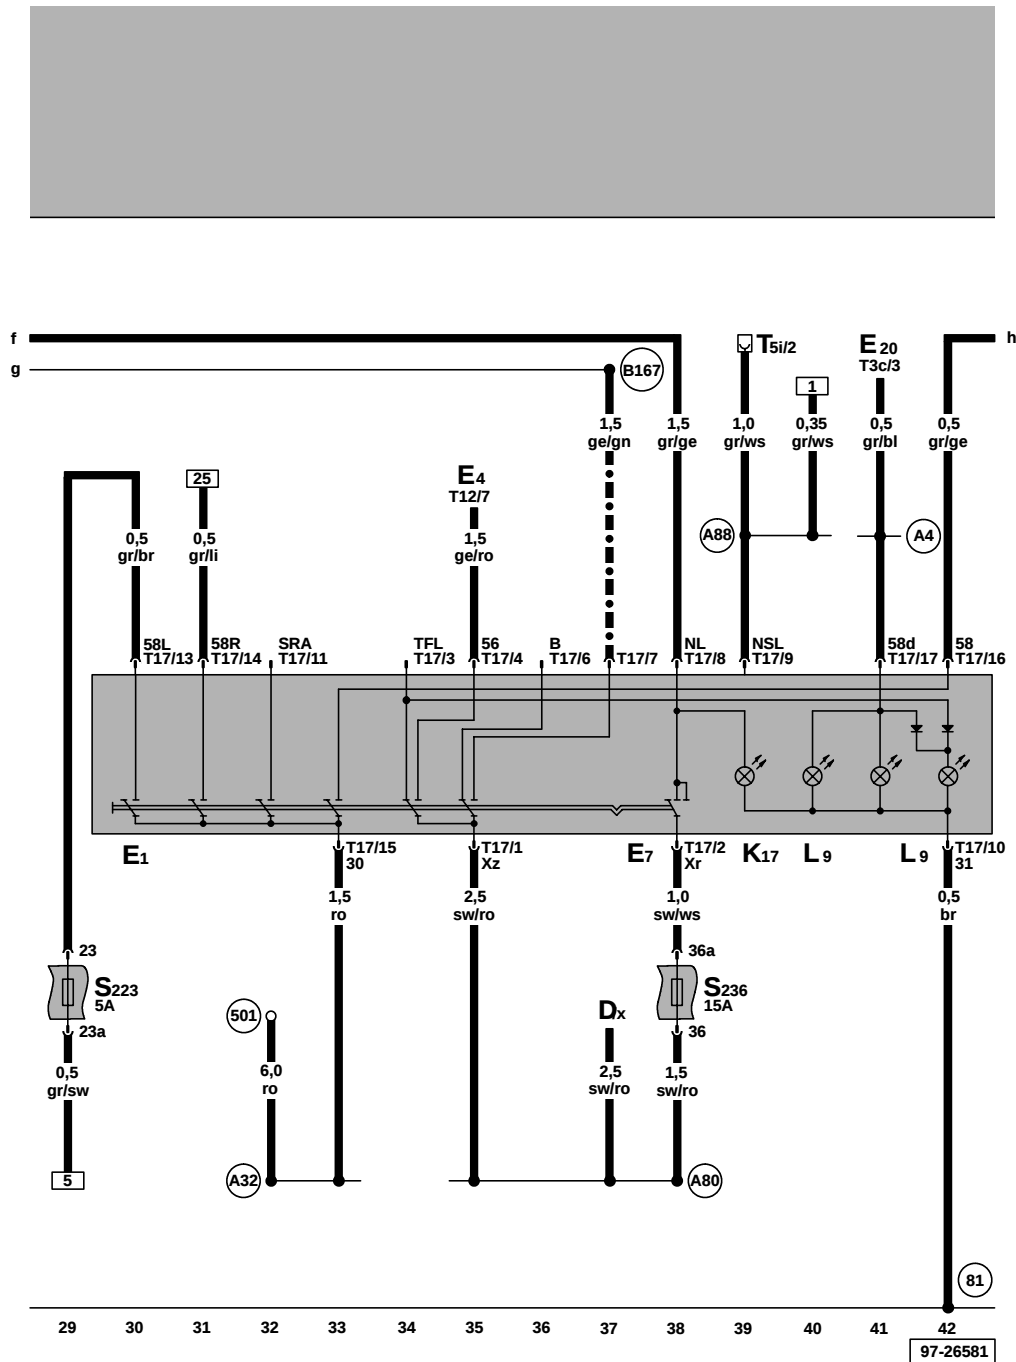

- D - Ignition/Starter Switch
- E1 - Light switch
- E4 - Headlight Dimmer/Flasher Switch
- E7 - Fog Light Switch
- E20 - Instrument Panel Light Dimmer Switch
- K17 - Fog Light Indicator Light
- L9 - Headlight Switch Light
- S223 - Fuse 23 in fuse holder
- S236 - Fuse 36 in fuse holder
- T3c - 3-Pin Connector
- T5i - 5-Pin Connector, near left A-pillar, lower part, in harness
- T12 - 12-Pin Connector
- T17 - 17-Pin Connector

- (81) - Ground connection -1-, in instrument panel wiring harness
- (501) - Threaded connection -2- (30) on the relay plate
- (A4) - Plus connection (58b), in instrument panel wiring harness
- (A32) - Plus connection (30), in instrument panel wiring harness
- (A80) - Connector -1- (X) in instrument panel wiring harness
- (A88) - Connector fog light, in instrument panel wiring harness
- (B167) - Connection (56b), in passenger compartment wiring harness

--- Golf only

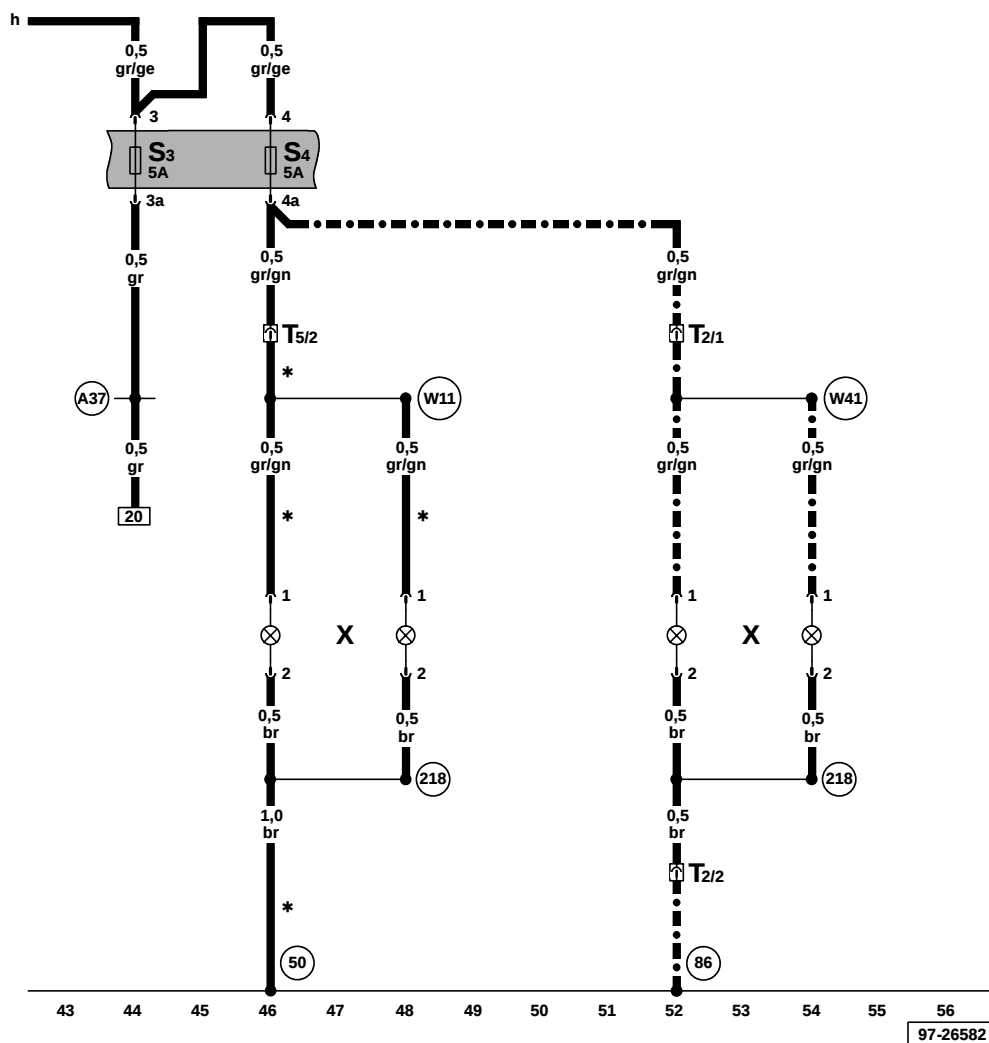

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow

- S3 - Fuse 3 in fuse holder
- S4 - Fuse 4 in fuse holder
- T2 - Double Connector, in luggage compartment, left (Golf only)
- T5 - 5-Pin Connector, black, connector station C-pillar, left
- X - License Plate Light

- (W11) - Wire connection (58), in rear lid wiring harness
- (W41) - Plus connection (58), in wiring harness
- * - Jetta only
- - - - - Golf only

- (50) - Ground connection, in luggage compartment, left
- (86) - Ground connection -1-, in rear wiring harness
- (218) - Ground connection -1-, in rear lid wiring harness
- (A37) - Wire connection (58a), in instrument panel wiring harness