


Washer nozzle heaters,

from September 1998

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

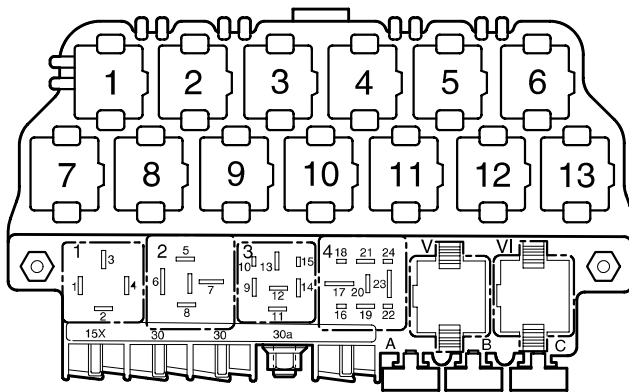

97-14163

Relay location on the thirteenfold auxiliary relay panel, above relay panel:


Relay panel:

2 Load Reduction Relay (18)

Note: Number in parentheses indicates production control number stamped on relay housing.

Fuse colors

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige
- 3 A - violet

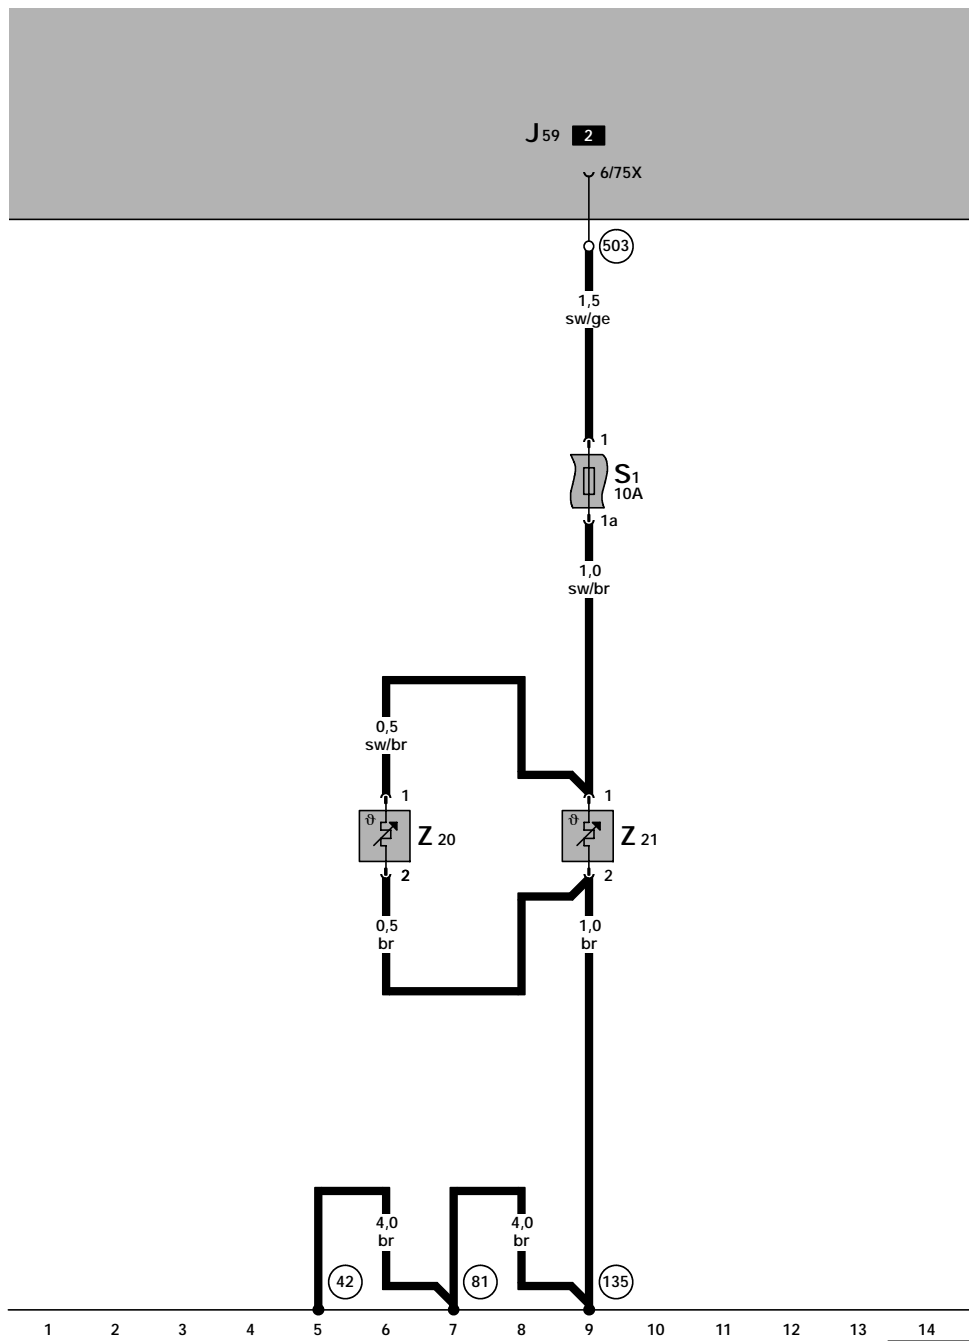

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow

97-23690

- J59 - Load Reduction Relay
- S1 - Fuse 1 in fuse holder
- Z20 - Left Washer Nozzle Heater
- Z21 - Right Washer Nozzle Heater

- (42) - Ground connection, beside steering column
- (81) - Ground connection -1-, in instrument panel wiring harness
- (135) - Ground connection -2-, in instrument panel wiring harness
- (501) - Threaded connection -2- (30) on the relay plate