


Interior rear view mirror (self-dimming), rain-sensor,

from September 1998

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

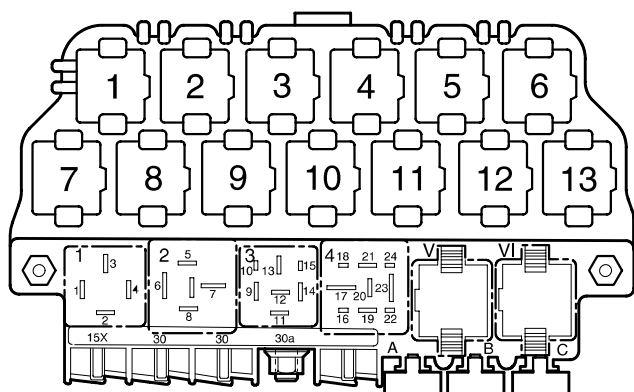

97-14163

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

Relay panel:




Wiper/Washer Intermittent Relay (192)

Note: Number in parentheses indicates production control number stamped on relay housing.


Fuse colors

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige
- 3 A - violet

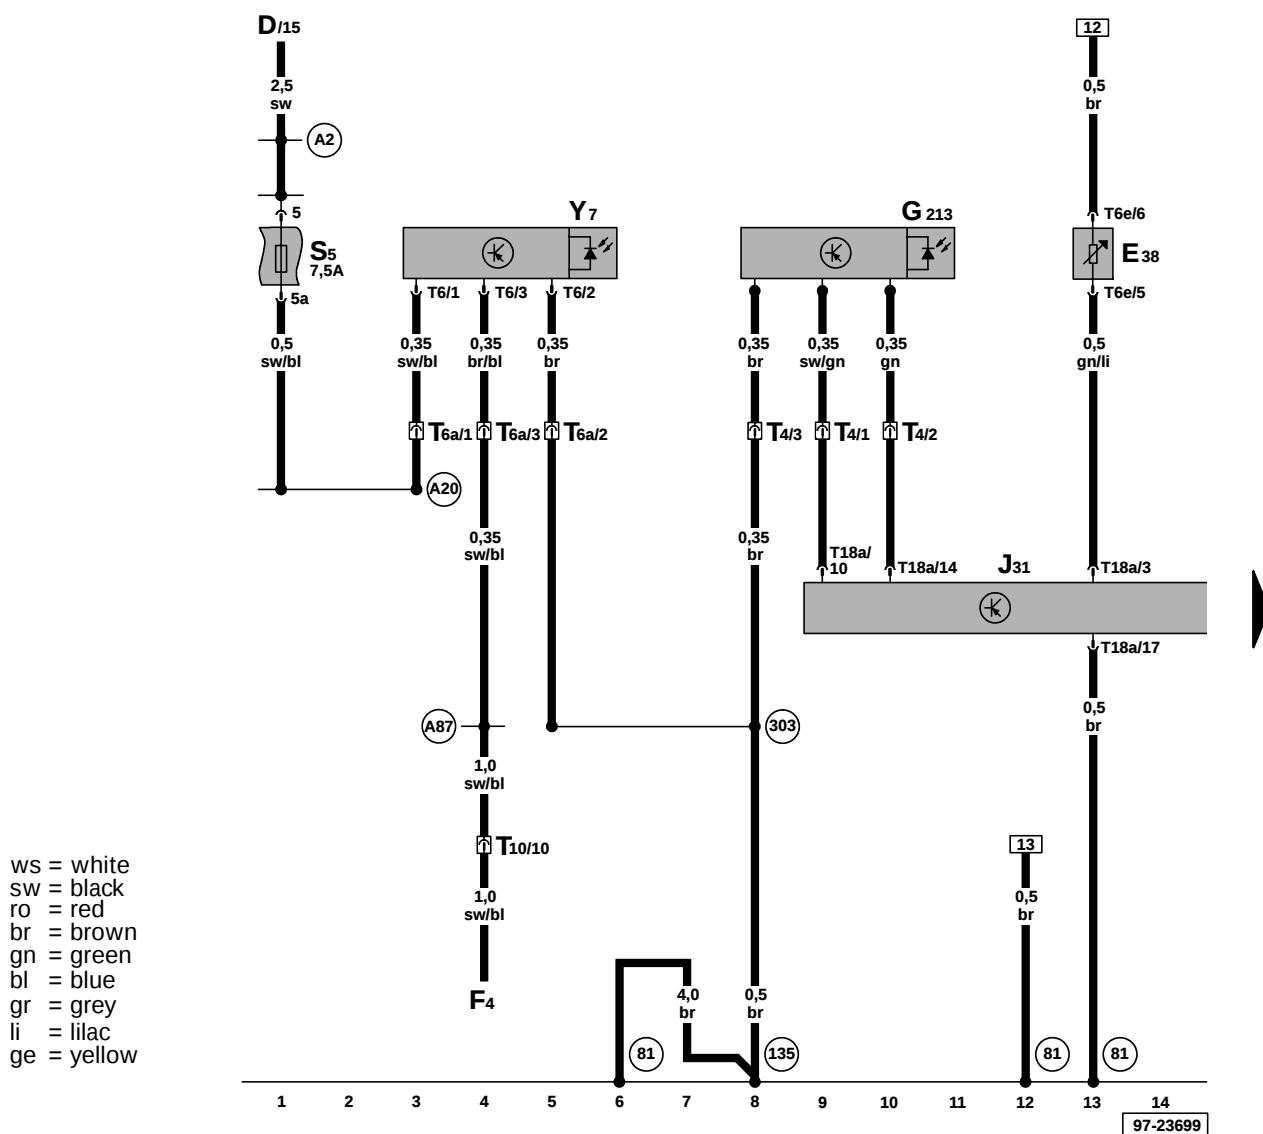

- D - Ignition/Starter Switch
- E38 - Windshield Wiper Intermittent Regulator
- F4 - Back-Up Light Switch
- G213 - Rain-Sensor
- J31 - Wiper/Washer Intermittent Relay, on relais panel
- S5 - Fuse 5 in fuse holder
- T4 - 4-Pin Connector, near front interior light
- T6 - 6-Pin Connector, near front interior light
- T6a - 6-Pin Connector, near front interior light
- T6e - 6-Pin Connector
- T10 - 10-Pin Connector, orange, in protective housing for connectors, in plenum chamber, left
- T18a - 18-Pin Connector
- Y7 - Automatic day/night interior mirror

- (81) - Ground connection -1-, in instrument panel wiring harness
- (135) - Ground connection -2-, in instrument panel wiring harness
- (303) - Ground connection -rain-sensor/mirror-, in wiring harness interior
- (A2) - Plus connection (15), in instrument panel wiring harness
- (A20) - Wire connection (15a), in instrument panel wiring harness
- (A87) - Connector (reverse lamp), in instrument panel wiring harness

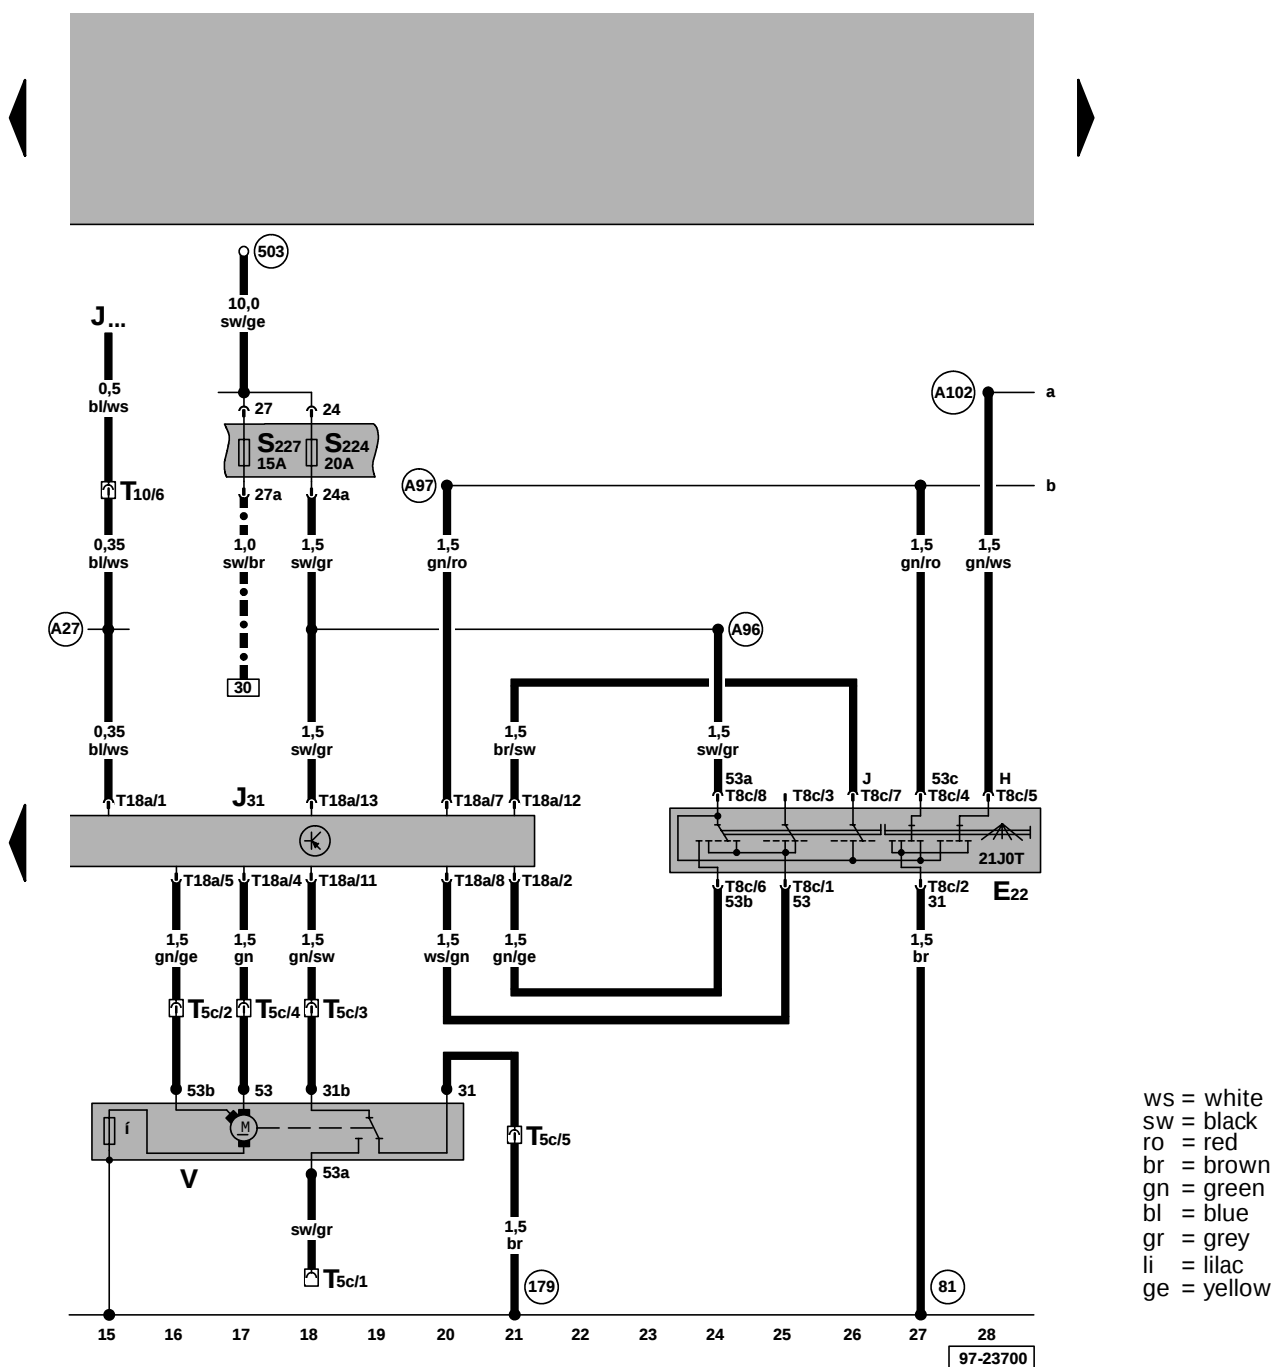


- E22 - Windshield Wiper/Washer Switch
J31 - Wiper/Washer Intermittent Relay, on relais panel
J... - Engine Control Module (ECM)
S224 - Fuse 24 in fuse holder
S227 - Fuse 27 in fuse holder
T5c - 5-Pin Connector, on windshield wiper motor
T8c - 8-Pin Connector
T10 - 10-Pin Connector, orange, in protective housing for connectors, in plenum chamber, left
T18a - 18-Pin Connector
V - Windshield Wiper Motor

- 81 - Ground connection -1-, in instrument panel wiring harness

- 179 - Ground connection, in left headlight wiring harness
503 - Threaded connection -2- (75x) on the relay plate
A27 - Wire Connection (vehicle speed signal), in instrument panel wiring harness
A96 - Connector (53a), in instrument panel wiring harness
A97 - Connector (53), in instrument panel wiring harness
A102 - Connector (windshield wiper), in instrument panel wiring harness

--- Golf only

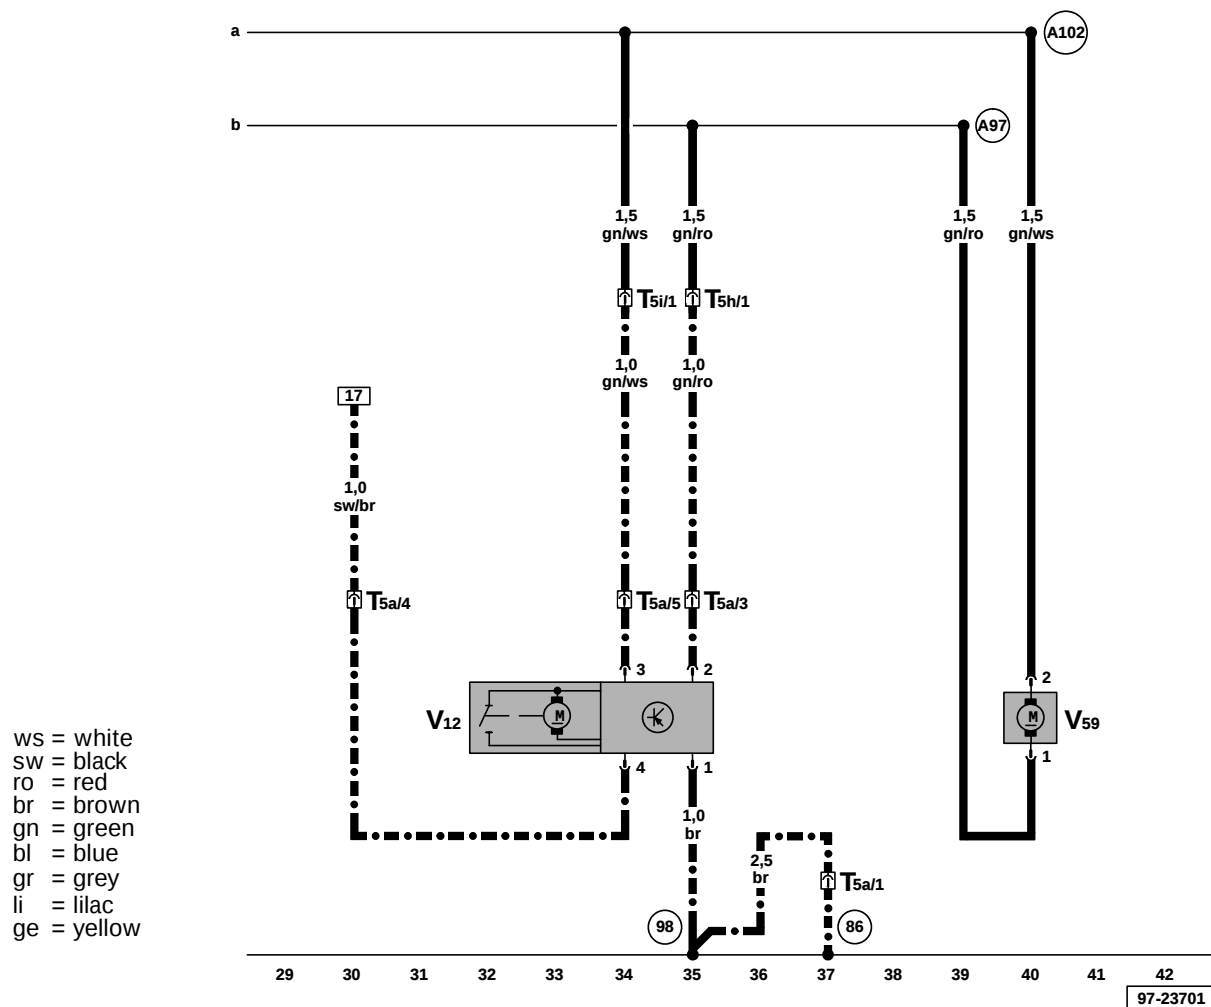

- T5a - 5-Pin Connector, pink, connector station C-pillar, left (Golf only)
- T5h - 5-Pin Connector, near left A-pillar, lower part, in harness
- T5i - 5-Pin Connector, near left A-pillar, lower part, in harness
- V12 - Motor for rear windshield wiper
- V59 - Windshield and Rear Window Washer Pump

A102 - Connector (windshield wiper), in instrument panel wiring harness

--- Golf only

- 86 - Ground connection -1-, in rear wiring harness
- 98 - Ground connection, in rear lid wiring harness
- A97 - Connector (53), in instrument panel wiring harness