


## Radio system (with CD changer wiring preparation)

from September 1998


Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

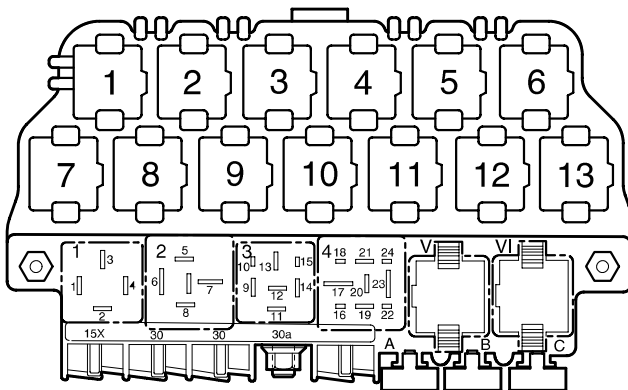

97-14163


### Fuse colors

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige
- 3 A - violet

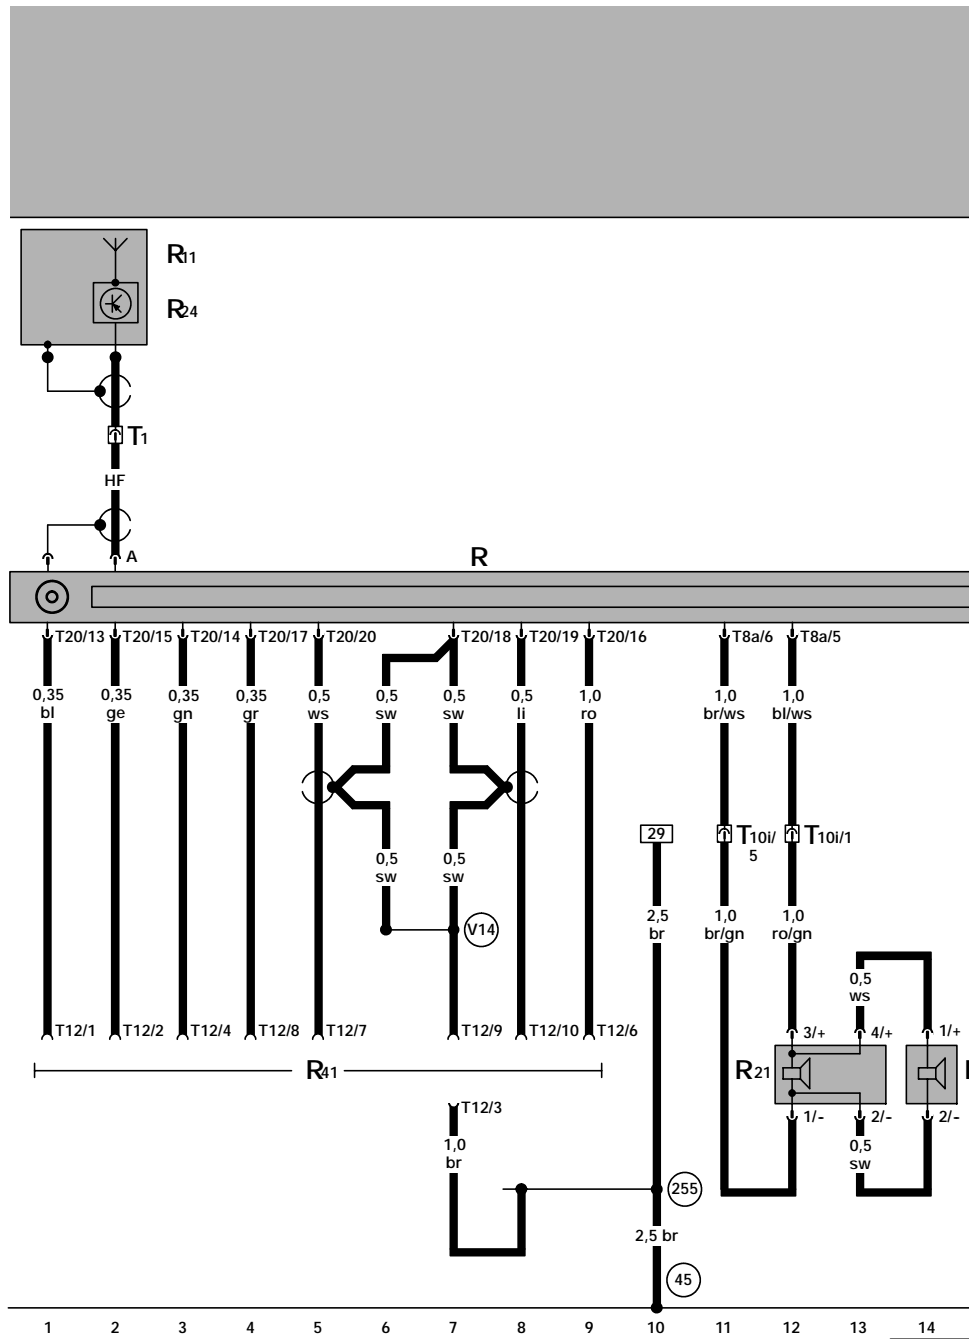


- R - Radio
- R11 - Antenna
- R20 - Treble speaker, left front
- R21 - Bass speaker, left front
- R24 - Antenna Amplifier
- R41 - CD Changer Unit
- T1 - Single Connector
- T8a - 8-Pin Connector
- T10i - 10-Pin Connector, black, connector station
- A-pillar, left
- T12 - 12-Pin Connector
- T20 - 20-Pin Connector, on Radio
- (45) - Ground connection, behind instrument panel, center

- (255) - Ground connection, -1-, in wiring harness radio
- (V14) - Wire connection (shielding), in CD-changer wiring harness

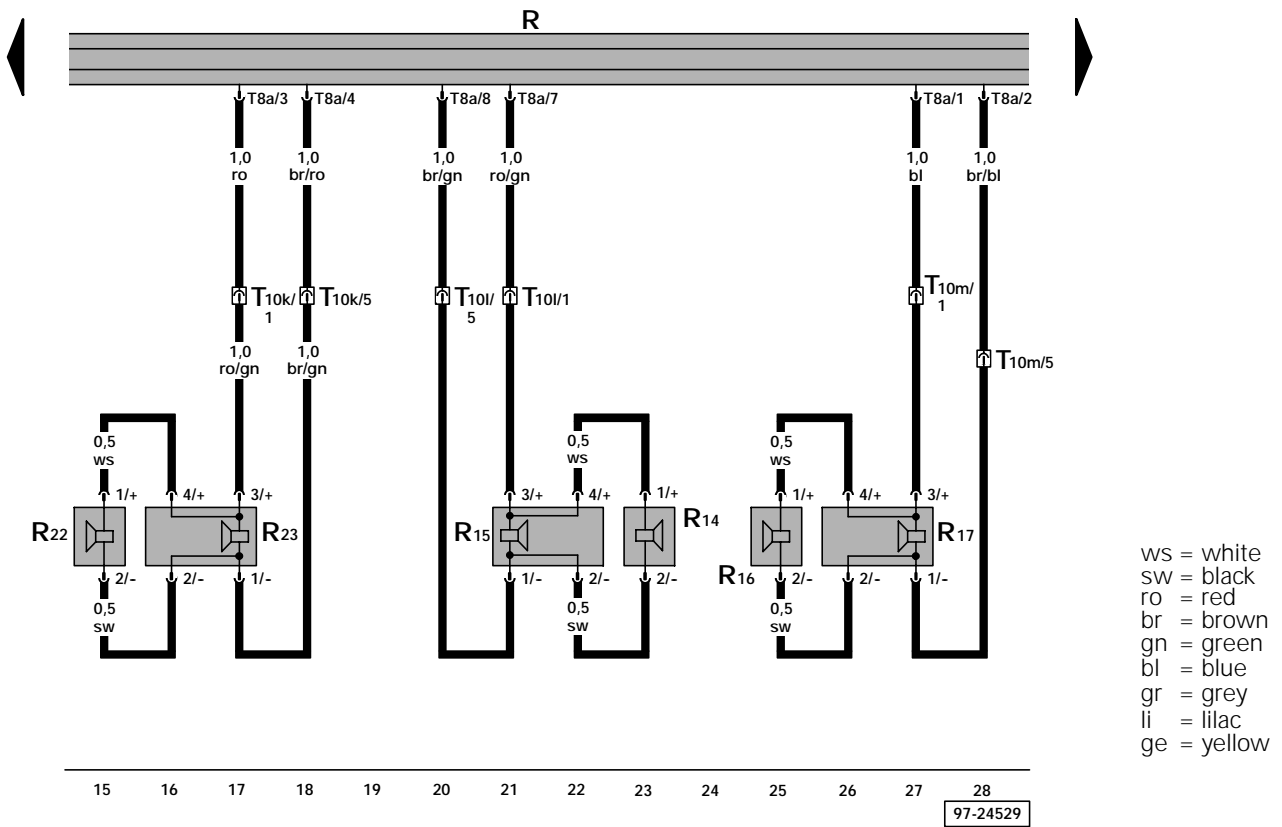


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow

- R - Radio
- R14 - Treble speaker, left rear
- R15 - Bass speaker, left rear
- R16 - Treble speaker, right rear
- R17 - Bass speaker, right rear
- R22 - Treble speaker, right front
- R23 - Bass speaker, right front
- T8a - 8-Pin Connector
- T10k - 10-Pin Connector, black, connector station  
A-pillar, left
- T10l - 10-Pin Connector, black, connector station  
B-pillar, left
- T10m - 10-Pin Connector, black, connector station  
B-pillar, right

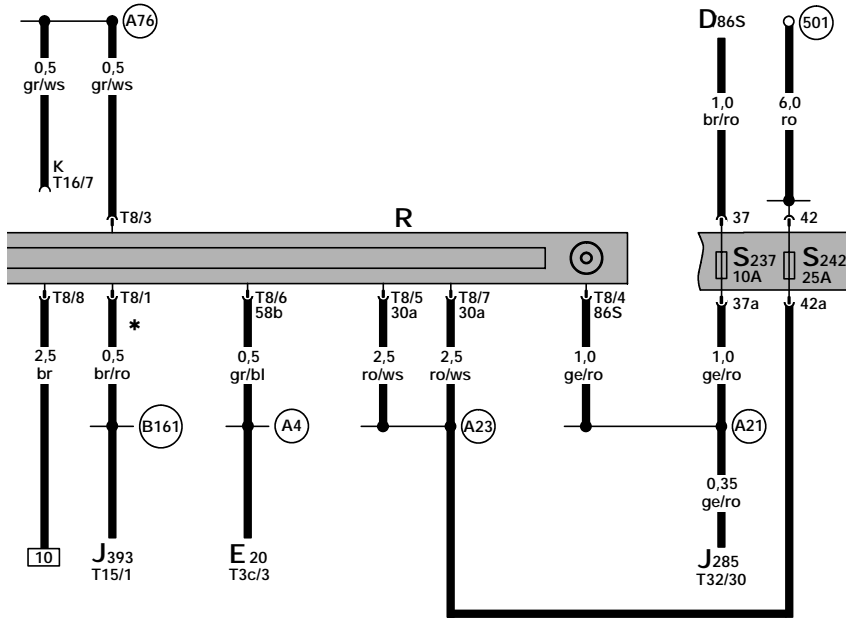

 ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow



- D - Ignition/Starter Switch
- E20 - Instrument Panel Light Dimmer Switch
- J285 - Control module with indicator unit in instrument panel insert
- J393 - Central control module for comfort system
- R - Radio
- S237 - Fuse 37 in fuse holder
- S242 - Fuse 42 in fuse holder
- T3c - 3-Pin Connector
- T8 - 8-Pin Connector
- T15 - 15-Pin Connector
- T16 - Data Link Connector (DLC), below instrument panel, left
- T32 - 32-Pin Connector, blue

- (501) - Threaded connection -2- (30) on the relay plate
- (A4) - Plus connection (58b), in instrument panel wiring harness
- (A21) - Wire connection (86s), in instrument panel wiring harness
- (A23) - Wire connection (30a), in instrument panel wiring harness
- (A76) - Connector (K-diagnosis wire) in instrument panel wiring harness
- (B161) - Connector (anti-theft warning system), in wiring harness interior\*
- \* - Vehicles with anti-theft warning system only (see wiring diagram comfort system)