

Service Training



Self-study programme 321

The Golf 2004 Running gear

Design and function



With the refined safety running gear of the Golf, which is configured for both sporty and comfortable driving, VW has set a further standard in the development of running gear technology. With the aim of developing the best underpinnings in its class, a dynamic running gear system was created that keeps the driver away from unpleasant surprises in any situation.

The running gear of the Golf features an optimised suspension strut axle, multi-link rear axle, completely new electronic power steering and the newest generation of ESP and brake assist system to offer a unique synthesis of best-in-class driving comfort and, at the same time, best steering and driving response.



S321_179

NEW



Important Note



**This self-study programme shows the design and function of new developments!
The contents will not be updated.**

For current inspection, adjustment and repair instructions, please refer to the relevant service literature.



Introduction	4
Front axle	6
Rear axle	12
Steering	17
Brake system	24
Wheels and tyres	35
Foot pedal cluster	36
Service	41
Test yourself	43



Introduction



The running gear

Once again, the running gear of the Golf sets a standard in its class. To achieve this a suspension strut axle, perfectly optimised in many ways, has been installed. With regards to driving dynamics and driving comfort, the new four link rear axle is also ground-breaking.

The electromechanical power steering of the Golf supports the vehicle's driving characteristics in a remarkable way. To do this, it transmits a precise steering feeling and adapts the steering forces harmoniously as speed increases.


In addition to the Golf, the Touran and Audi A3 also currently use this running gear platform.

- Floor mounted accelerator pedal with non-contact accelerator pedal position senders
- Optimised suspension strut axle based on the McPherson principle
- Direct anti-roll bar connection with ratio of 1:1
- Electromechanical power steering
- Brake servo with dual rate map characteristic
- Electronic stabilisation program based on MK 60 system from Continental Teves





The Golf can be equipped with standard, sports or heavy duty running gear. The various running gear systems differ in the spring, damper, anti-roll bar equipment and the mounting elements. The sports running gear is lowered by 15 mm compared with the agile and comfort-orientated standard running gear. The body height of the vehicle with heavy duty running gear is 20 mm higher than on the standard running gear version.

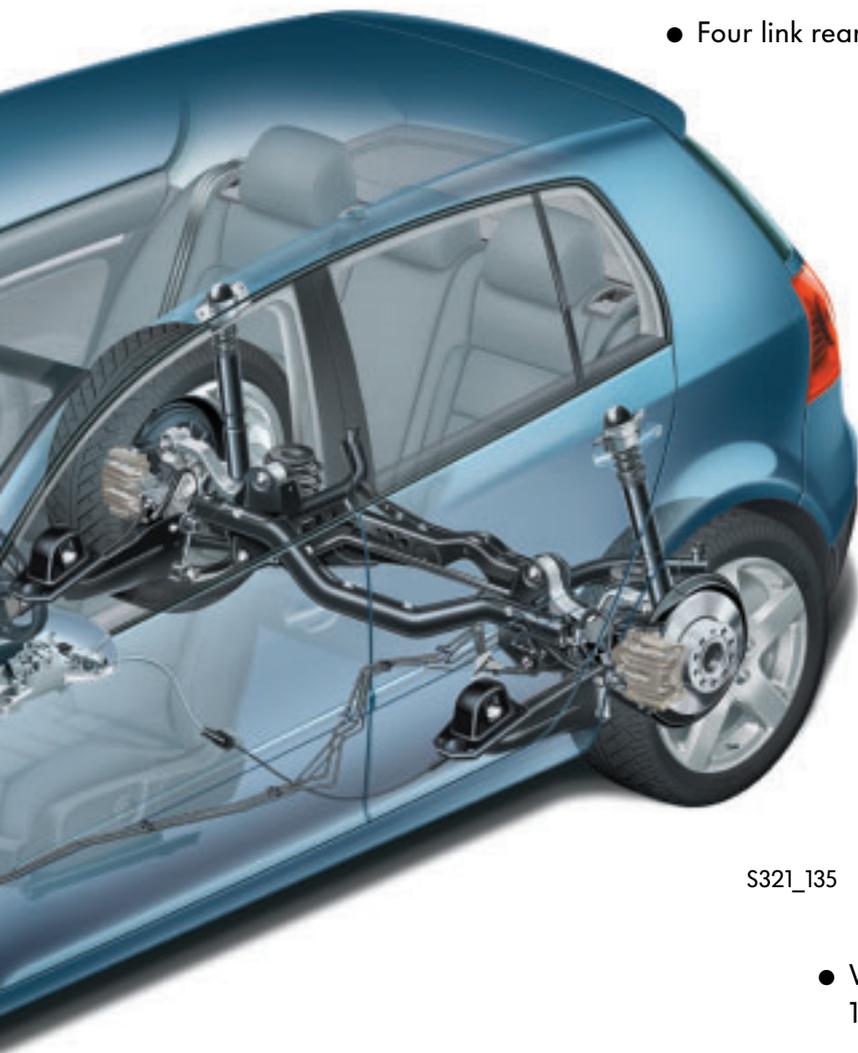

- Four link rear axle

- 4motion drive, optional

- Tyre monitoring system, optional

- Brake assist system

- Track and camber on rear axle can be adjusted separately


S321_135

- Wheel designs in 15", 16" or 17" versions


Front axle

The front axle

The Golf has a McPherson front axle with bottom wishbones and wheel locating suspension struts. The front axle offers optimal comfort at a high level of stability.

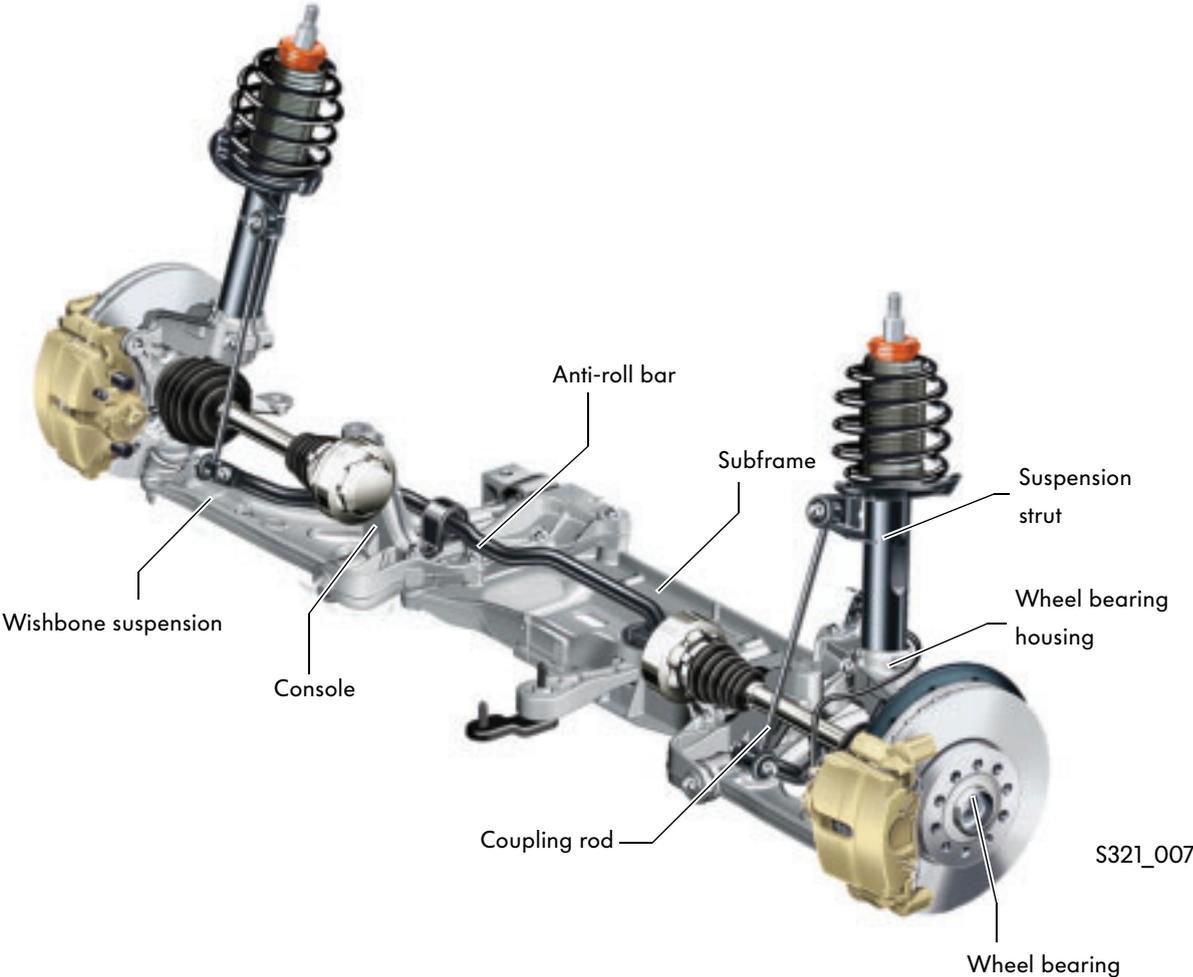

Subframe

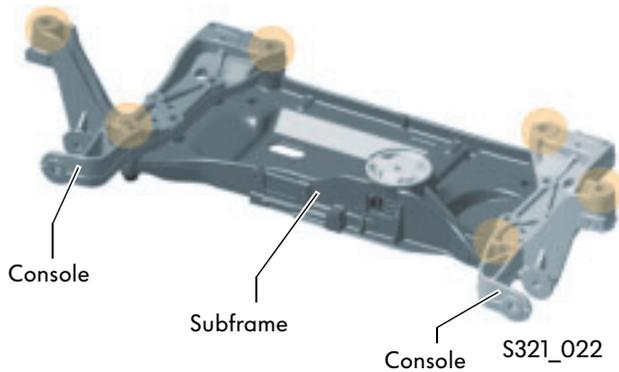


The subframe comprises of three parts and is made of aluminium. It is joined to the body at six points. With this type of connection, the body is stiffened in the front area. The optimal layout of the bonded rubber bushes in the wishbones and suspension strut mountings has a positive influence on the driving dynamics and body acoustics.



Key:

 = Bonding point to body

Wheel bearing

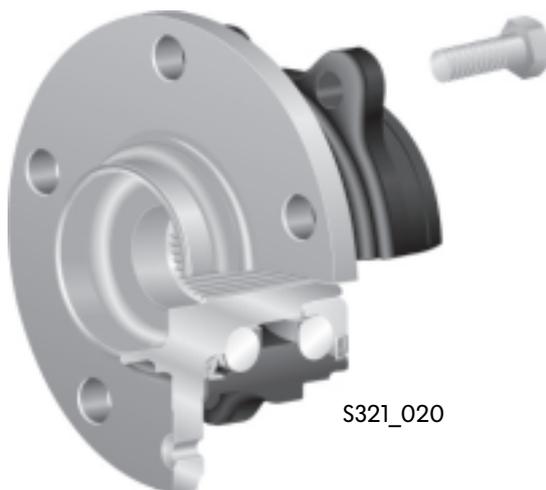


The wheel bearings are of the 3rd generation. This type of component is a compact wheel bearing unit comprised of wheel hub and wheel bearing, which is bolted from the interior to the swivel mounting by four bolts.

The advantage of this wheel bearing is that the bearing play no longer has to be adjusted.

Front axle

Suspension strut

The spring used is a combination of cylindrical coil spring and polyurethane auxiliary damper. The coil spring is made from high tensile steel and is drawn in at the ends. The damping characteristic of the coil springs is linear. The polyurethane auxiliary spring has a progressive damping characteristic.

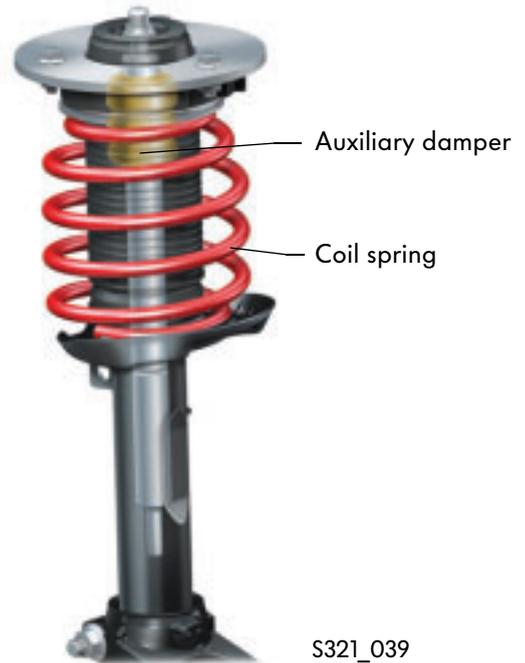

Suspension strut mounting

The suspension strut mounting is a bonded rubber bush. By decoupling the spring and shock absorber connection to the body, the damping force is absorbed separately by the body. In this way, pretension in the damper mounting is prevented. This positively influences rolling comfort and reduces the transfer of noise from the road surface to the body.

The mounting features a soft damping characteristic in the direction of normal travel. In this way, an improvement is achieved in driving comfort and acoustics.

In the lateral direction, the mounting is designed to be stiffer. This measure positively influences the driving dynamics and the steering response.




Swivel mounting

The swivel mounting is joined to the suspension strut by a clamp-type connection. At the lower level it is attached to the wishbone via a guide joint.


The wheel bearing unit is bolted to the swivel mounting. Depending on the version, either a bolted or integrated swivel mounting is installed.



Integrated swivel mounting

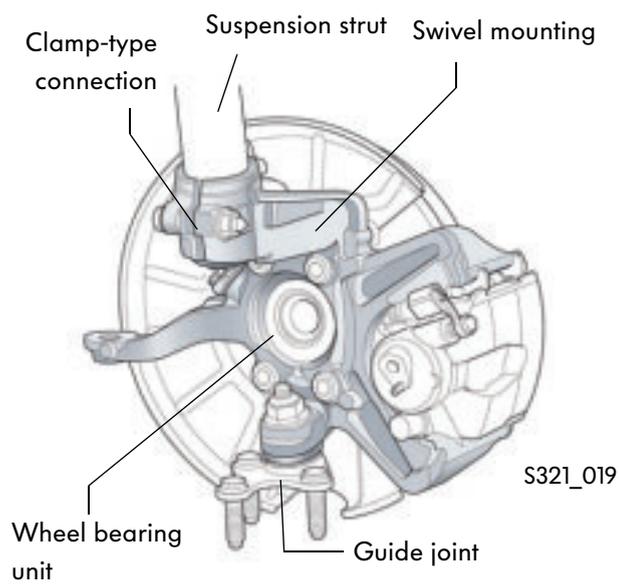


Bolted swivel mounting

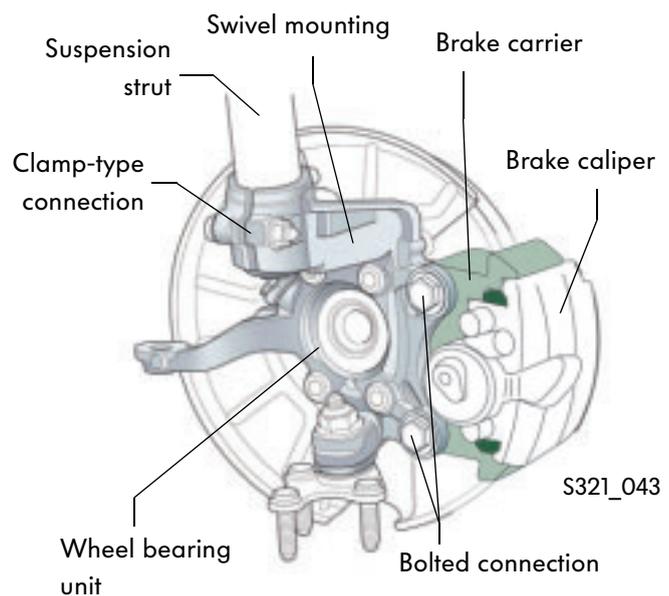

Wishbone suspension

The wishbones form the lower connection between the body and swivel mounting. Depending on the engine, they are made from cast iron or sheet metal and are joined via bonded rubber bushes to the consoles of the subframe.

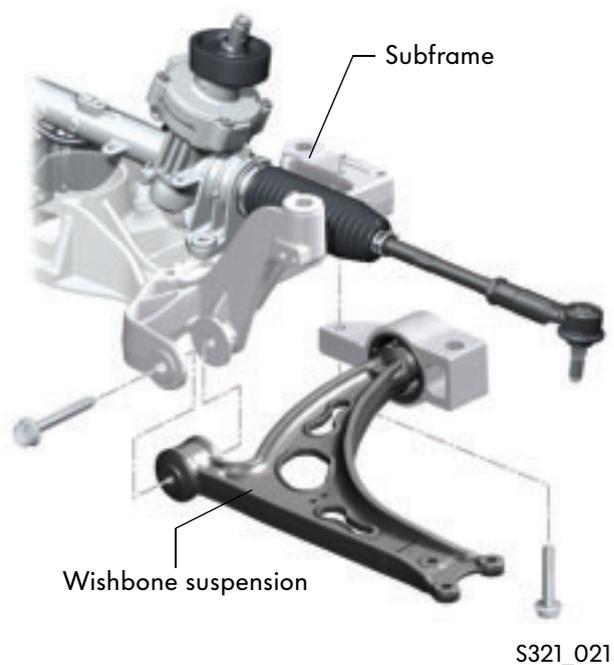


Front axle

Anti-roll bar


The tubular anti-roll bar is joined directly to the suspension strut via a coupling rod in a ratio of 1:1.

The advantage compared to the Golf'98 is that a higher degree of anti-roll stabilisation is achieved with the same tube diameter.

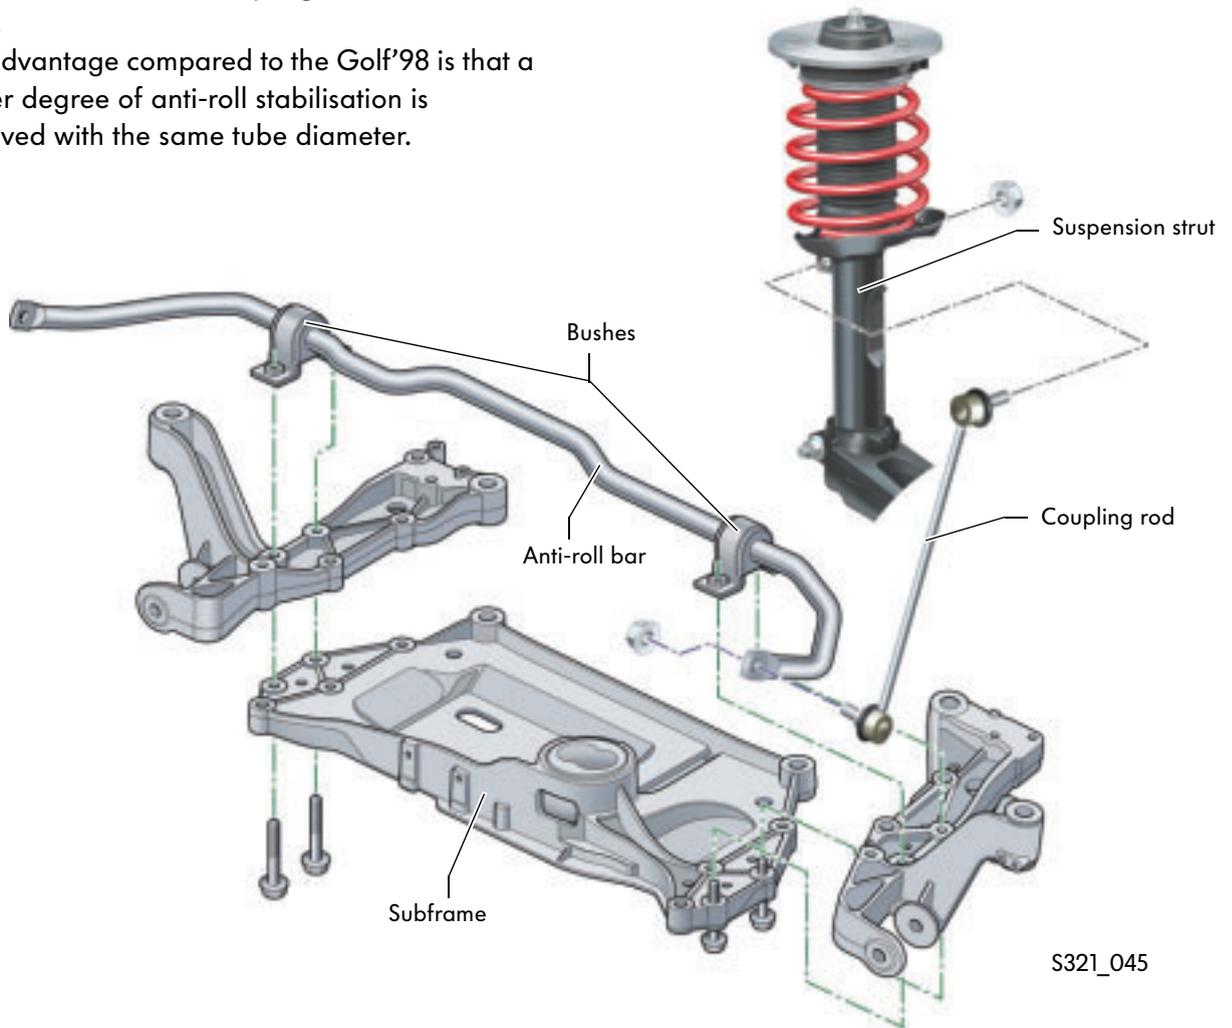

The anti-roll bar is mounted on the subframe by means of two bushes. The positive connection of the bonded rubber bushes prevents relative movements between anti-roll bar and bonded rubber bush.

Instead of turning in the rubber bush, the rotational movements of the anti-roll bar are absorbed in the mounting. In this way, a high degree of efficiency is achieved.

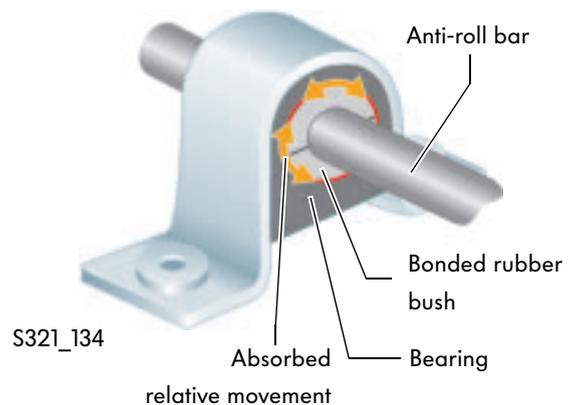


The drive shafts



Installed in the Golf is the track proven drive shaft concept with short and long drive shafts. The shorter shaft on the left-hand side is solid. The longer shaft on the right, however, is a hollow tubular construction.

On higher powered engines, the drive shafts are of the same length. This is made possible by an intermediate shaft, which is mounted additionally on the crankcase. This drive shaft concept is advantageous in that, even during full acceleration, there are no repercussions on the steering and straight running of the vehicle from driving forces. Furthermore, pulling to one side is also avoided.

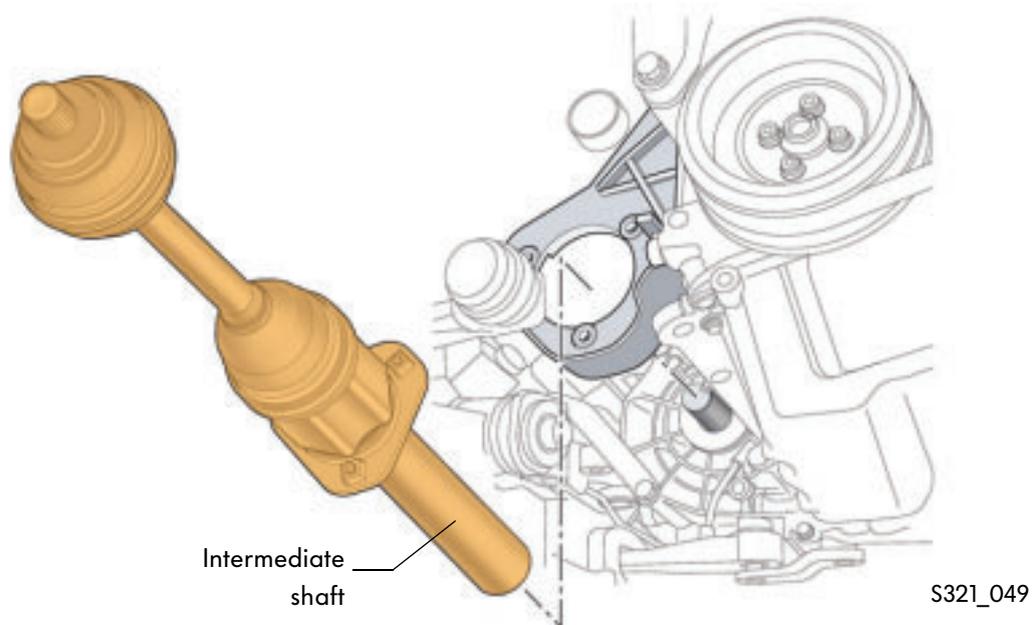


Rear axle

The front wheel drive rear axle

The rear axle of the Golf is of the compact four link design. On each side it has three suspension links (lower link, track rod and upper link) and a trailing arm.

This layout means that longitudinal and lateral forces are almost completely separated from each other. In this way, a very high level of driving stability and comfort are achieved.

With a predetermined alteration in the wheel position during cornering, a light understeer is achieved due to the natural opposing steering force of the outer wheel (self steering response or toe-in steering).

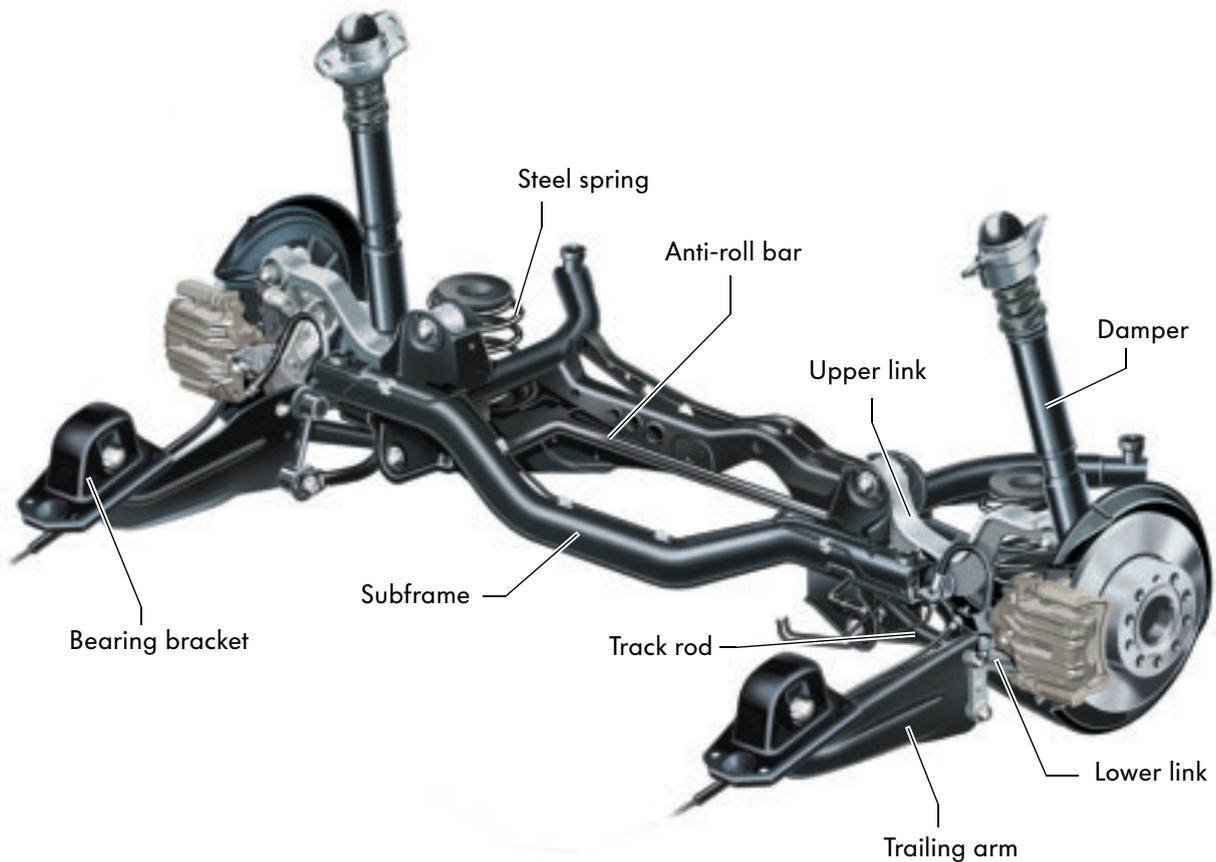

S321_171

Subframe



The subframe is a welded construction made from steel. It is bolted directly to the body. The body mounting points on front wheel drive and 4motion drive systems are identical.

S321_027




Wheel carrier

The wheel carrier is a forged metal construction made from steel with a moulded stub axle to mount the wheel bearing.

Wheel bearing

The wheel hub and wheel bearing form one component. The wheel bearing is bolted to the stub axle of the wheel carrier by means of a stretch bolt. In this way, the necessary bearing preload is achieved (2nd generation wheel bearing).

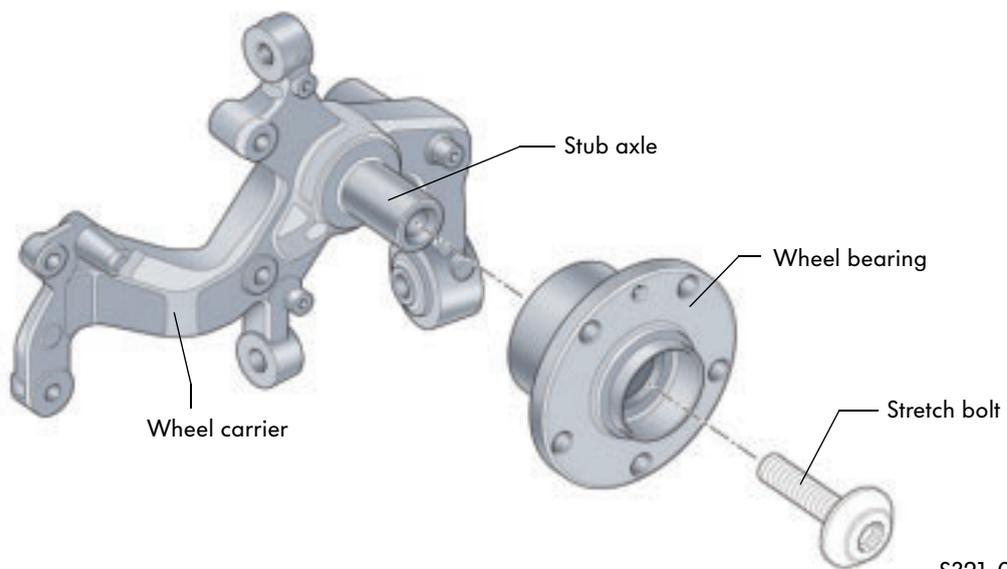


S321_029

Rear axle


Four link principle

On the four link axle of the Golf 2004, longitudinal and lateral connections are separate. The advantage is that no compromise had to be made between comfort and driving dynamics.

The front mounting (trailing arm) is not subjected to lateral forces and has therefore been made very soft. Cracks and grooves running across the road surface are absorbed easily.

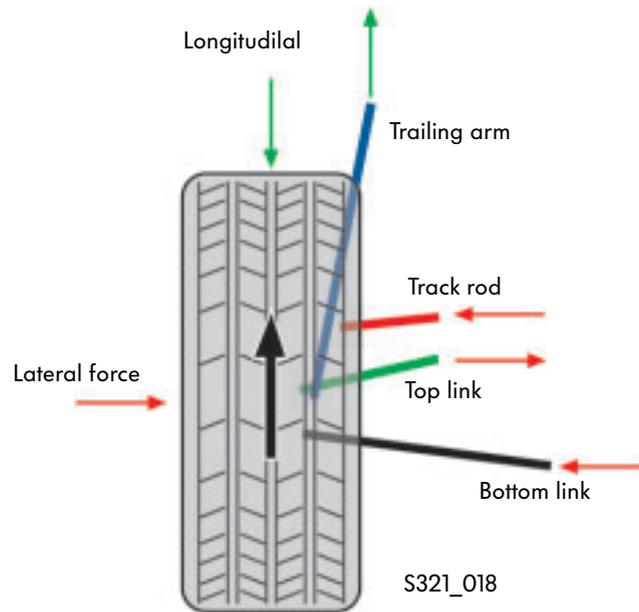


As a comparison, the following illustration shows the force distribution on the double wishbone suspension of the Golf' 98.

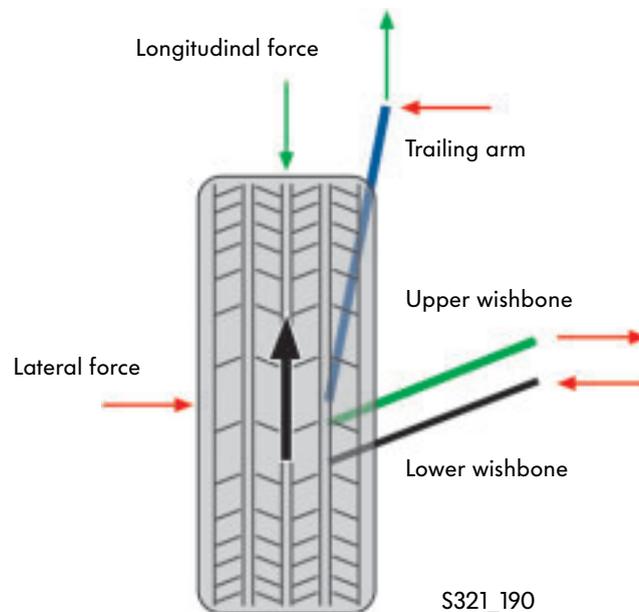

The 4motion rear axle

The driven rear axle has been modified on the subframe, anti-roll bar, wheel carrier and wheel bearings.

The advantage of this axle design is that the floor assembly on vehicles with front wheel and 4motion drive systems is the same with regards to the body mounting points.

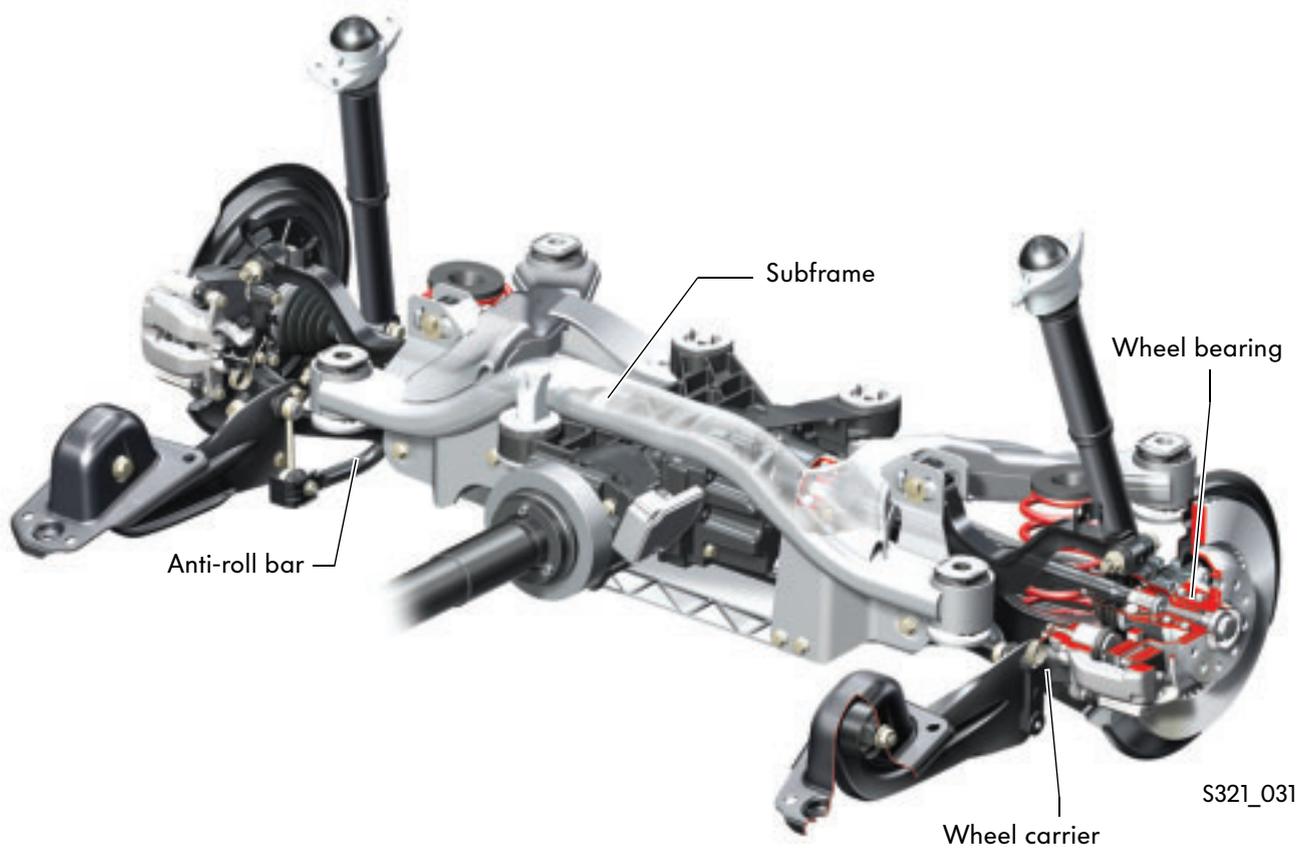


Rear axle

Subframe

The subframe is a welded construction made from aluminium. It also supports the rear differential. It is bolted to the body by means of oversized bonded rubber bushes. In this way, noise reduction is promoted thanks to isolation of the body.

An additional aluminium cross member, bolted in position, serves as a means of increasing rigidity in the lower area by complementing the subframe. The use of aluminium means that a weight saving of approx. 7 kg has been achieved.

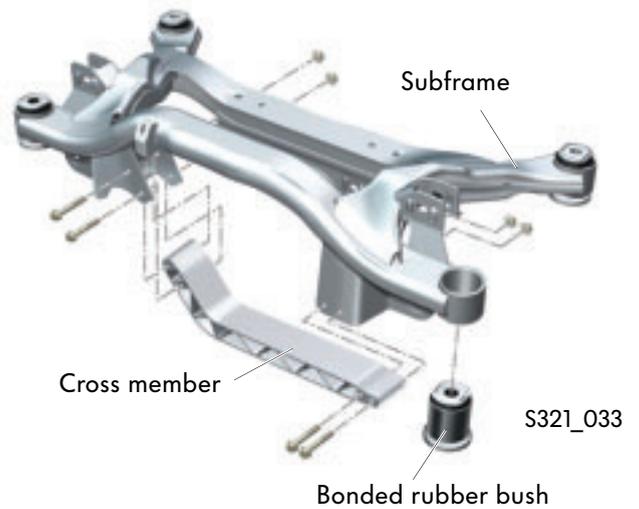


Wheel carrier

The wheel carrier was modified geometrically to accommodate the drive from the rear axle (introduction of modified wheel bearing and drive shaft).

Wheel bearing


The wheel bearing installed here is of the 3rd generation (as installed in the front axle).

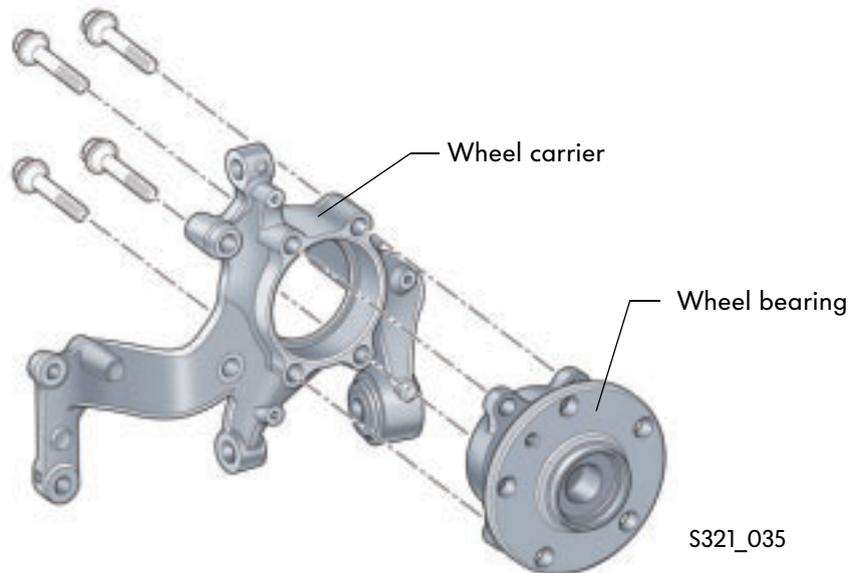

The steering

The electromechanical power steering supports the driving response of the Golf. To do this, it conveys a precise feel for the vehicle and the road. As speed increases, the steering forces are adapted harmoniously. Disrupting factors from bumps in the road surface are filtered out as far as possible.

Overview

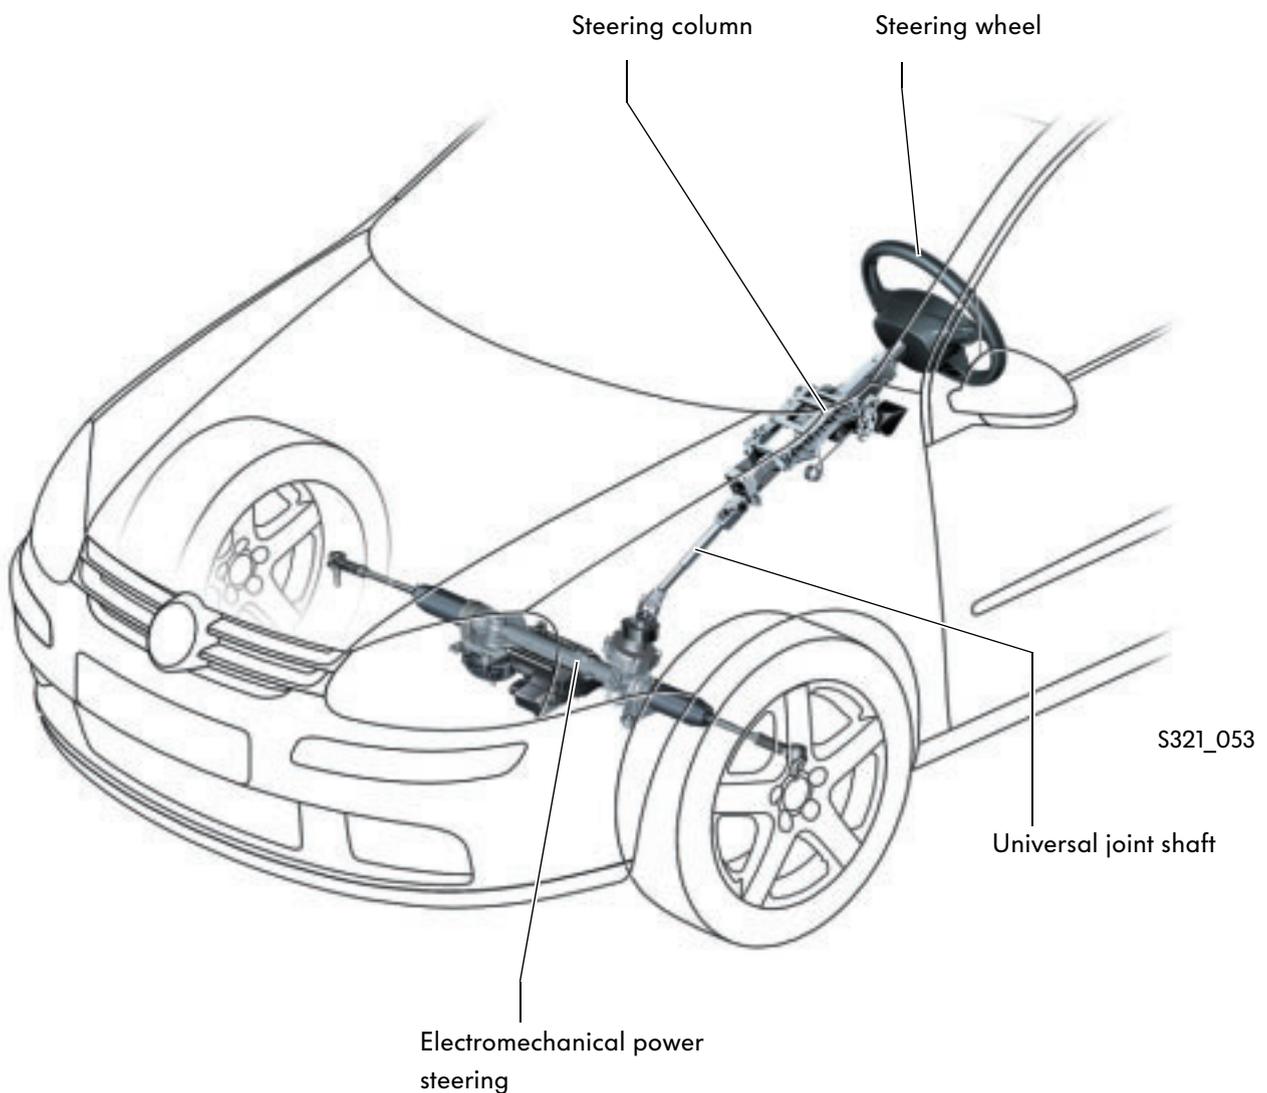

Steering

The steering wheels

Installed as standard is a 4-spoke PU steering wheel. PU (polyurethane) is a very strong synthetic material, which is good to work with and can be recycled. As an alternative, a steering wheel with soft leather covering and one-piece cast magnesium frame is available.


During assembly, the airbag module is installed in the steering wheel mechanically and can only be removed if the steering column is disengaged. This is an effective anti-theft measure to prevent unauthorised removal of the driver airbag.



S321_124

The steering wheel features a weight-optimised framework cast from magnesium. The design can be seen in the cross sectional diagram of the multi-function steering wheel.

Cross-section based on wooden steering wheel

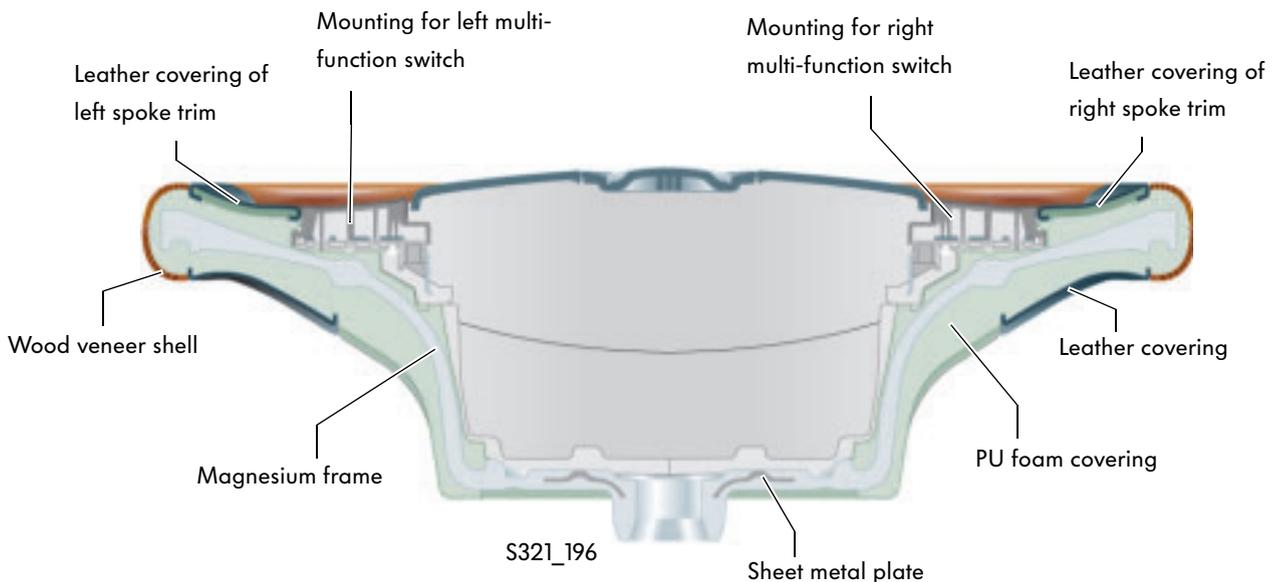

S321_196

Various designs of 3-spoke steering wheel will be available as an option.



S321_012

Design 1:

The steering wheel is of the 3-spoke design, finished in either leather or a combination of leather and aluminium.



S321_014

Design 2:

The steering wheel is of the 3-spoke design, finished in wood and leather. The multi-function steering wheel features an audio and telephone function.



S321_010

Design 3:

The steering wheel is of the 3-spoke design, finished in leather. The multi-function steering wheel features an audio and telephone function and also Tiptronic.



Steering


The steering column

The reach and rake adjustment of the steering column is mechanical. For optimal adaptation to the driver's requirements, it can be adjusted up and down by 50 mm and back and forth by 60 mm.

Fixing of the steering wheel in position is by means of a multi-plate bundle with ten steel plates.

Five plates in the horizontal plane make reach adjustment possible.

The other five plates are installed in the vertical plane and make rake adjustment possible.

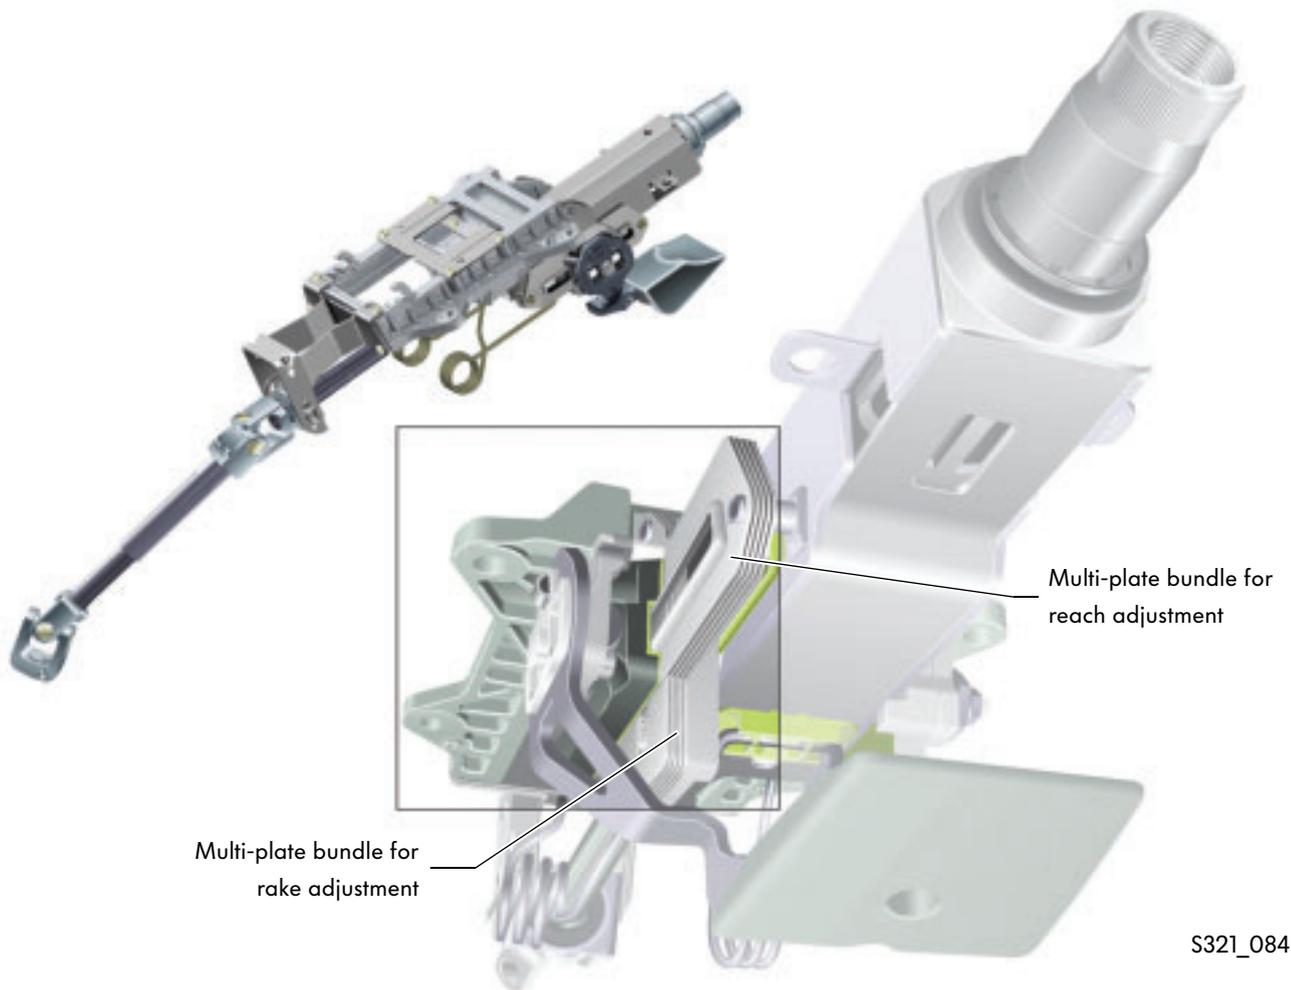

S321_084


Connection of the steering column to the dash module carrier is by means of an assembly bracket pressure cast from aluminium.

Principle of the clamping function

The clamping function is provided by two rollers that are pushed up a ramp to fix the steering wheel in position. In this way, the multi-plate bundle is pressed together via a thrust piece.


Due to the fact that no gear teeth are used in the clamping mechanism, adjustment is infinitely variable.

● Multi-clamp bundle released

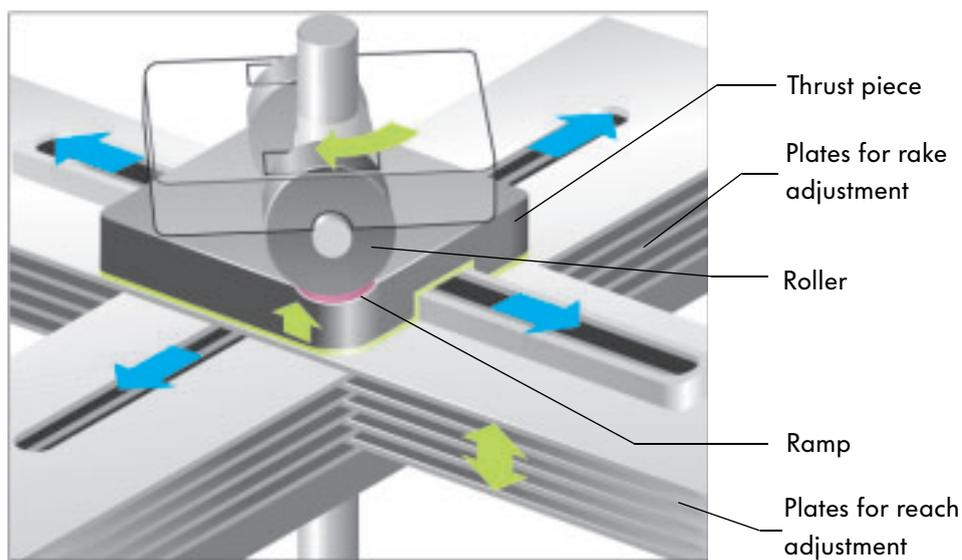

S321_128

● Multi-clamp bundle clamped

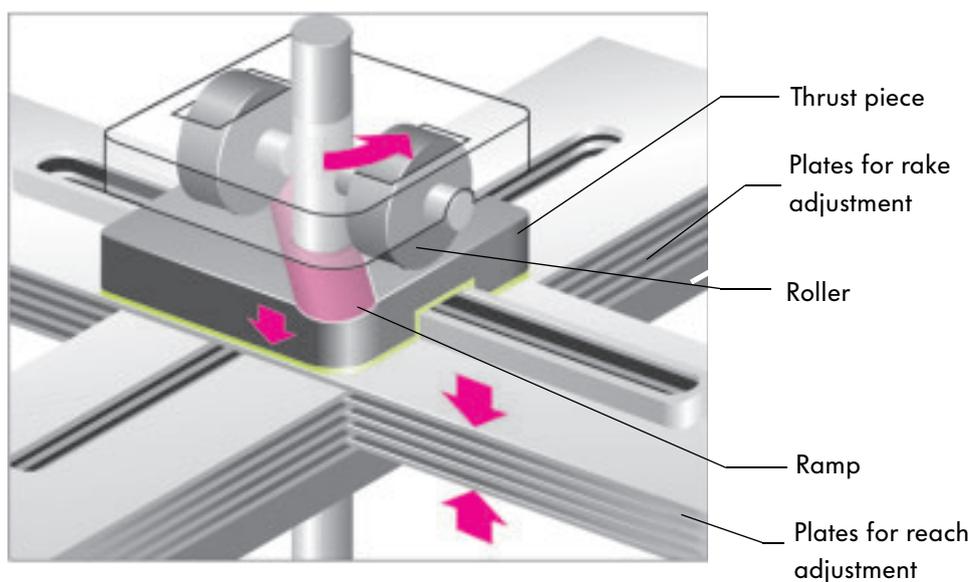

S321_126



Steering

Crash concept


As part of occupant safety, the steering column and the universal joint shaft are designed to slide into each other. In this way, the steering column and the steering wheel will not be pushed towards the driver if the front end of the vehicle deforms.

The steering column tube and universal joint shaft are designed so that the steering column is decoupled from the steering gear in the event of the steering gear being forced inwards in a crash. This prevents the steering wheel from jutting against the driver as a result of further deformation of the front end.



The cradle and console are joined together by means of a shear plate. In the event of a crash, a defined force is placed against the shear plate by the movement caused from the impact of the driver against the cradle.

The geometrical design of the shear plate means that a progressive force/travel characteristic is achieved.

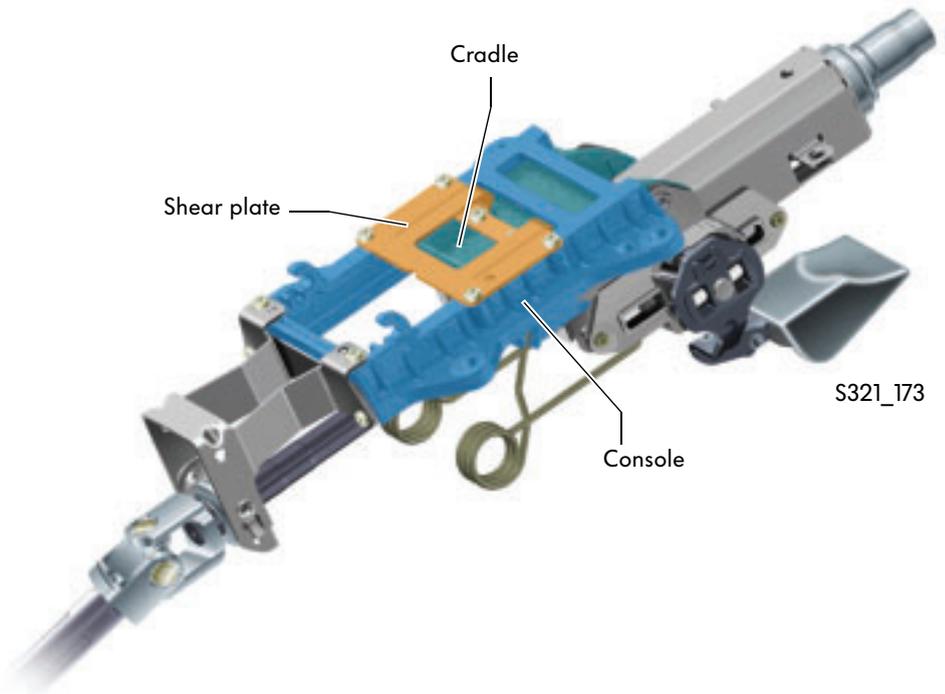


The electromechanical power steering



The Golf is fitted as standard with an electro-mechanical power steering system. This steering system consists of steering box and an electric motor with control unit. The system is installed on the subframe. The steering assistance from the electric motor, which is flanged in parallel to the toothed rack, is transmitted via a second pinion (drive pinion) to the toothed rack.

The electro-mechanical power steering is an active steering system, which is directly dependent on road speed, the steering force and the steering angle.

Data is transferred via the drive train CAN data bus. The control unit is flanged to the electric motor.

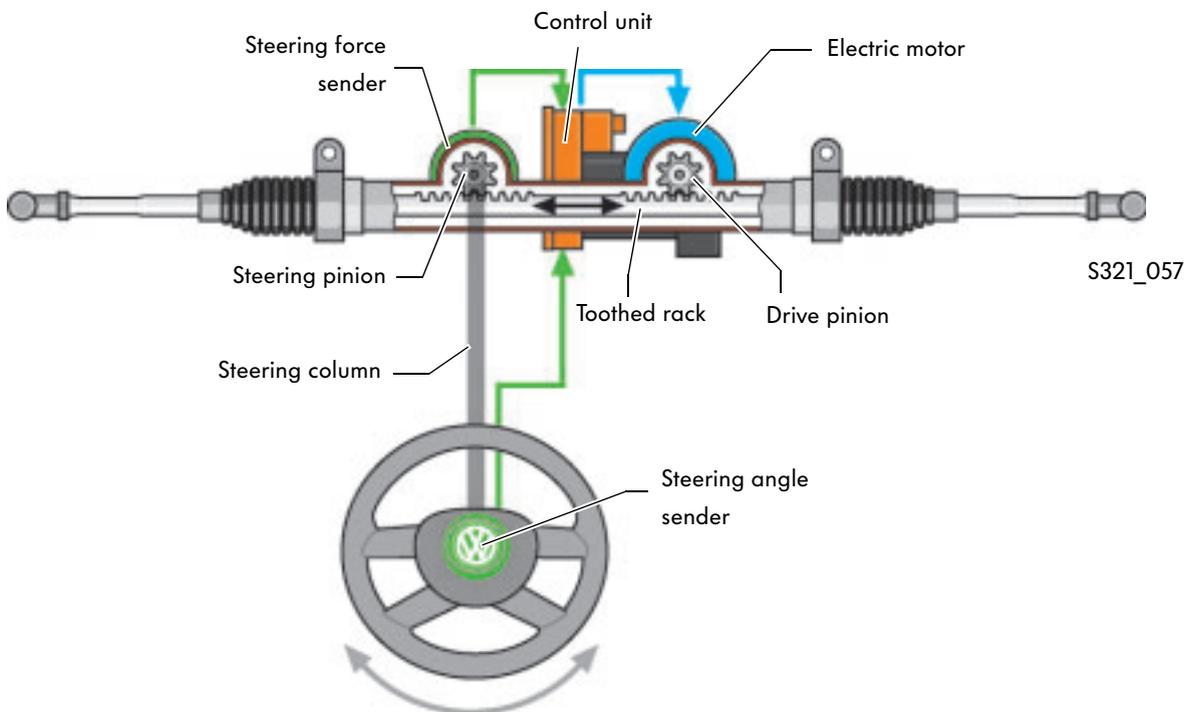


Further information can be found in SSP 317 "The dual pinion electromechanical power steering".

Brake system

The brake system

The basis for good braking properties is provided by a newly designed brake system. The Golf is fitted as standard with the newest generation of ESP and brake assist system.

Overview

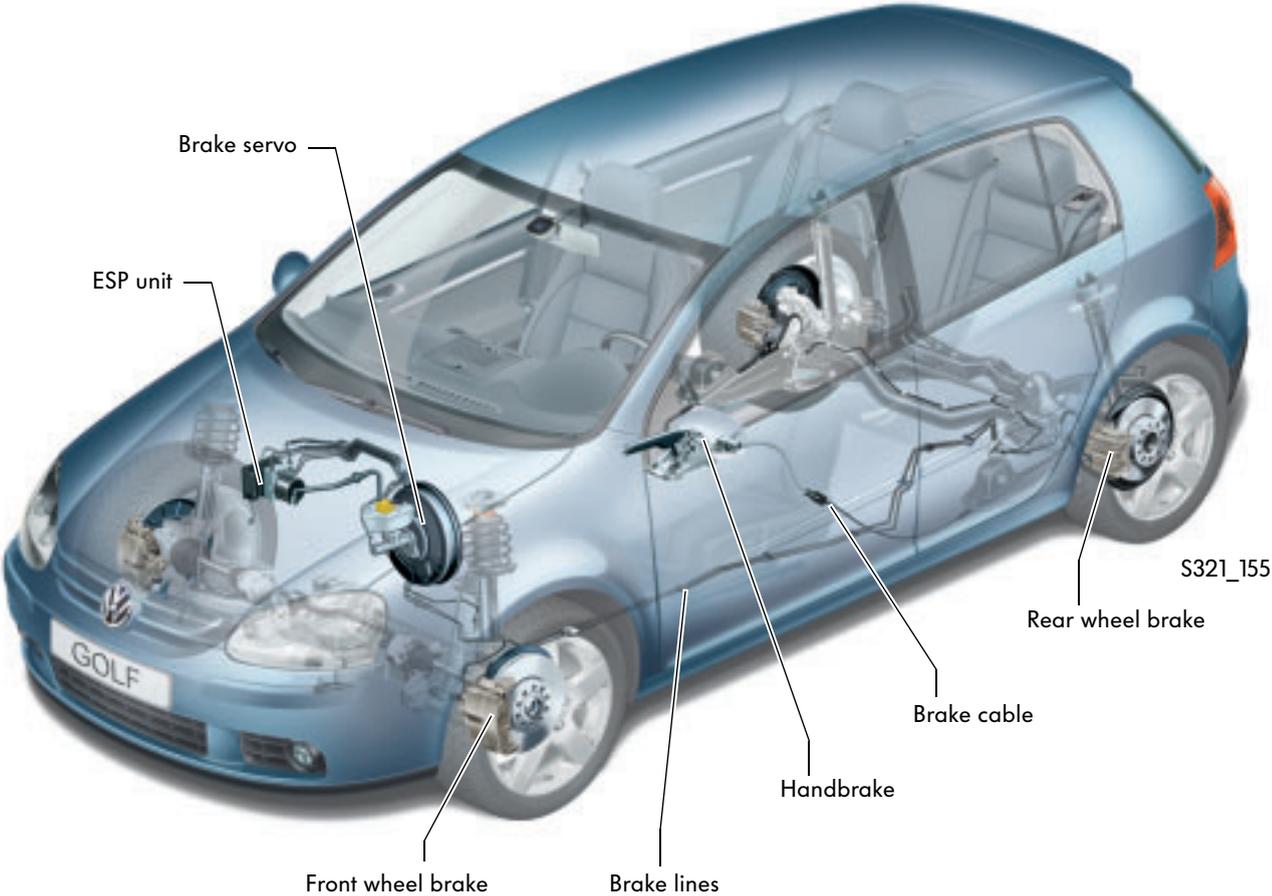

The brake equipment

Engine	Front brakes (single piston floating caliper brake)	Rear brakes	
55 kW-85 kW	<p style="text-align: center;">Ø280x22</p>  <p style="text-align: right;">S321_156</p> <p style="text-align: center;">Integrated swivel mounting</p>	<p style="text-align: center;">Ø255x10</p>  <p style="text-align: center;">S321_164</p>	<p style="text-align: center;">Ø260x12</p>  <p style="text-align: center;">S321_166</p>
100 kW-110 kW and 77 kW TDI with DSG 02E	<p style="text-align: center;">Ø288x25</p>  <p style="text-align: right;">S321_158</p> <p style="text-align: center;">bolted swivel mounting</p>		
147 kW and 118 kW TDI	<p style="text-align: center;">Ø312x25</p>  <p style="text-align: right;">S321_160</p> <p style="text-align: center;">bolted swivel mounting</p>	<p style="text-align: center;">Ø286x12 / Ø286x12</p>  <p style="text-align: center;">S321_168</p>	
177 kW	<p style="text-align: center;">Ø345x30</p>  <p style="text-align: right;">S321_162</p> <p style="text-align: center;">bolted swivel mounting</p>	<p style="text-align: center;">Ø310x22</p>  <p style="text-align: center;">S321_170</p>	



Brake system

The dual rate booster brake servo

In all left-hand drive vehicles, a 10" brake servo is installed.


Right-hand drive vehicles are equipped with a tandem brake servo of 7/8" in dimension.

A main new feature is the introduction of the "dual rate characteristic".

The inside of the brake servo is modified, which results in a progressive characteristic. In this way, higher brake pressures are available than on conventional brake servos, even at low pedal forces. Braking forces are still imparted softly during normal operation however.



S321_078

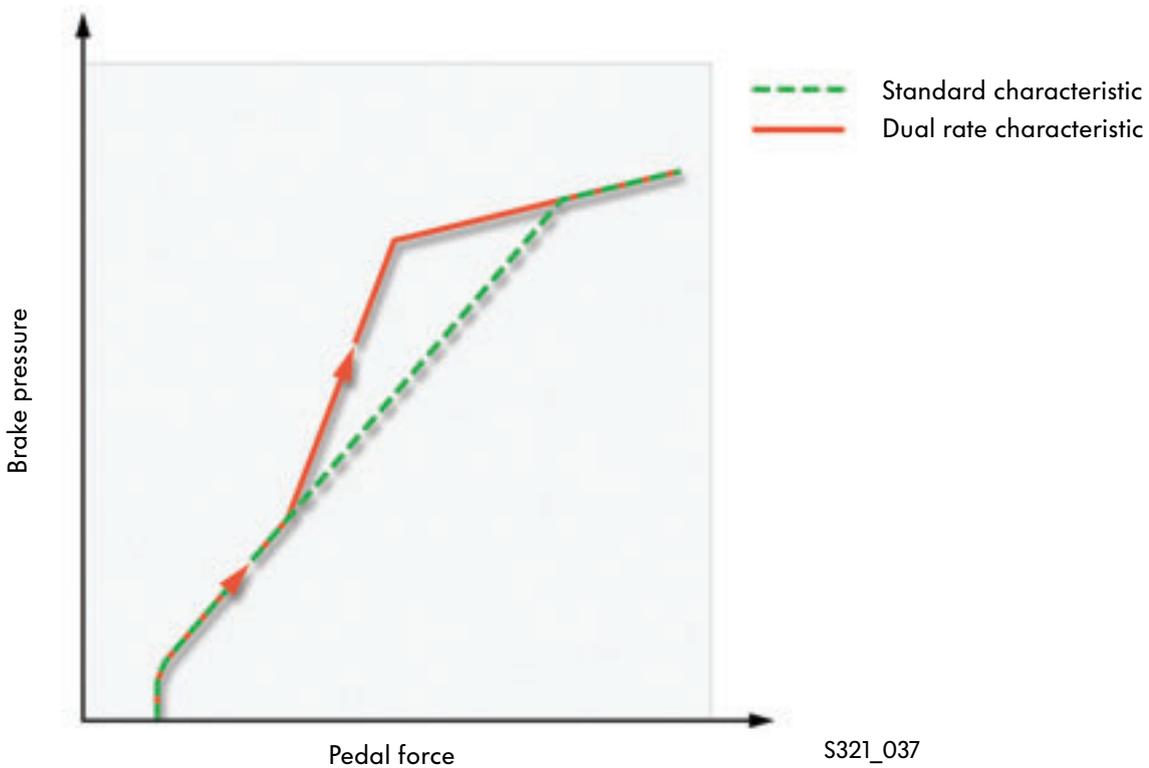

S321_037

The anti-lock braking system ABS/ESP Continental/Teves MK 60


A new ESP unit of the product family MK 60 is installed. The main new features are:

- Active wheel speed sender without forwards and reverse travel recognition.
- Combined yaw rate/lateral acceleration sensor. This sensor is compatible with the CAN system.
- Installed in the ESP unit is the brake pressure sender. The brake pressure sender was installed until now on the tandem brake master cylinder.
- New ESP warning lamp.



S321_192

Hydraulic unit with brake pressure sender (G201)

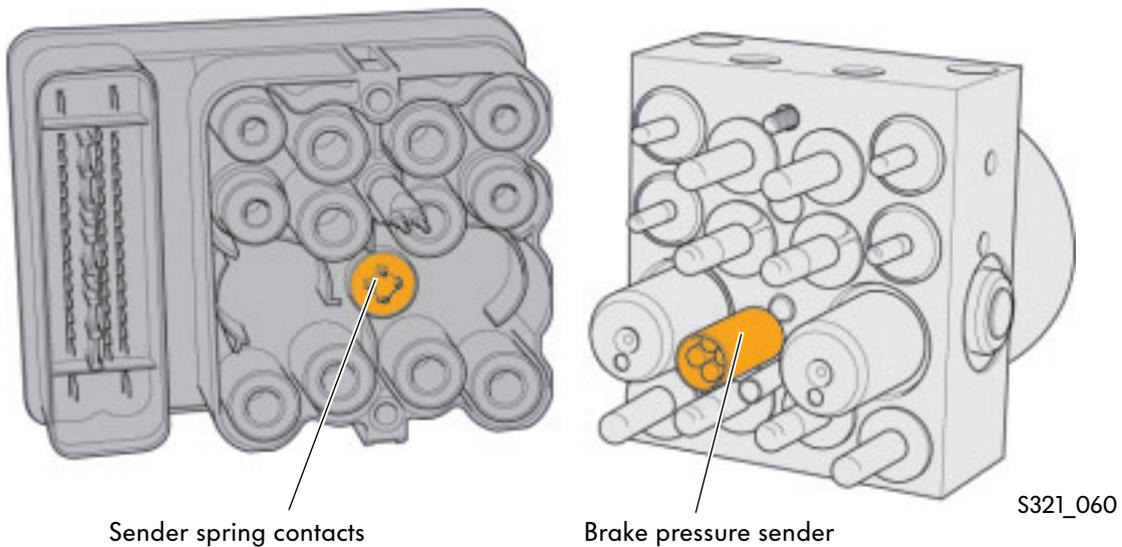

Installed as an exclusive ABS system is the MK 70. As this component only features the ABS function (4 inlet and 4 outlet valves), it is smaller and lighter than the MK 60 system.




Brake system

The brake pressure sender (G201)


It measures the pressure applied at the brake pedal by the driver. To ensure a higher level of safety, the sensor supplies two pressure signals independently of each other.

These are sent at the same time as two opposing voltages. The control unit constantly compares these with each other.

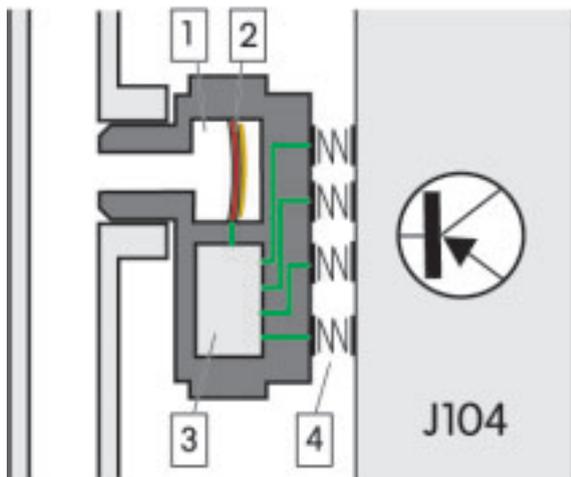

S321_175

1. Measuring chamber
2. Piezo resistive thick film sensor element
3. Sensor electronics and signal amplifier
4. Contact springs to control unit J104

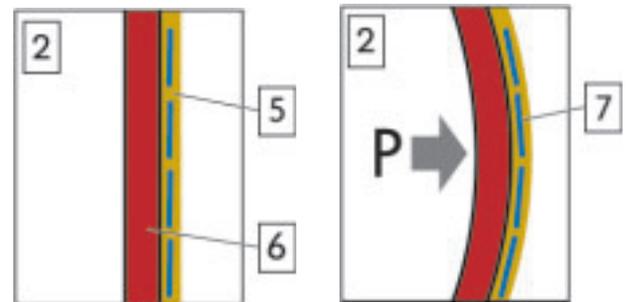

S321_176

S321_178

5. Piezo resistive measuring bridge
6. Flexible thick film membrane
7. Piezo bridge elements within measuring bridge

Electric switching

The sensor is joined via 4 contact springs to control unit J104 (4). Two contacts serve as a means of supplying power, the other two provide two independent pressure signals.

Construction

The sensor works on the principle of piezo resistance. To do this, use is made of the change in conductivity of the materials from structural deformation. Four piezo resistive measuring elements, which are switched together to form a bridge (5), are installed on a membrane (6).

Piezo resistive measuring elements are resistors made from semi-conductor material. The function is similar to that of bi-metallic strips.

Function

As pressure increases, the length of the membrane (6) changes and also the piezo resistive measuring bridge (5) connected to it. This change in length imparts force on the piezo bridge elements in the measuring bridge (7), which alters the charge distribution within the piezo elements.

With a change in the charge distribution, the electrical properties of the piezo bridge elements also change. These are proportional to the pressure and are transmitted as an amplified sensor signal to control unit J104.



Self-diagnosis

The pressure sensor is monitored by the electronic control unit via both output signals. If both signals deviate from each other within the tolerance level, a fault is diagnosed by the control unit.

Effects of failure

In the event of pressure sensor failure, the ESP function is reduced to ABS and EBD (electronic brake pressure distribution).


Brake system

The optimised hydraulic brake servo (OHBS)

The most effective way to supply vacuum pressure to the brake servo is to utilise the vacuum from the intake manifold on the engine. On petrol engines with automatic gearboxes, the vacuum pressure available at the intake manifold can drop significantly in certain operating conditions (cold start phase). This can have a negative impact on the comfort of brake actuation.

The cause of this is the opening of the throttle valve under load, which drastically reduces the vacuum in the intake manifold. Until now, the necessary vacuum for such situations was provided by an auxiliary unit (e.g. electric vacuum pump).

In the Golf 2004, a new path has been found.

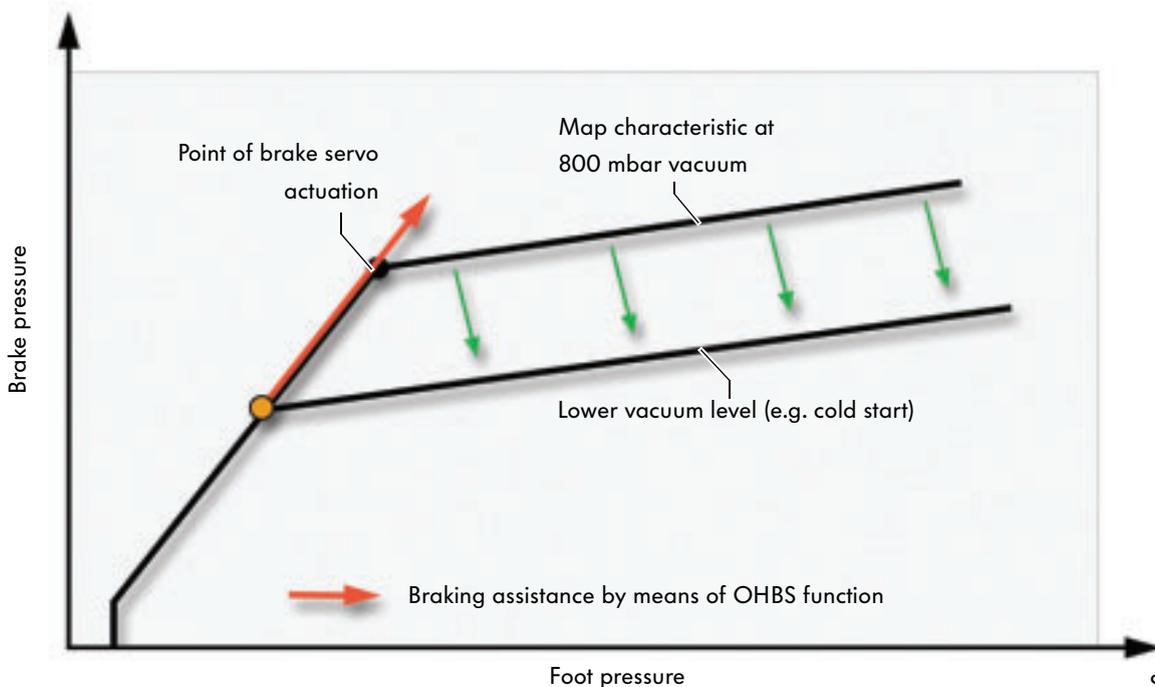

S321_062

Function

The loss of braking assistance, as a result of insufficient vacuum pressure, is balanced out with an active and controlled build-up of brake pressure from the ESP hydraulics. To enable this control, measurement of the pneumatic forces in both chambers of the brake servo (BS) is necessary. The pressure difference is a direct benchmark for the maximum amount of braking assistance available. If the pressure in both chambers is equal, the point of brake servo actuation is reached. Thereafter, a further increase in braking force is only possible, without additional braking assistance, by an increase in foot pressure on the brake pedal.

Stored in the ESP control unit J104 is the specified map characteristic for the build-up of brake pressure, depending on the pressure difference in both servo chambers. If the intake manifold vacuum is insufficient, the point of actuation is reached even at brake pressure levels below the specified amount.

If this is the case, a controlled build-up of brake pressure is initiated by the ESP hydraulics. Compared to conventional braking assistance, the driver will notice no difference here with regards to the force required at the brake pedal and braking comfort.

To enable the controlled build-up of brake pressure, the use of new solenoid valves is made to switch to ESP regulated mode.


The degree to which these valves is opened can be controlled on a time basis. In this way, the pressure patterns can be adapted to each situation.



Brake system


Differential pressure sensor

The sensor measures the pneumatic pressures in both chambers of the brake servo.

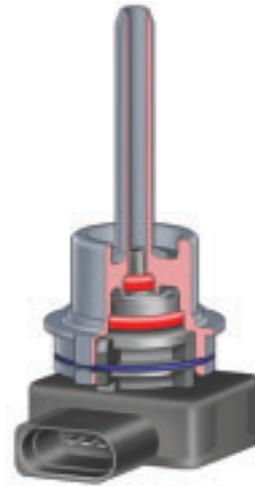

S321_064

Installation position of differential pressure sensor shown as cross-sectional diagram

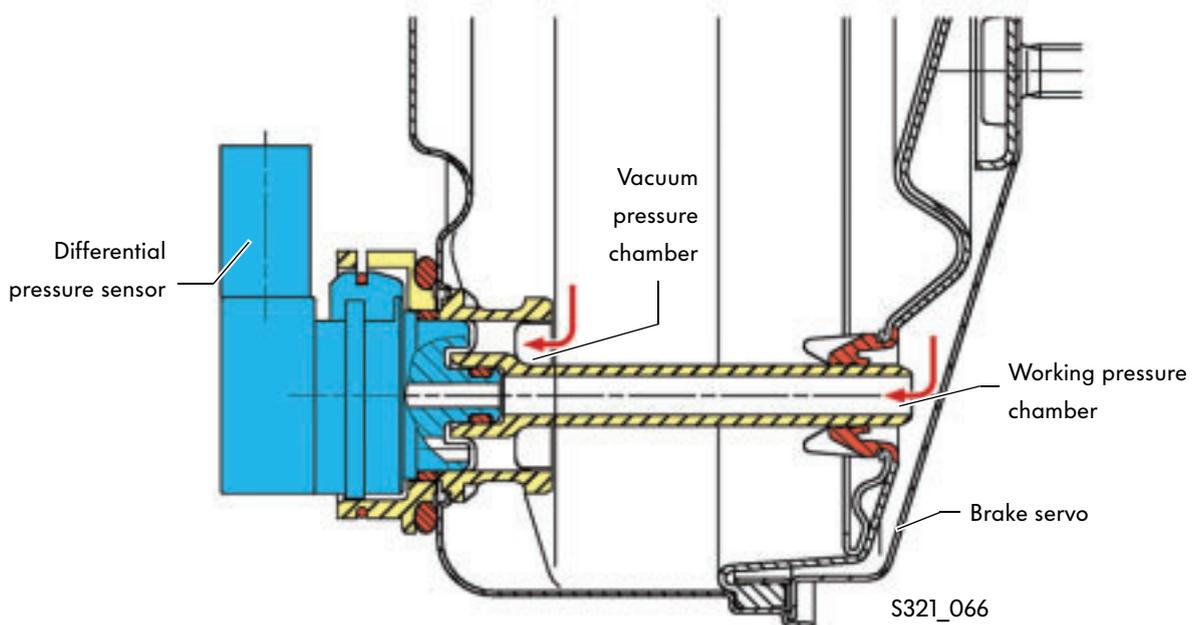

S321_066

Signal application

The differential pressure sensor calculates the difference in brake servo pressure conditions to atmospheric pressure. For OHBS regulation, however, only the pressure in the vacuum pressure chamber is used.


Effects of failure

If the signal from the working pressure chamber should fail, an entry is made in the fault memory. The OHBS function remains intact.

In the event of signal failure in the vacuum pressure chamber, an entry is made in the fault memory and the brake system warning lamp K118 will light up.

The exchange of ESP and CAN data


The ESP control unit exchanges data with other control units of the onboard electrical system.

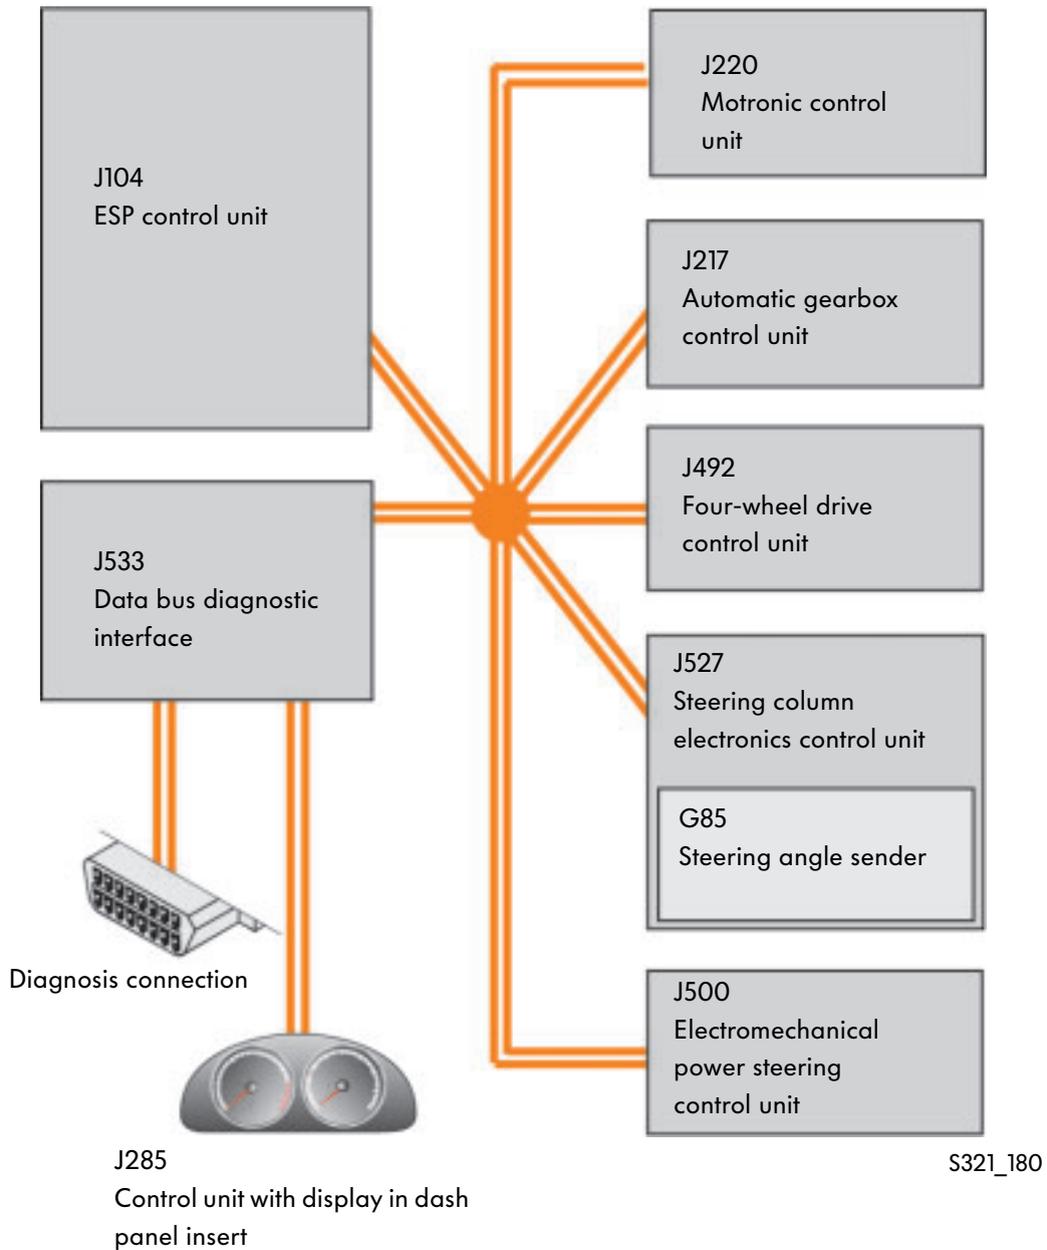

Brake system

The handbrake


The new design means that the amount of space required in the centre console has been minimised. In this way, additional stowage facilities have been created behind the handle. The lever is pressure cast from magnesium. This resulted in a weight saving of more than half that of the steel version.

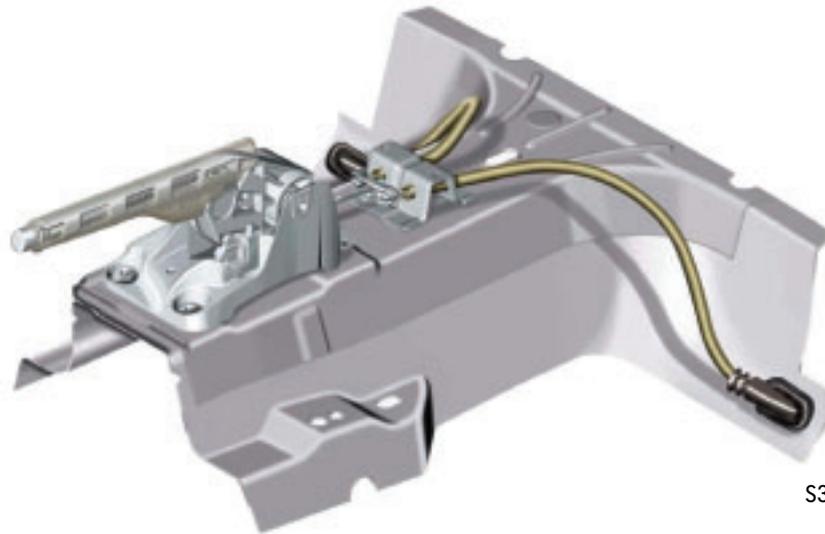


S321_073

The toothed segment is joined positively to the bearing bracket. In the neutral position, the pawl is engaged with the toothed segment and the brake lever is locked.

When the release button is pressed, the pawl is pulled away from the toothed segment and the brake lever is free to move.

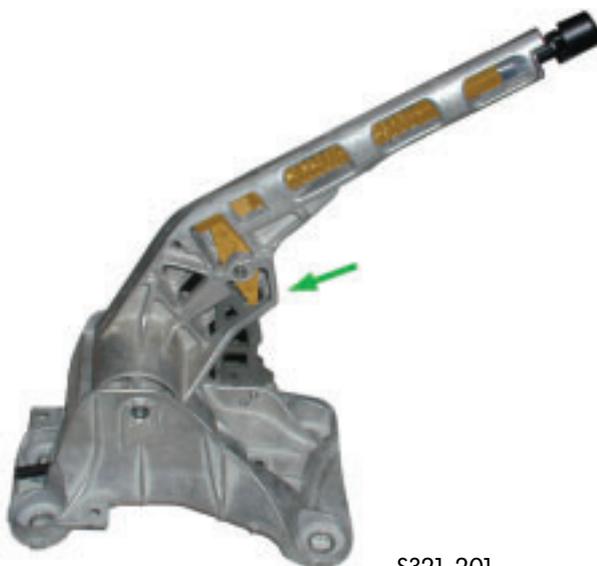

S321_201

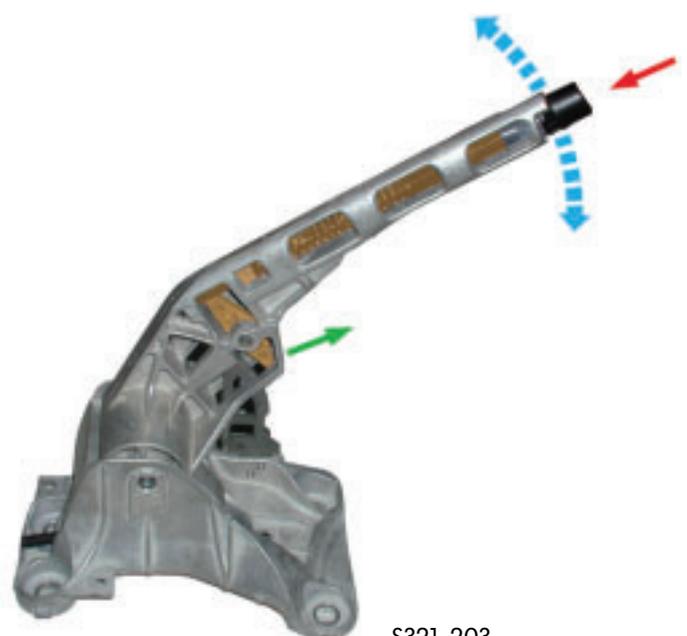

S321_203

The wheels and tyres

Equipment overview

Tyre size	Profile	Rim size	Rim type
195/65/ R 15 91 T	Summer	6 J x 15 offset 47	Steel
195/65/ R 15 91 T/H	Summer	6.5 J x 15 offset 50	Alloy
195/65/ R 15 91 T/H	Winter	6 J x 15 offset 47	Steel
205/60/ R 15 91 H	Summer	6 J x 15 offset 47	Alloy
205/55/ R 16 91 H/V/W	Summer	6.5 J x 16 offset 50	Alloy
205/55/ R 16 91 Q	Winter	6 J x 16 offset 50	Alloy
205/45/ R 17 91 H/V	Summer	7 J x 17 offset 54	Alloy
Spare wheel of emergency type T125/70/ R 18 Spare wheel of conventional type or Tirefit	-	3.5 J x 18	-



Tyre monitoring system

The tyre monitoring system is a software module in the ABS control unit. It detects slow punctures and gradual tyre pressure loss at the wheel.



More detailed information can be found in self-study programme SSP 319 "The Golf 2004 Electrical system".

Pedal cluster

The pedal cluster

The foot pedal cluster was adapted to the Golf. Accelerator pedal, clutch and brake actuation are of a modular design.



To remove the accelerator pedal module, please use special tool T10238 or T10240.



S321_087

The clutch position sender G476

Fitting location

The clutch position sender is clipped onto the master cylinder. This sender detects when the clutch pedal is actuated.

Signal application

With the clutch pedal actuated,

- the cruise control system is switched off and
- the amount of fuel injected is reduced briefly to prevent gear change jolts.




Clutch pedal with clutch position sender

S321_195

How it works


The master cylinder is attached to the bearing bracket via a bayonet connection.

When the clutch pedal is actuated, the plunger moves the piston in the master cylinder.

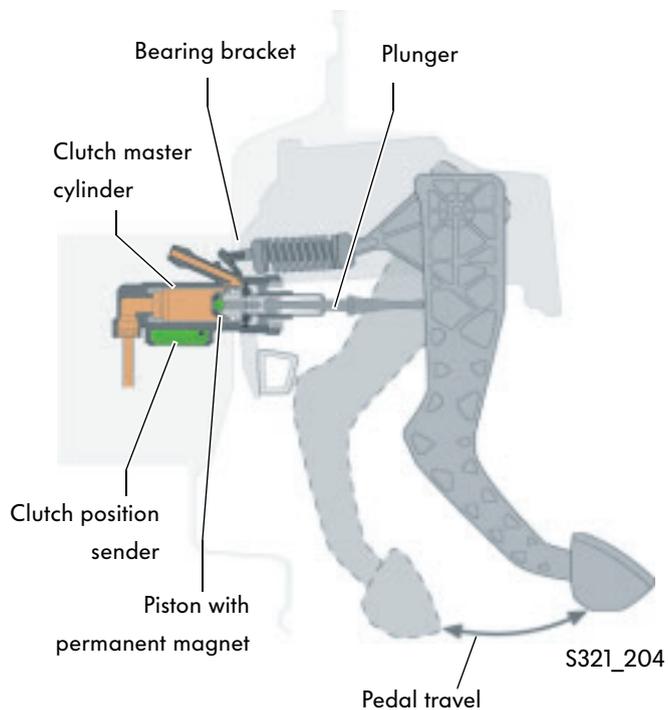


Clutch pedal not pressed

When the clutch pedal is not pressed, the plunger and piston are in the rest position. The electronic evaluation feature of the clutch position sender sends a voltage signal to the engine control unit, which is 2 volts under the supply voltage (battery voltage). The engine control unit thereby detects that the clutch pedal is not pressed.

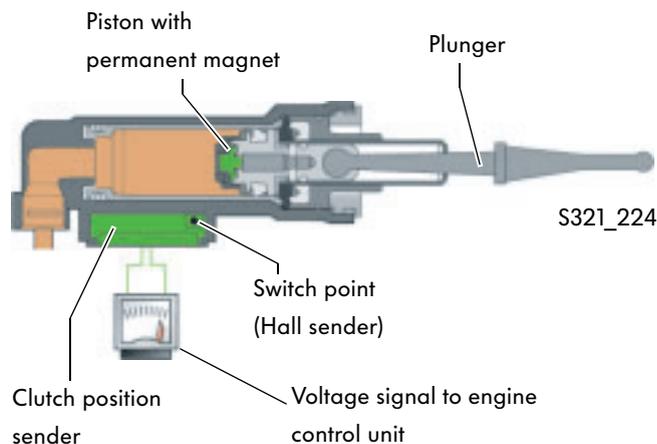

Clutch pedal pressed

When the clutch pedal is pressed, the plunger is pushed together with the piston in the direction of the clutch position sender. At the front end of the piston is a permanent magnet. As soon as the permanent magnet passes over the switch point of the Hall sender, the electronic evaluation feature now only sends a voltage signal of 0 to 2 volts to the engine control unit. In this way, it detects that the clutch pedal is pressed.

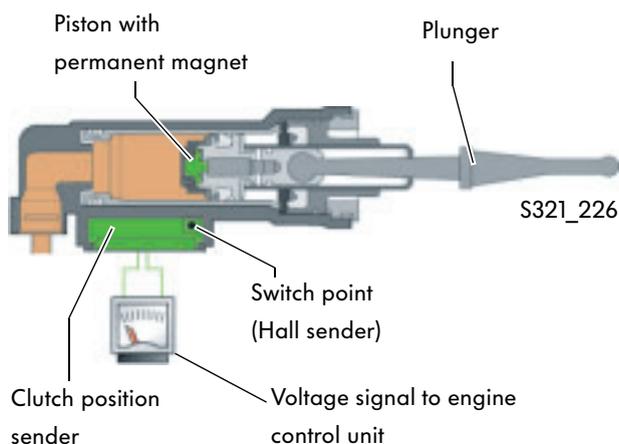

Pedal cluster

The accelerator pedal position senders G79 and G185

Both accelerator pedal position senders are part of the accelerator pedal module and operate without contact as inductive senders.

Advantages

- No wear as senders operate without contact
- No basic setting for kick-down necessary as sender is part of accelerator pedal module, which therefore does not result in tolerances between accelerator pedal and vehicle body

Signal application

The engine control unit uses the accelerator pedal position sender signals to calculate the amount injected.



S321_217

Accelerator pedal with accelerator pedal position senders

Effects of signal failure

In the event of failure in one or both senders, an entry is made in the fault memory and the electronic power control (EPC) warning lamp will be activated.

The convenience features, such as cruise control or engine braking control will be deactivated.

If one sender fails

the system will adopt the idle position. If the second sender is detected at idle within a defined test period, normal driving mode will be authorised again.

If a full throttle input is made, speed will increase only slowly.


If both senders fail

the engine will only run at increased idling speed (max. 1500 rpm) and will no longer respond to input from the accelerator pedal.

Construction

The accelerator pedal module comprises of an accelerator pedal, the pedal end stop, the mechanical components to convert rotational motion and both accelerator pedal position senders G79 and G185.


The senders are joined to a circuit board and each consist of an exciter coil, three receiver coils and electronics for control and evaluation. For reasons of safety, both senders operate independently of each other.

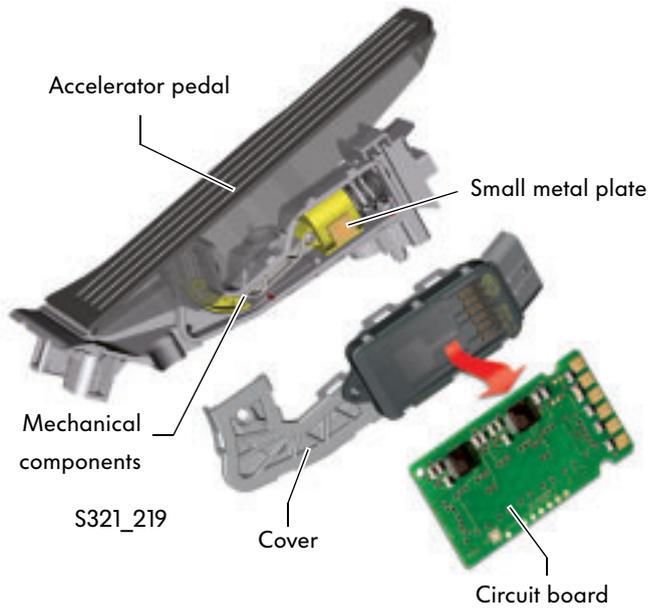


The mechanical components of the accelerator pedal module convert leverage movement of the accelerator pedal into straight line motion.

A small metal plate is attached so that when the accelerator pedal is actuated, it is brought in line just short of the circuit board.

Accelerator pedal not pressed

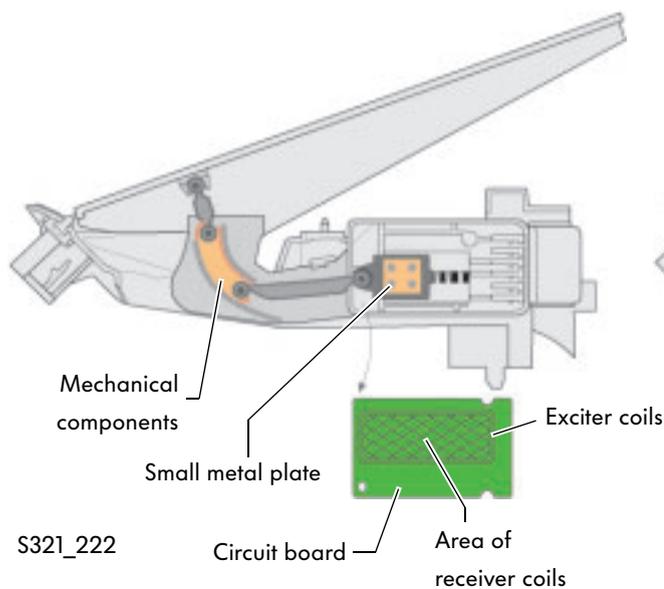

Accelerator pedal pressed

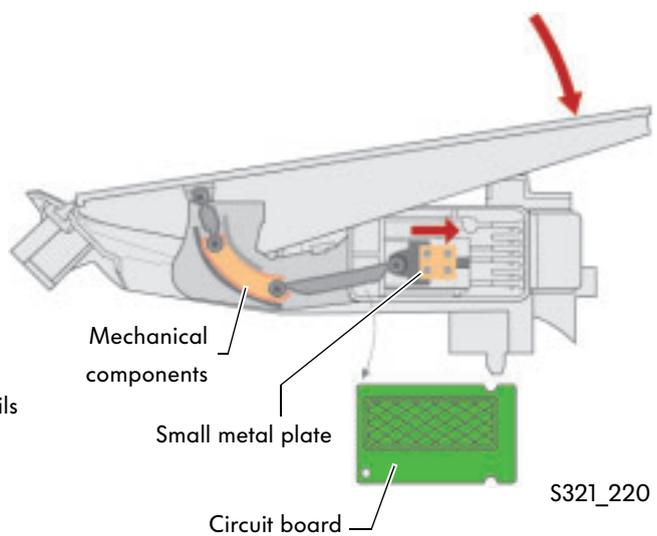

Pedal cluster

How it works

Supplied with 5V of power, the pedal electronics generate a high frequency alternating voltage, which results in the build-up of an electro-magnetic alternating field. This electro-magnetic alternating field affects one moving small metal plate. As this happens, a further electro-magnetic alternating field is generated around the small metal plate.

This location-dependent alternating field influences the receiver coils, inducing a relevant alternating signal there.

The strength of the induced alternating voltage depends largely on the position of the small metal plate. Each position results in a different coverage of the small metal plate to the receiver coils.




In the idle position, the coverage is at its lowest and, therefore, so is the induced alternating voltage.

In the full throttle, i.e. kick-down position on automatic gearboxes, coverage is at its greatest and, therefore, so is the alternating voltage.



Evaluation



The electronics for evaluation set the alternating voltages of the three receiver coils at a common value, they amplify them and bring the output voltages of the three receiver coils together into the equation. Following voltage evaluation, the result is converted into a linear voltage signal and sent on to the engine control unit.

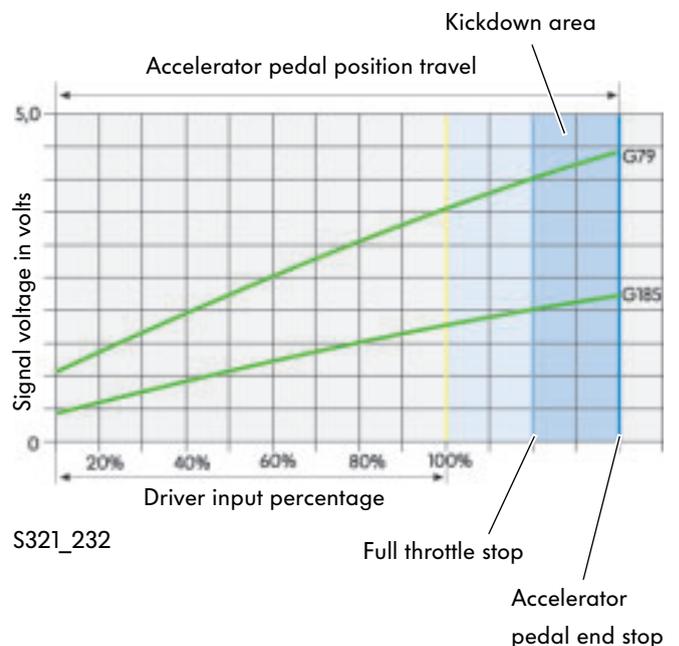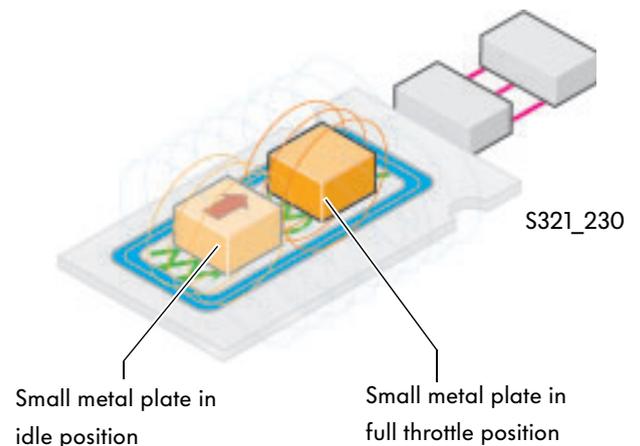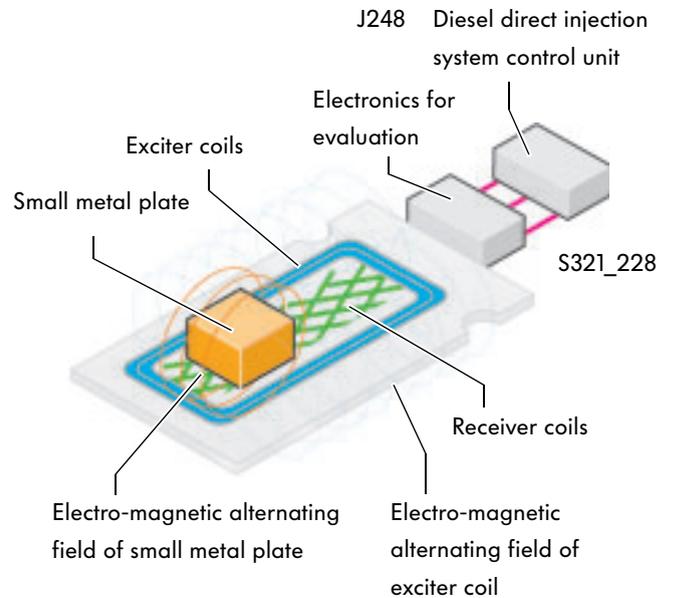

The axle geometry

Installed in the Golf is an adjustable rear axle, e.g. track and camber can be changed independently of each other.

The track is adjusted via an eccentric bolt between lower link and subframe.

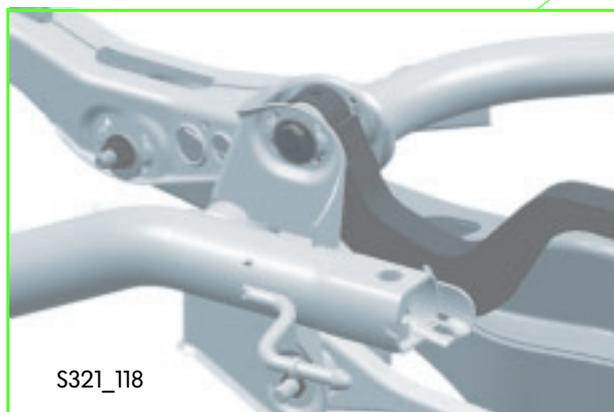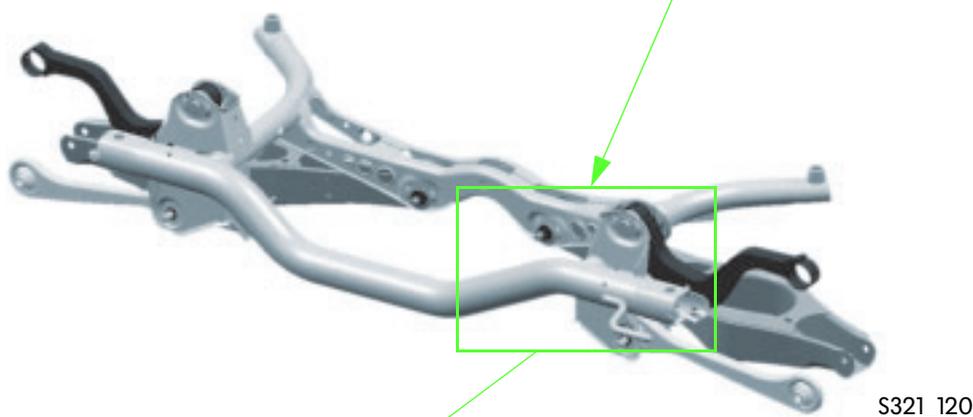

The camber is adjusted via an eccentric bolt. This eccentric bolt joins the link to the subframe.





To adjust the camber, special tools

- shock absorber set T10001 and
- ring spanner T10179 are required.



Special tools

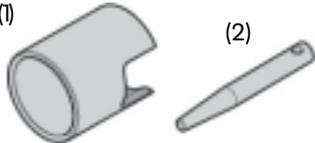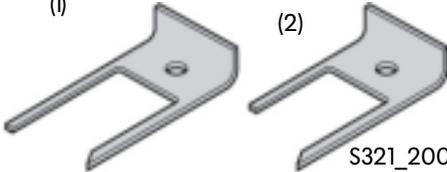Designation	Tool	Application
T10179 Ring spanner	 S321_114	For adjusting camber on rear axle in conjunction with shock absorber set T10001
T10219 (1) Sleeve T10219 (2) Drift	 S321_112	For renewing bonded rubber bush on wishbone of front axle
T10149 Support	 S321_194	For adjusting unladen weight position of bonded rubber bushes on front and rear axle
T10238 (1) T10240 (2)	 S321_200	Release tool for accelerator pedal module, LHD (1) and RHD (2)



1. What is so special about the four link rear axle?

- a) Oversteer is achieved by means of a predefined change in the wheel position during cornering.
- b) Separation of longitudinal and lateral connection.
- c) Cracks and grooves running across the road surface are absorbed easily.

2. Of which components is the electro-mechanical power steering comprised?

- a) Steering column, mechanical steering gear and hydraulic pump.
- b) Steering angle sender, steering column, steering force sender, control unit, electric motor and steering gear.
- c) Steering angle sender, steering column, steering force sender, yaw rate sender and swivel mounting.


3. What is the role of OHB-V?

- a) OHB-V measures the brake pressure applied by the driver via the brake pedal.
- b) The loss of braking assistance, as a result of insufficient vacuum pressure, is balanced out with an active and controlled build-up of brake pressure from the ESP hydraulics.
- c) Due to modifications to the interior of the brake servo, it makes high braking pressures available even at low pedal forces.



1.) b, c; 2.) b; 3.) b

Answers

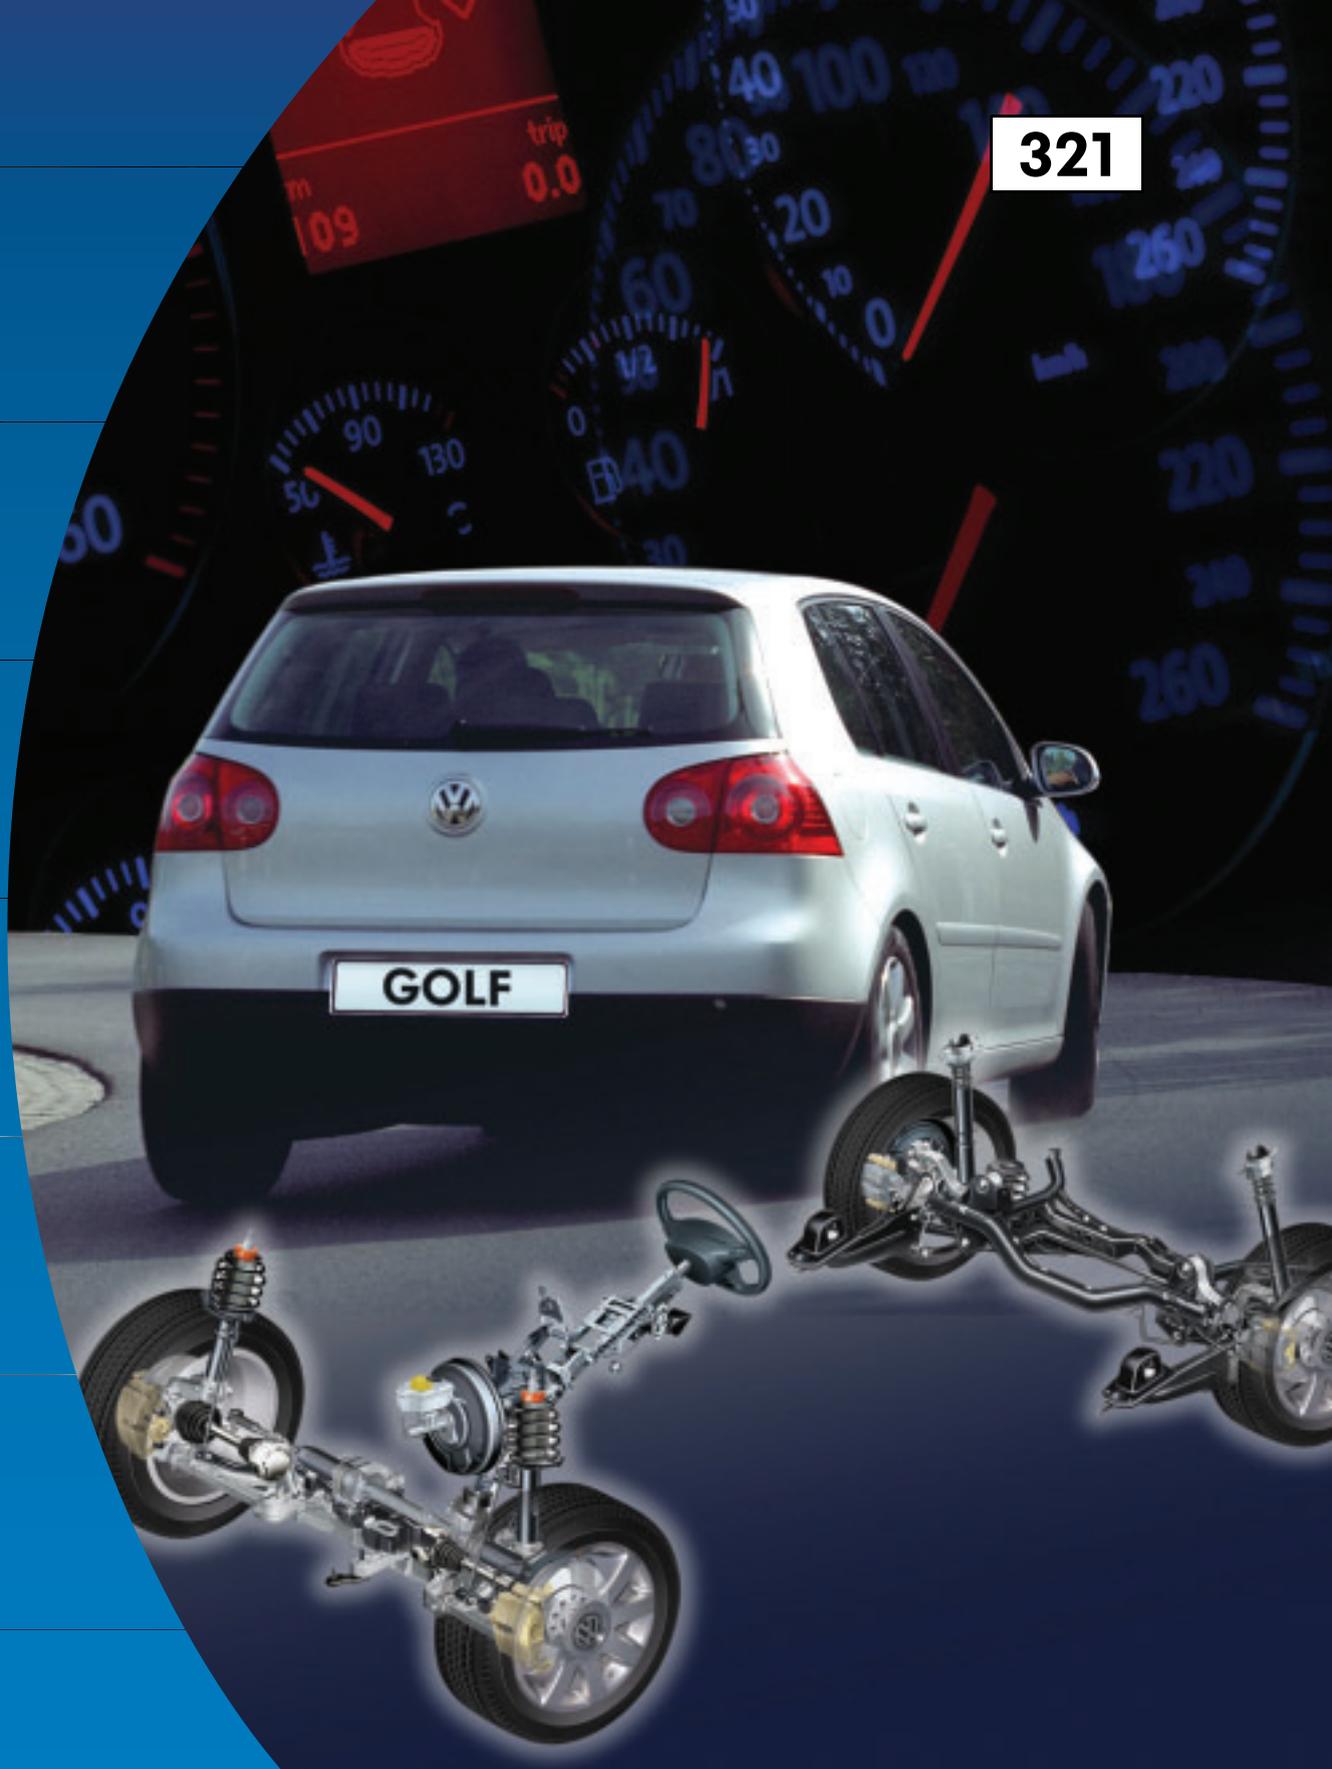

© VOLKSWAGEN AG, Wolfsburg, VK-36 Service Training

All rights and the right to make technical alterations reserved

000.2811.42.20 Technical status 09/03

♻️ This paper was manufactured from pulp that was bleached without the use of chlorine.