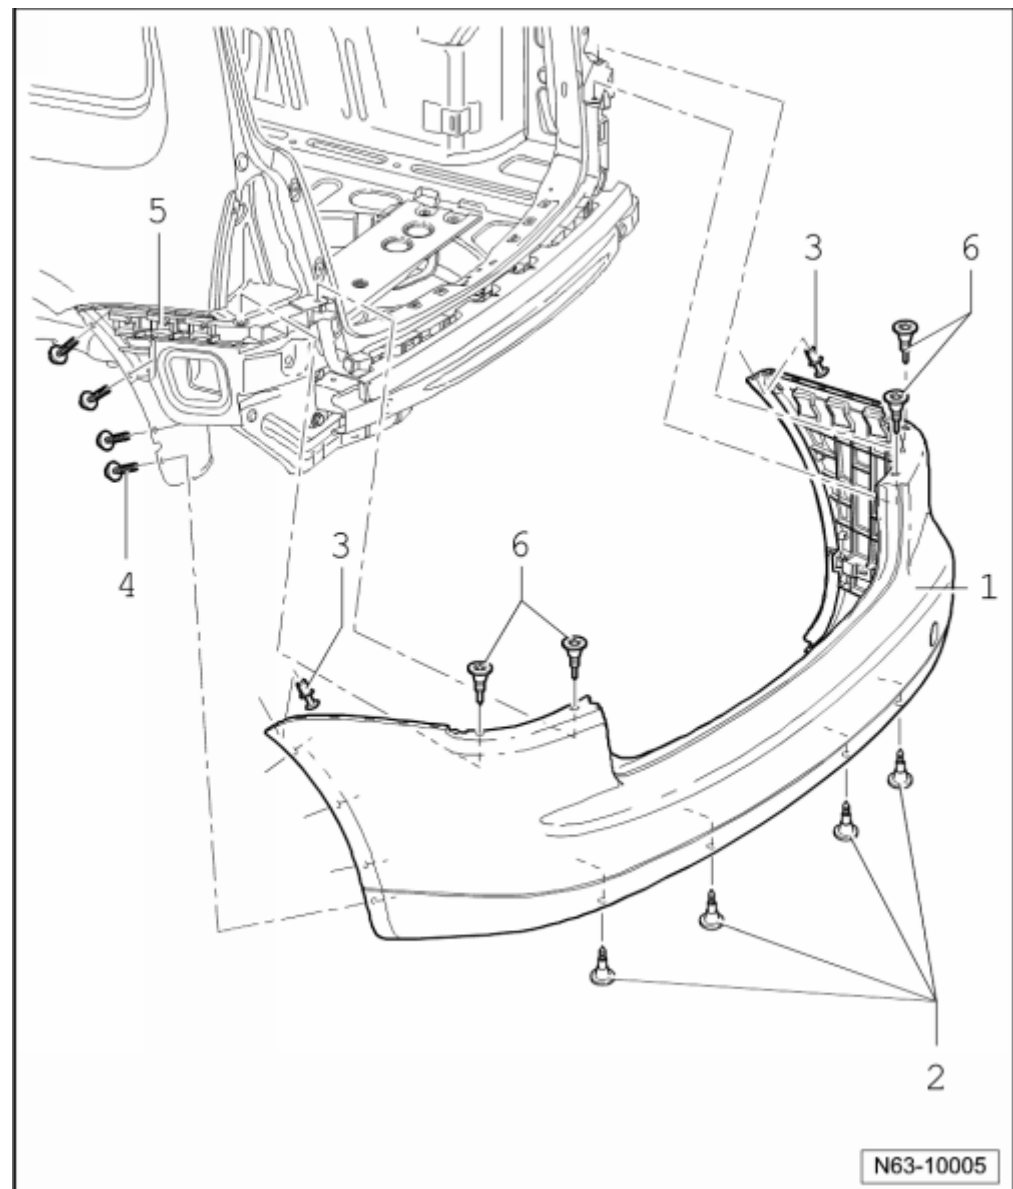


**Removing**

- Remove tail lights → **Electrical system; Rep. Gr.94.**
- Remove bolts -4- in left and right wheel wells.
- Release clips -3- in left and right wheel housings.
- Remove bolts -2- from below.
- Remove upper bolts -6-.
- Disconnect electrical connections from all electrical components.
- With the help of a second mechanic, pull cover parallel out of guides -5-.