



Škoda Superb QUICK REFERENCE GUIDE



You have opted for a Škoda, we thank you for your confidence in us.


This quick reference guide serves as a quick publication with individual control elements. However the quick reference guide does not replace the Owner's manual of your **Superb**.

Equipment which is marked with an * is only standard on certain model versions or only suppliable as optional equipment for certain models.

We wish you pleasant motoring at all times.

Your ŠkodaAuto

CHECK ENGINE OIL LEVEL

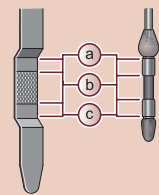

- a The oil must not be topped up.
- b The oil can be topped up.
- c The oil must be topped up.



WARNING!


When replenishing oil, avoid oil dripping onto hot parts of the engine – risk of fire!



Caution!


The oil level must on no account be above the range **a**. Danger of damaging the catalytic converter.

UNLOCKING AND LOCKING

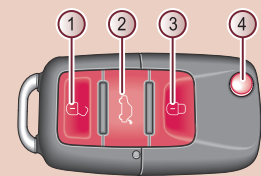


- 1 Unlocking the vehicle
- 2 Unlocking the boot lid
Long press - Opening the small boot lid
- 3 Locking the vehicle
- 4 Folding out-/folding up of the key

Twindoor - small boot lid

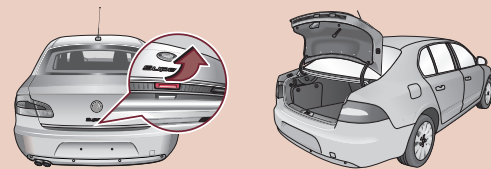

Press on the handle at the underside of the boot lid, the flap is raised automatically.

Twindoor - large boot lid

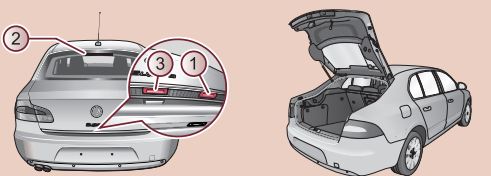

Press on the handle 1 at the underside of the boot lid.

Wait until the brake light 2 flashes twice.


Press on the handle 3 and at the same time raise the boot lid.

Check oil level - Unlocking and Locking

SEATS


Adjusting the front seats

- 1 Adjusting seat in a forward/back direction
- 2 Adjusting height of seat
- 3 Adjusting angle of backrest
- 4 Adjusting lumbar support

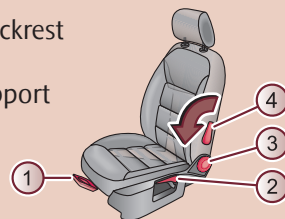


Electric setting of the front seats*

- A Adjusting lumbar support
- B Adjusting seat in a forward/back direction and adjusting height of seat
- C Adjusting the inclination of the backrest

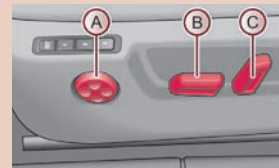

Fold the rear seat backrest forwards


Press the release handle A and fold the rear seat backrest forwards.

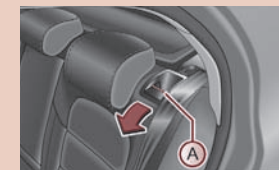

Before folding the rear seats forward, adjust the front seats in such a way that they are not damaged when folding the rear seats forward.

SAFETY


Correct seated position of the driver

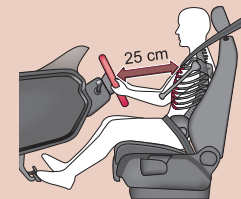

WARNING!

Adjust the steering wheel so that the distance between the steering wheel and your chest is at least 25 cm. If you do not maintain this minimum distance, the airbag system will not be able to provide proper protection - when activated it can become a danger to life!

Adjusting belt height

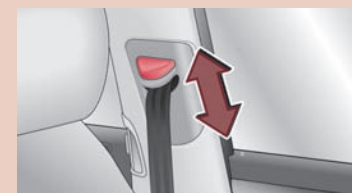

Push the height adjuster upwards or downwards in the desired direction.


After adjusting, pull firmly on the belt to ensure that the height adjuster has correctly locked in place.



WARNING!

Adjust the height of the belt in such a way that the shoulder part of the belt is positioned approximately across the middle of your shoulder, on no account across your neck!

INSTRUMENTS

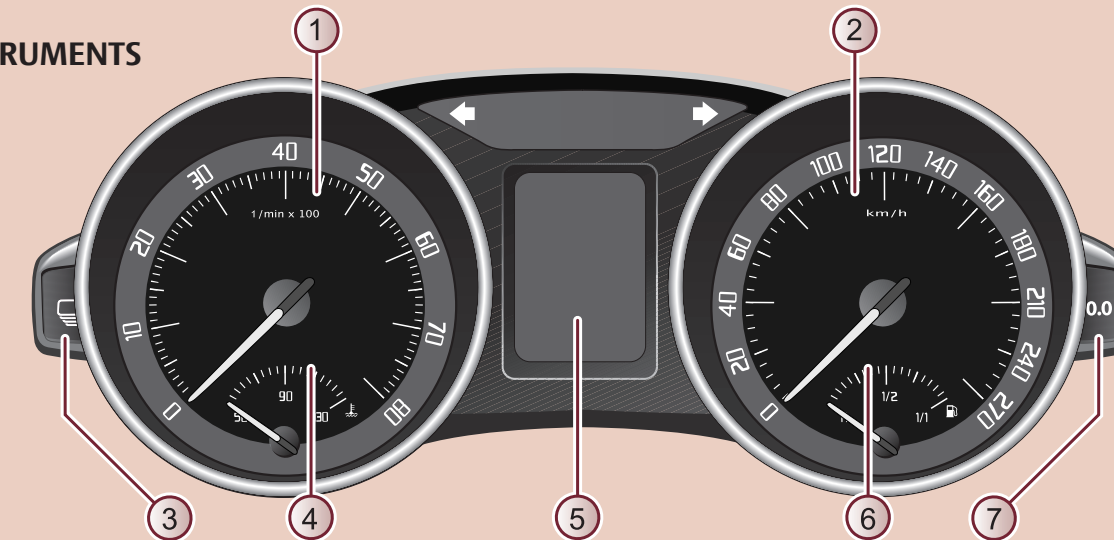

- 1 Rev counter
- 2 Speedometer
- 3 Mode selector switch:
 - Adjusting the hours/minutes
 - Activating/deactivating the second speed in mph*
 - Service Interval - Display of the remaining number of days and the number of kilometers to the next Inspection Service / Reset*
- 4 Coolant temperature gauge*
- 5 Display:
 - with counter for distance driven
 - with Service Interval Display
 - with digital clock
 - with multi-functional indicator
 - with information display*
- 6 Fuel gauge
- 7 Button marked for:
 - Resetting the trip counter for distance driven
 - Activating / deactivating the selected mode


REFUELLING



Opening the fuel filler cap

Press onto the left side of the fuel filler flap.

Unscrew the fuel filler cap anti-clockwise and place it from above on the fuel filler flap.

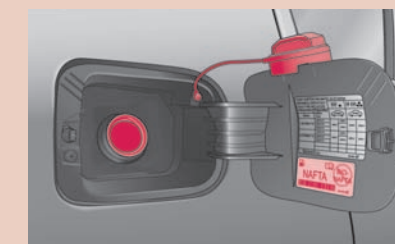


Seats - Safety

Instruments - Refuelling


WARNING LIGHTS

	Turn signal light		Traction control system (TCS)
	Fog lights		Electronic stability programme (ESP)*
	Main beam		Selector lever lock*
	Low beam		Inflation pressure value*
	Rear fog light		Antilock brake system (ABS)
	Speed regulating system*		Bonnet
	Light bulb failure Adaptive front headlights*		Seat belt warning light
	Diesel particle filter* (diesel engine)		Thickness of brake pads*
	Airbag system		Boot lid
	Control system for exhaust		Open door
	Electromechanical power steering - reduced effect		Fluid level in windshield washer system*
	Electromechanical power steering - malfunction		Brake system
	Engine oil pressure		Alternator
	EPC fault light (petrol engine)		Engine oil level
	Glow plug system (diesel engine)		Fuel reserve
	Coolant temperature/coolant level		

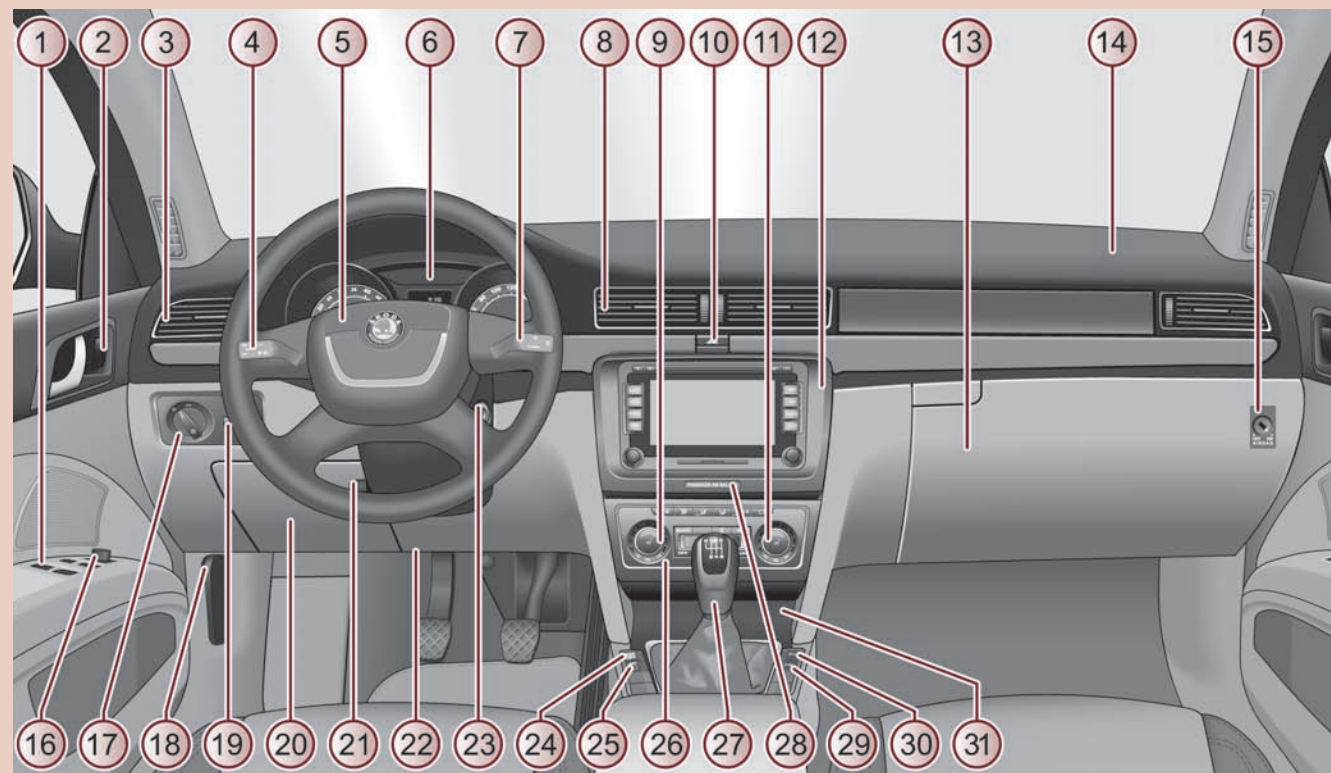


- | | |
|--|---|
| 1 Power window | 17 Light switch |
| 2 Central locking switch | 18 Bonnet release lever |
| 3 Air outlet vents | 19 Instrument illumination and headlight range adjustment control device* |
| 4 Lever for multi-functional switch | 20 Storage compartment on the driver's side |
| 5 Horn, driver's airbag | 21 Lever for steering wheel adjustment |
| 6 Instrument cluster: Instruments and indicator lights | 22 Driver Knee Airbag* |
| 7 Lever for multi-functional switch | 23 Ignition lock |
| 8 Air outlet vents | 24 Button for ESP*, button for TCS |
| 9 Driver seat heater control* | 25 Tyre inflation pressure-control system* |
| 10 Button for hazard warning lights | 26 Operating controls of the air conditioning system |
| 11 Passenger seat heater control* | 27 Gearshift lever, Selector lever* |
| 12 Radio* or navigation* | 28 Indicator light for a switched off front seat passenger airbag* |
| 13 Storage compartment on the front passenger side | 29 Park assist* |
| 14 Front passenger airbag | 30 Front and rear parking aid* |
| 15 Switch for front passenger airbag* | 31 Storage compartment, Ashtray* |

1 POWER WINDOW

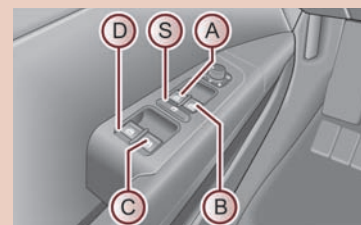


- A Power window driver's door
- B Power window passenger door
- C Power window at the rear on the right
- D Power window at the rear on the left
- S Safety pushbutton

2 CENTRAL LOCKING SWITCH

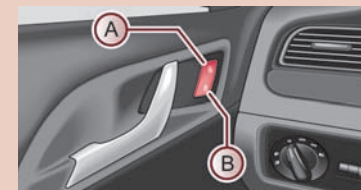


- A Locking all doors and the boot lid
- B Unlocking all doors and the boot lid

16 ELECTRIC EXTERIOR MIRROR ADJUSTMENT

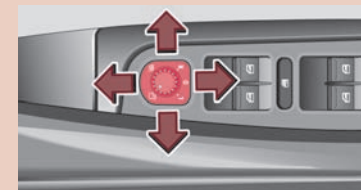

- Exterior mirror heater
- L** Left and right exterior mirror adjustment
- O** Adjustment switched off
- R** Right exterior mirror adjustment
- Mirror adjustment

17 LIGHT SWITCH

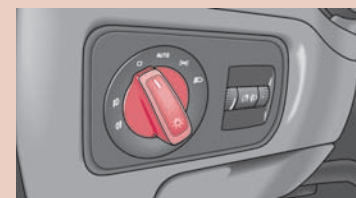


- Low beam and main beam
- Parking light
- AUTO** Automatic driving lights control* / AFS*
- Switching off lights / daytime driving lights*
- Fog lights
- Rear fog light

4 MULTI-FUNCTION SWITCH



- A Turn signal light right
- B Turn signal light left
- C Switching on/off main beam
- D Headlight flasher

7 MULTI-FUNCTION SWITCH

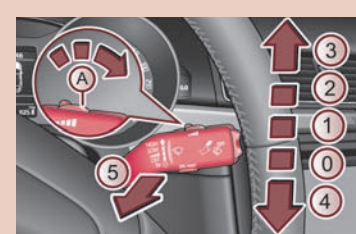

Windshield wiper and wash system

- A Intermittent switch
- 0 Wipers off
- 1 Intermittent wipe
- 2 slow wipe
- 3 fast wipe
- 4 brief wipe of the windshield
- 5 Automatic wipe/wash

29 LEVER FOR ADJUSTABLE STEERING WHEEL




! WARNING!

You must not adjust the steering wheel when the vehicle is moving!

27 SELECTOR LEVER*

Automatic gearbox*

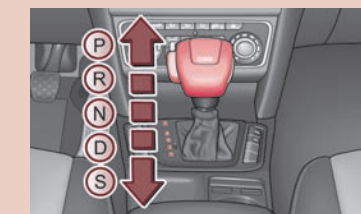

- P Parklock
- R Reverse gear
- N Neutral (idle position)
- D Drive position for driving forward
- S Position for sporty style of driving

Manual gearshift (Tiptronic)


- + Shifting up
- Shifting down

! WARNING!

Never move the selector lever into position R or P when driving - risk of accident!

26 OPERATING CONTROLS OF THE AIR CONDITIONING SYSTEM

Climatic

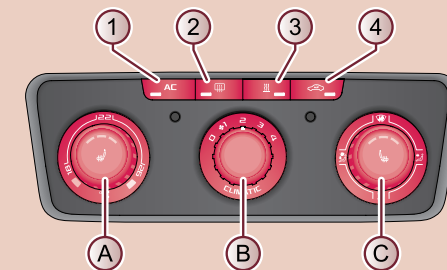

The buttons

- 1 Switching cooling on and off
- 2 Rear window heater
- 3 Engine-independent heating system*
- 4 Recirculated air mode


Control buttons

- A Setting temperature
- B Controlling blower
- C Control for air distribution

! WARNING!

You should not leave the recirculated air mode on over a longer period of time, as the „stale“ air may result in fatigue in the driver and occupants, divert your attention and also cause the windows to mist up. The risk of having an accident increases. Switch the recirculated air mode off as soon as the windows begin misting up.


Climatronic*

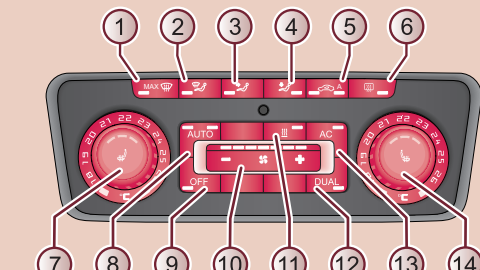

The buttons

- 1 Intensive windscreen defroster
 - 2 Air flow to the windscreen
 - 3 Air flow to the upper body
 - 4 Air flow in the footwell
 - 5 Recirculation mode with air quality sensor*
 - 6 Rear window heater
- #### Buttons / control dial
- 7 Setting of the temperature for the left side
 - 8 Automatic mode
 - 9 Switching off Climatronic
 - 10 Setting of the blower speed
 - 11 Button for direct switching on/off of the auxiliary heating*
 - 12 Switching on/off of the temperature setting in the Dual Mode
 - 13 Switching cooling on and off
 - 14 Setting of the temperature for the right side

18 BONNET RELEASE LEVER

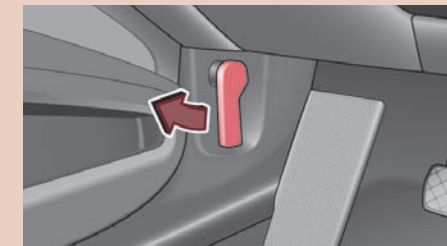

! WARNING!

For safety reasons, the bonnet must always be properly closed when driving. Therefore check each time after closing the bonnet, that it is properly closed!

Škoda Auto pursues a policy of constant product and model development. We trust that you will understand that changes to models in terms of shape, equipment and engineering, may be introduced at any time. It is therefore not possible for legal claims to be made based on the data, illustrations and descriptions contained in this Owner's Manual.

Reprinting, reproduction or translation, either in whole or in part, is not permitted without the written consent of Škoda Auto.

Škoda Auto expressly reserves all rights relating to copyright laws.

We reserve the right to make changes to this document.

Published by: ŠKODA AUTO a.s.

© ŠKODA AUTO a.s. 2008

Zkrácený návod

Superb anglicky 03.08

3T0 012 040 C