


66-32

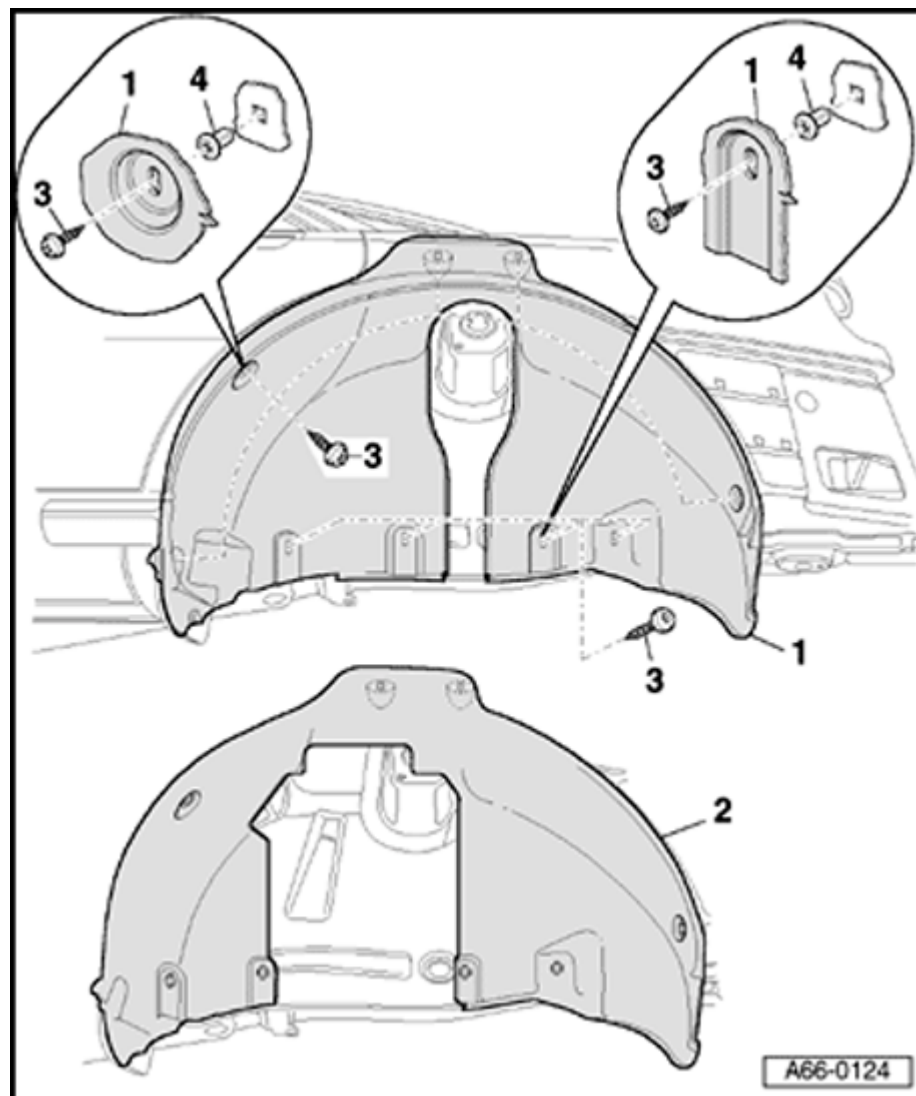

Rear wheelhousing liner, removing and installing

1 - Rear wheelhousing liner (Front Wheel Drive vehicles)

- ◆ Rear wheel removed.
- Remove Phillips-head screws -3- at top (5x) and bottom (4x).
- Remove wheelhousing liner from side panel above suspension strut mount.

2 - Rear wheelhousing liner (Quattro)

- ◆ Removing and installing same as for Front Wheel Drive.

3 - Phillips-head screw

- ◆ 2.5 Nm

4 - Clip